



**Quick Start Guide:  
AS5xxx UCB**

# **AS5xxx Universal Connector Board**



4. Connect the AS5xxx UCB to the NI8451-Box as shown below:

For I2C-Interface

OR

SPI-Interface



5. Connect the NI8451-Box over USB to your PC.
6. Now the setup is ready for evaluation.

To download evaluation sample software for LabVIEW go to: [www.ams.com](http://www.ams.com)