

Vlinx MESP211

Ultra Compact Modbus Gateway





International Headquarters

B&B Electronics Mfg. Co. Inc.
707 Dayton Road
Ottawa, IL 61350 USA
Phone (815) 433-5100 -- General Fax (815) 433-5105
Website: www.bb-elec.com

European Headquarters

B&B Electronics Ltd.
Westlink Commercial Park, Oranmore, Co. Galway, Ireland
Phone +353 91-792444 -- Fax +353 91-792445

Website: www.bb-europe.com

©2013 B&B Electronics Mfg. Co. Inc. No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photography, recording, or any information storage and retrieval system without written consent. Information in this manual is subject to change without notice, and does not represent a commitment on the part of B&B Electronics Mfg. Co. Inc. B&B Electronics Mfg. Co. Inc. shall not be liable for incidental or consequential damages resulting from the furnishing, performance, or use of this manual. All brand names used in this manual are the registered trademarks of their respective owners. The use of trademarks or other designations in this publication is for reference purposes only and does not constitute an endorsement by the trademark holder.

TABLE OF CONTENTS

1. Introduction.....	5
<i>About MESP211 Modbus Gateways</i>	<i>5</i>
<i>MESP211 Model Numbering</i>	<i>5</i>
<i>Model Number</i>	<i>5</i>
<i>Serial Protocol</i>	<i>5</i>
<i>Serial port</i>	<i>5</i>
<i>Ethernet Port</i>	<i>5</i>
<i>MESP211D</i>	<i>5</i>
<i>RS-232/422/485.....</i>	<i>5</i>
<i>DB9M</i>	<i>5</i>
<i>RJ45</i>	<i>5</i>
<i>MESP211T</i>	<i>5</i>
<i>RS-232/422/485.....</i>	<i>5</i>
<i>Removable Terminal Block.....</i>	<i>5</i>
<i>RJ45</i>	<i>5</i>
<i>MESP211 Features.....</i>	<i>6</i>
<i>Configuration Software</i>	<i>6</i>
2. MESP211 Hardware	7
<i>Package Checklist</i>	<i>7</i>
<i>MESP211 Enclosures and Mounting</i>	<i>7</i>
<i>LED Indicators.....</i>	<i>7</i>
<i>Mode Switch</i>	<i>8</i>
<i>Ethernet Connector</i>	<i>9</i>
<i>Serial Port Connectors</i>	<i>9</i>
<i>Power Connector.....</i>	<i>10</i>
<i>Mounting Hardware</i>	<i>10</i>

3. Setup and Connections	11
Connecting the Power Supply	11
Connecting MESP211 Modbus Gateways to Modbus networks	11
Connecting the MESP211	12
Connecting MESP211 Modbus Gateways to a Network	13
MESP211 Configuration Connections	14
Installing Modbus Gateway Manager Software	14
Configuring the MESP211 via the Network Connection	18
Configuring the Modbus Gateway Manager	18
General Settings	23
Configuring the MESP211 on Networks without a DHCP Server	38
Configuring the MESP211 via the Serial Port (Console Mode)	41
MESP211 Operational Connections	43
Using MESP211 Modbus Gateways in Direct IP Mode	43
Initiating a Hardware Reset on the Modbus Gateway	44
Reloading Factory Defaults	44
4. Upgrading Firmware	45
Downloading Firmware Files	46
Uploading the Firmware to the Modbus Gateway	46
5. Diagnostics	47
Testing a Modbus Gateway Connection	48
Monitor Function	49
6. Setup Examples	50
7. Modbus Help	55
Modbus ASCII/RTU Basics	55
Hints and Tips	56
8. Appendices	57
Appendix A: Default Gateway Settings	58
Appendix B: Product Specifications	59

General Specifications 60

Controls, Indicators and Connector Specifications 61

Approvals and Certifications..... 62

Serial Interface Specifications 63

Network Specifications 64

Appendix C: Dimensional Diagram 65

Appendix D: Connector Pinouts 66

MESP211 Serial Port Pinouts..... 66

MESP211 Terminal Block Pinouts 67

1. INTRODUCTION

Thank you for purchasing an MESP211 product. This product has been manufactured to the highest standards of quality and performance to ensure your complete satisfaction.

ABOUT MESP211 MODBUS GATEWAYS

MESP211 Modbus Gateways connect Modbus networks (RS-232, RS-422 or RS-485) to Ethernet networks, allowing the Modbus network to become a node on the network. The serial ports can be accessed over a LAN/WAN using Direct IP Mode connections. MESP211 Modbus Gateways feature 10BaseT or 100BaseTX copper network media options, depending upon the model.

MESP211 Modbus Gateways are built for use in industrial environments, featuring an IP30 slim line panel mountable case with DIN rail mounting option. They accept 10 – 30 VDC power and feature barrel jack power connectors. An external power supply is included.

MESP211 MODEL NUMBERING

Model Number	Serial Protocol	Serial port	Ethernet Port
MESP211D	RS-232/422/485	DB9M	RJ45
MESP211T	RS-232/422/485	Removable Terminal Block	RJ45

MESP211 FEATURES

- DB9M and pluggable terminal block serial port connector options
- Software selectable as RS-232, RS-422 or RS-485 2- or 4-wire
- Configuration of Ethernet and serial port settings using software
- Configuration can be done via network, web page or direct serial connection
- Slim line panel mountable case with DIN rail mount option
- Accepts 10 – 30 VDC power
- 10/100 Mbps Ethernet with Auto Selection, Auto MDI/MDIX
- LAN and WAN Communications
- Modbus TCP Client or Modbus TCP Server - configurable
- Firmware Upload for future revisions/upgrades
- Software Support - Windows XP (32/64 bit), 2003 Server (32/64 bit), Vista (32/64 bit), 2008 Server (32/64 bit), Windows 7 (32/64 bit), Windows 8 (32/64 bit), Windows Server 2012

CONFIGURATION SOFTWARE

The configuration software enables you to find connected Modbus Gateways, configure them, upgrade Modbus Gateway firmware, and save/load configuration files. It features a graphical user interface (GUI) that is convenient and easy to use.

2. MESP211 HARDWARE

MESP211 Modbus Gateways are enclosed in panel mountable cases with DIN rail mount options and feature LED indicators, power, Ethernet and serial connectors and a recessed Reset/Mode switch.

PACKAGE CHECKLIST

MESP211 Modbus Gateways are shipped with the following items included:

- **MESP211** Modbus Gateway Module
- Quick Start Guide
- CD with configuration software
- Power supply

MESP211 ENCLOSURES AND MOUNTING

All **MESP211** models are built into similar enclosures. Modules are panel mountable with DIN rail options.

LED INDICATORS

MESP211 Modbus Gateways have a **Power LED**, a **Ready LED** and **Data LEDs**.

LEDs		
Ready	OFF	Power is not connected
	ON	Power is connected
Ethernet	OFF	No Ethernet link
	ON	Ethernet link
	BLINK	Ethernet activity
Serial	ON	Serial Port is available
	BLINK	Data is present on serial port

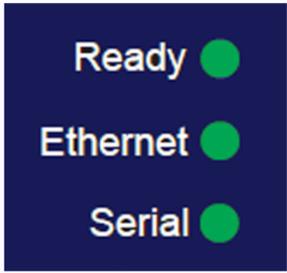


Figure 1. LEDs

MODE SWITCH

A recessed momentary reset switch is located on the front left side of the enclosure. To activate the switch, insert a small plastic tool through the hole in the enclosure and press gently.

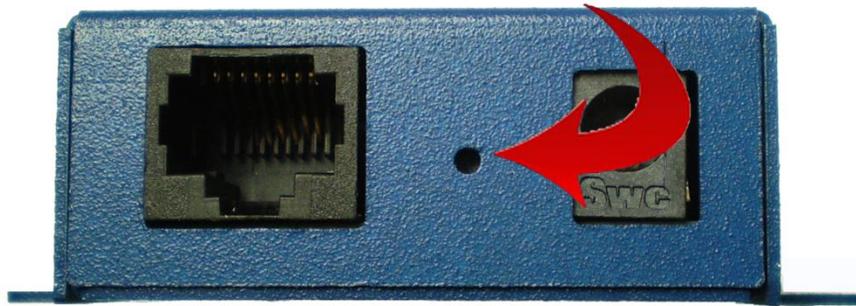


Figure 2. *Mode/Reset Switch*

The Mode/Reset switch can be used to:

- Initiate a Hardware Reset
- Enter Console Mode
- Reload factory defaults

Note: Refer to Section 3: Modbus Gateway Setup and Connections for more information on using the Mode switch.

ETHERNET CONNECTOR

Modbus Gateway models using 10BaseT/100BaseTX network connections use an RJ45 receptacle. The Modbus Gateway is connected to a standard Ethernet network drop using a straight-through RJ45 (male) Ethernet cable.

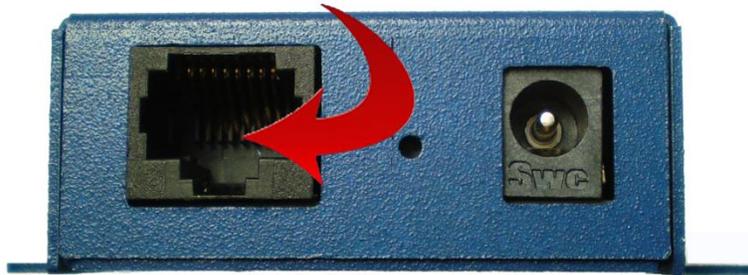


Figure 3. *Ethernet Connector.*

Note: Refer to Appendix D for connection pin-outs.

SERIAL PORT CONNECTORS

The MESP211 has either a DB9M serial connector or a 5-position terminal block connector.



Figure 4. *DB-9 Serial Port Connector (MESP211D)*



Figure 5. *Five-Position Pluggable Terminal Block (MESP211T)*

POWER CONNECTOR

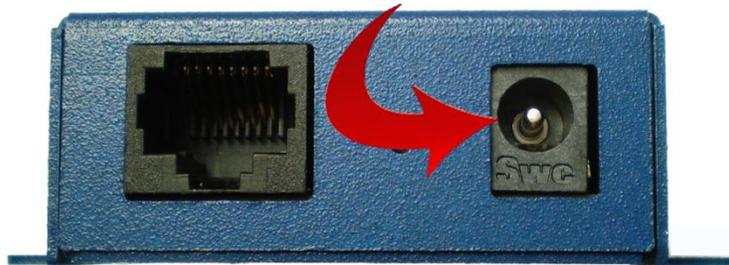


Figure 6. Power Connection

MOUNTING HARDWARE

An optional DIN rail mount adapter is available from B&B Electronics.



Figure 7. DIN Clip for Modbus Gateway Module.

3. SETUP AND CONNECTIONS

Note: In this section devices to be connected to the Modbus Gateway's serial connection are simply referred to as the "Modbus network".

CONNECTING THE POWER SUPPLY

Connect a DC power supply to Modbus Gateway. Acceptable voltages are between 10 VDC and 30 VDC. The power supply must be capable of supplying 4 watts.

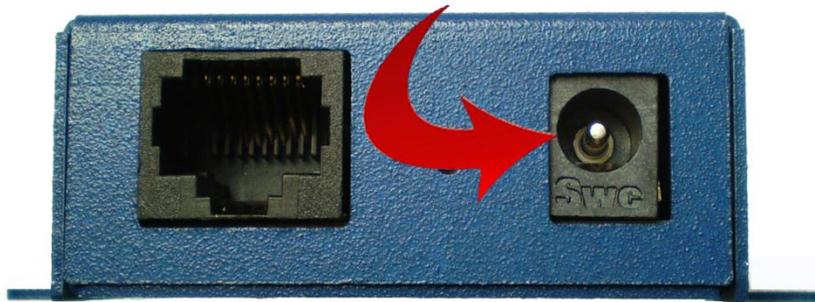


Figure 8. MESP211 Power Connection

Figure 9.

CONNECTING MESP211 MODBUS GATEWAYS TO MODBUS NETWORKS

MESP211 Modbus Gateways can be configured to connect to Modbus networks using RS-232, RS-422, RS-485 2-wire or RS-485 4-wire.

For the MESP211D

RS-232 connections support eight signal lines plus Signal Ground. Signals are single ended and referenced to Ground. Default communications parameters are 9600, 8, N, 1. RS-422/485 connections are also supported with the DB9 connector.

For the MESP211T

RS-422 4-wire connections support two signal pairs: RXA(-), RXB(+) and TXA(-), TXB(+), plus GND. The data lines are differential pairs (A & B) in which the B line is positive relative to the A line in the idle (mark) state. Ground provides a common mode reference. RS-232 connections are also supported with the terminal block connector.

RS-485 connections support 2-wire or 4-wire operation.

When configured for **4-wire operation** the connection supports two signal pairs: RXA(-), RXB(+) and TXA(-), TXB(+), plus GND. This makes full-duplex operation possible. The data

lines are differential pairs (A & B) in which the B line is positive relative to the A line in the idle (mark) state. Ground provides a common mode reference.

When configured for **2-wire operation** the connection supports one signal pair: Data B(+) and Data A(-) signal channels using half-duplex operation. The data lines are differential with the Data B line positive relative to Data A in the idle (mark) state. Ground provides a common mode reference.

CONNECTING THE MESP211

The **MESP211** has either a DB9M serial connector or a 5-position terminal block connector.

If you select RS-232 mode when you configure the Modbus Gateway, you must connect the Modbus serial network to the Modbus Gateway via a serial cable. The MESP211 is a DTE. If the Modbus network is a DTE, use a null modem (cross-over) cable. If the Modbus network is a DCE, use a straight-through cable. DTE and DCE ports are complementary, the **Output** signals on a DTE port are **Inputs** to a DCE port, and **Output** signals on a DCE port are **Inputs** to a DTE port. The signal names match each other and connect pin for pin. Signal flow is in the direction of the arrows

Modem Cable - Straight Cable DB9 to DB9

DTE Device (Computer)		DB9	DTE to DCE Connections	DCE Device (Modem)	DB9
Pin#	DB9	RS-232 Signal Names	Signal Direction	Pin#	DB9
#1	Carrier Detector (DCD)	CD	←	#1	Carrier Detector (DCD)
#2	Receive Data (Rx)	RD	←	#2	Receive Data (Rx)
#3	Transmit Data (Tx)	TD	→	#3	Transmit Data (Tx)
#4	Data Terminal Ready	DTR	→	#4	Data Terminal Ready
#5	Signal Ground/Common (SG)	GND	→	#5	Signal Ground/Common (SG)
#6	Data Set Ready	DSR	←	#6	Data Set Ready
#7	Request to Send	RTS	→	#7	Request to Send
#8	Clear to Send	CTS	←	#8	Clear to Send
Soldered to DB9 Metal - Shield		FGND	→	Soldered to DB9 Metal - Shield	

Figure 10. MESP211 Serial Connections

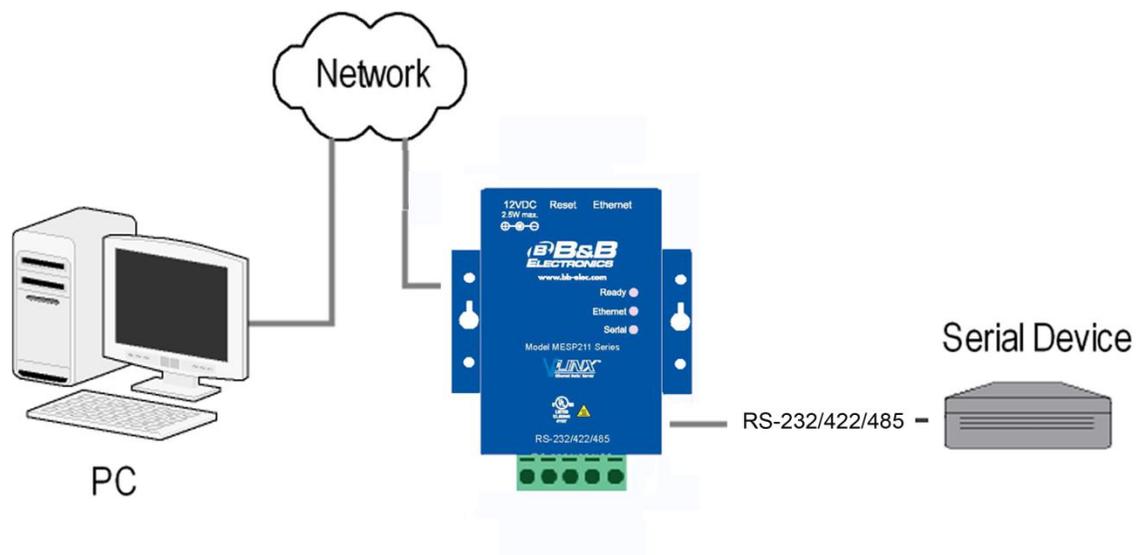


Figure 11. MESP211 Connections

CONNECTING MESP211 MODBUS GATEWAYS TO A NETWORK

Network Connection (10BaseT/100BaseTX)

When connecting a Modbus Gateway equipped with a 10BaseT/100BaseTX network connection (RJ45 connector) a standard network cable is connected from the Modbus Gateway to a network drop. PCs configuring and/or communicating with the Modbus Gateway are also connected to the network.

MESP211 CONFIGURATION CONNECTIONS

MESP211 Modbus Gateways can be configured over the network or via a serial port.

INSTALLING MODBUS GATEWAY MANAGER SOFTWARE

1. The Modbus Gateway Manager Software is contained on the CD which is packaged with the product. Insert the CD into your CD ROM drive. The software should automatically begin the installation process. If AUTO RUN is disabled on your computer, open the CD drive and double click on the executable file.
 - a. The following screen will be displayed on your computer.



Figure 12. *Modbus Gateway Manager Installation Welcome Screen*

- b. Click "Next." The License Agreement Screen will be displayed on your computer.

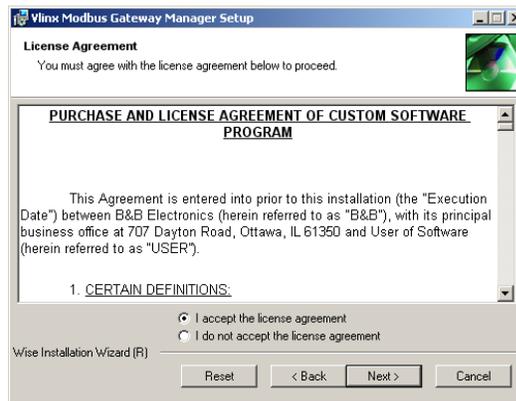


Figure 13. Modbus License Acceptance Screen

- c. Click "Next." The User Information Screen will be displayed on your computer. Enter your name and organization (optional) and select if the software will be accessible to your account or anyone who uses the computer.

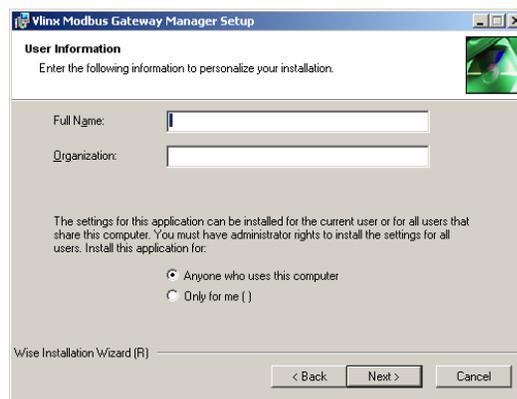


Figure 14. User Information Screen

- d. Click "Next." The Destination Folder Screen will be displayed on your computer. The default directory is:
C:\Program Files\B&B Electronics\Vlinx\Modbus Gateway Manager

If desired, you can select another location by pressing the "Browse" button.

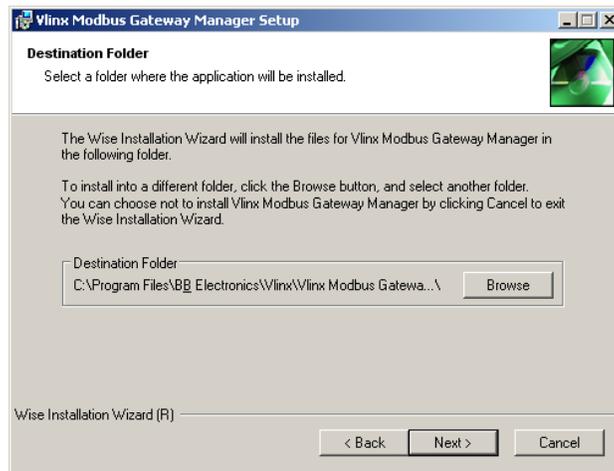


Figure 15. *Destination Folder Screen*

- e. Click "Next." The Ready to Install Application Screen will be displayed on your computer. You can select the "Back" button to change destination folder.

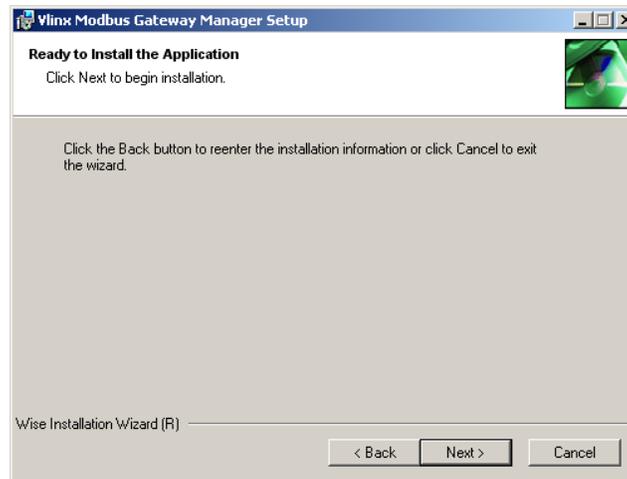


Figure 16. *Ready to Install Application Screen*

- f. Click "Next." The software will begin installing.

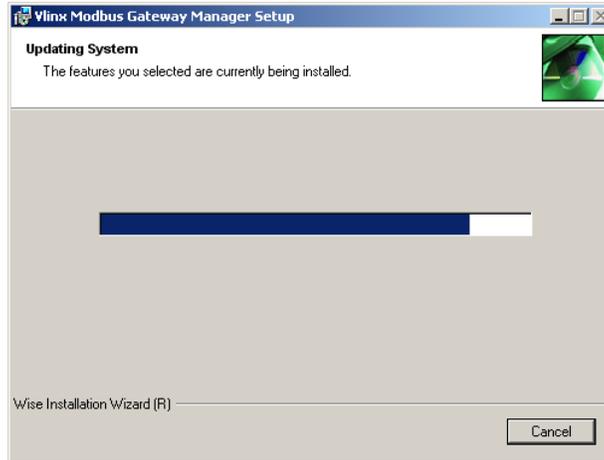


Figure 17. Software Installing Screen

- g. Click "Next." The Installation Complete screen will be displayed on your computer. Click "Finish" to finish the installation.



Figure 18. Installation Complete Screen

CONFIGURING THE MESP211 VIA THE NETWORK CONNECTION

When configuring via the network, either Modbus Gateway Manager software or the web interface can be used.

CONFIGURING THE MODBUS GATEWAY MANAGER

MESP211 Modbus Gateways can be configured over the network Modbus Gateway Manager software running on a PC.

To open Modbus Gateway Manager:

1. From the Desktop, click Start → Programs → B&B Electronics → Vlinx → Vlinx Modbus Gateway Manager → Modbus Gateway Manager. An alternate method is to double click the shortcut installed on the desktop.

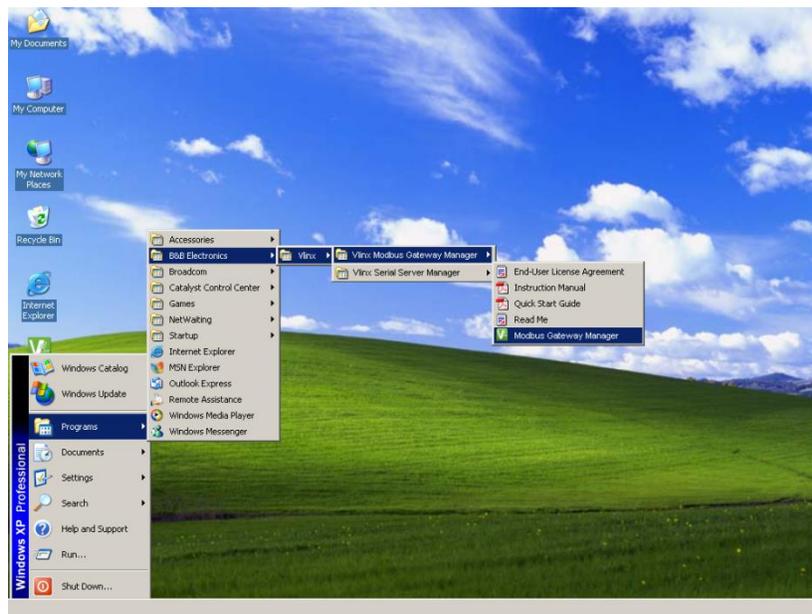


Figure 19. Opening Vlinx Modbus Gateway Manager



Figure 20. Vlinx Modbus Gateway Manager Shortcut Icon

The Vlinx Modbus Gateway Manager Device Discovery window appears.

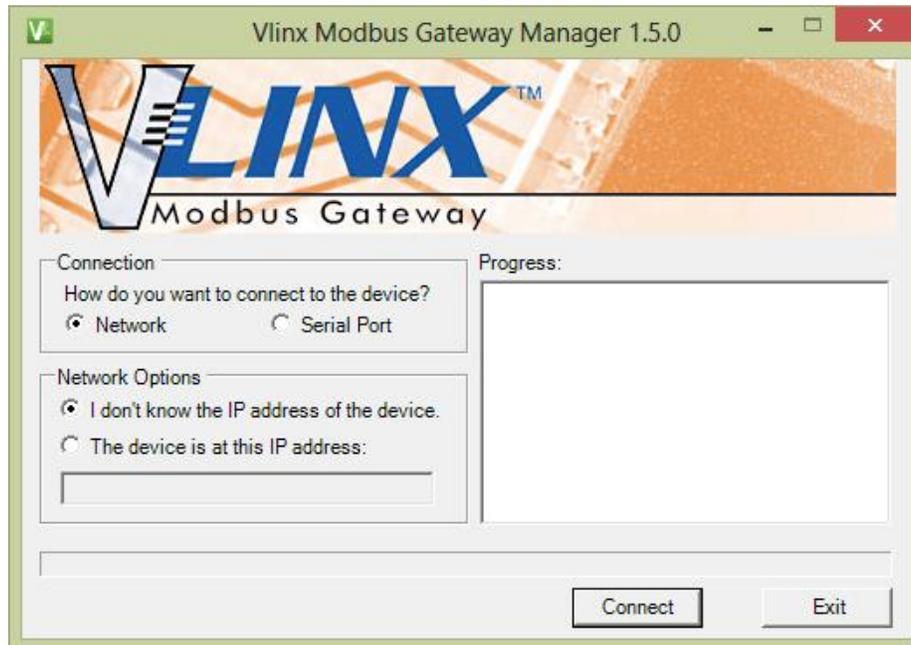


Figure 21. Modbus Gateway Manager Discovery Window

If you do not know the IP address, check the "Network" and "I don't know the IP address of this device" selections and press the "Connect Button." The software will discover any MESP211 Gateways on the network. The configuration manager screen will be displayed on your computer. All available devices will be listed on the top portion of this screen. If you know the IP address, you may select "The Device is located at this IP address" and input the address in the box provided.

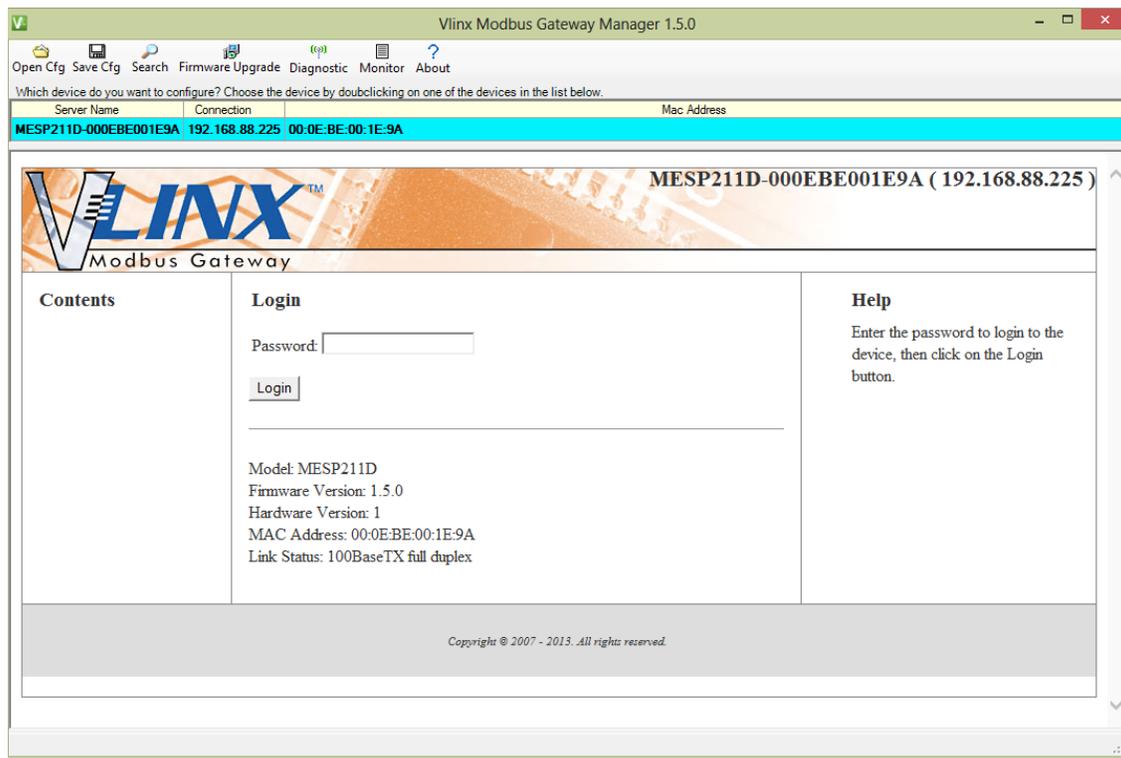


Figure 22. Configuration Manager Screen

2. All Modbus Gateways on the network will be displayed in the top portion of the screen. To select a gateway, simply click the appropriate device on the top portion of the screen.
 - a. The main portion of the screen displays the Model, Firmware version, Hardware Version, MAC Address, and Link Status. The IP Address is also displayed on the top portion of the screen and title graphic area.
3. There is no password unless you choose to enter one. The default password is no password at all. Click the "Login" button. The "General" Settings screen will be displayed on your computer.

Vlinx Modbus Manager Settings Screen Overview

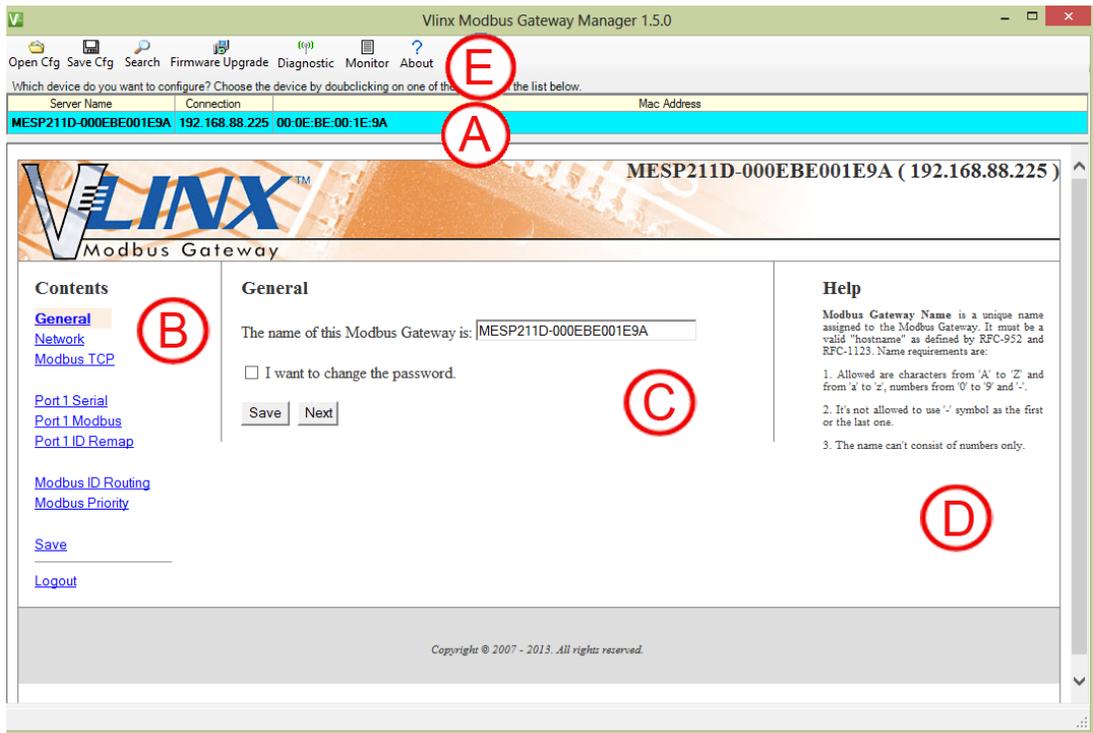


Figure 23. Settings Screen Overview

- a. This area shows Modbus Gateways available on the network.
- b. This area is used to skip directly to the specific configuration screen you need to access. An alternate method of accessing the configuration screens is to use the “Next” button in area C.
- c. This area contains dialog boxes specific the configuration screen.
 - 1. Note: Any configuration changes you make need to be saved using the “Save” button.**
- d. This area contains helpful information about the configuration screen you are currently on.
- e. This area contains shortcuts to specific functions.
 1. “Open” allows you to load a previously saved configuration file into your Modbus Gateway.
 2. “Save” allows you to save your configuration to a file. This should not be confused with the “Save” button described in 6.c above.
 3. “Search” allows you to search for Modbus Gateways on the network.

4. "Upgrade" allows you to upgrade your Modbus Gateway's firmware.
5. "Diagnostic" allows you to test a configured Modbus Gateway. See Section 5.
6. "Monitor" allows you to monitor a Modbus Gateway. See Section 5.
7. "About" contains information about your Modbus Gateway.

Note: If an unacceptable value or character is entered on any of the configuration screens, the background turns yellow. You will be unable to leave this screen as long as the yellow background is present. When an acceptable value is entered, the yellow background goes away and you can leave the screen.

GENERAL SETTINGS

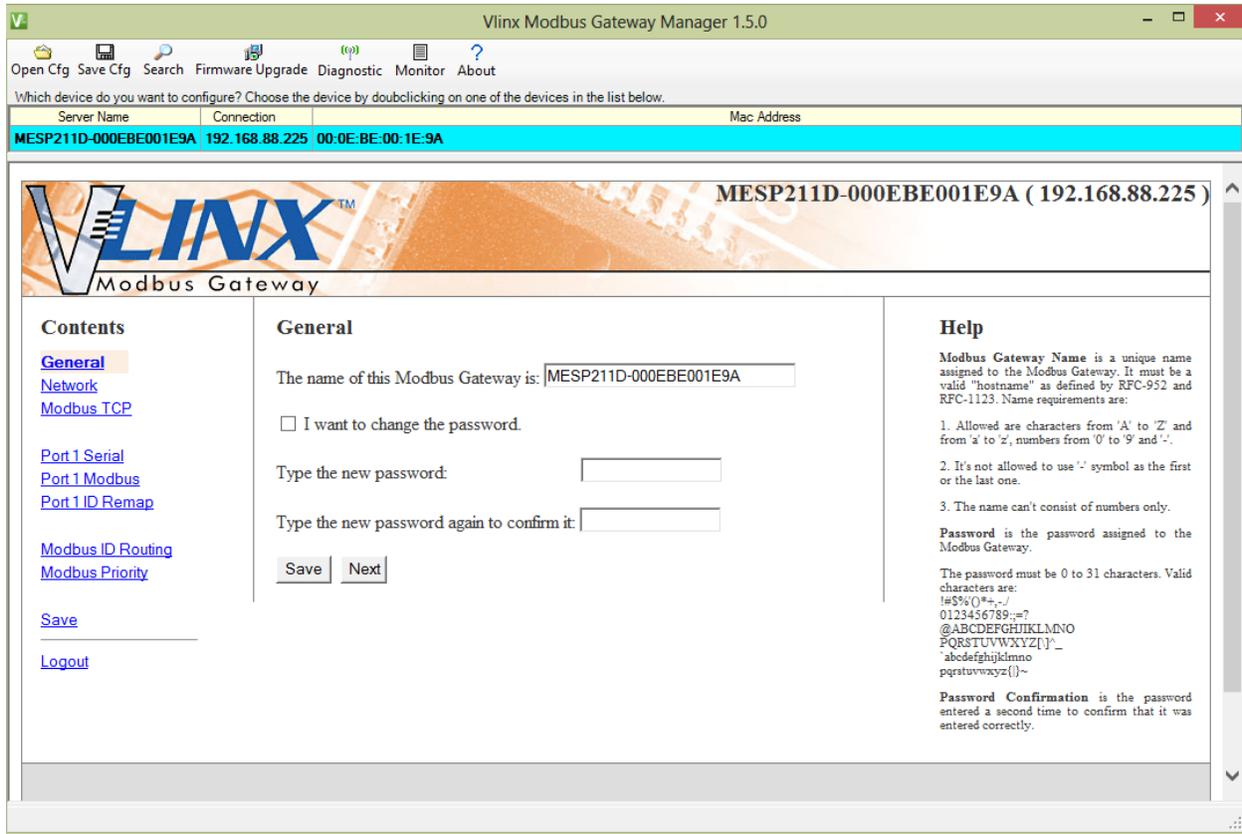


Figure 24. General Settings Screen

- a. This screen enables you to assign a unique name to the gateway. This allows you to easily identify a particular gateway when multiple devices are used on the same network. To change the name, type a new name in the "The Name of this Modbus Gateway is" box. The name must be a valid "hostname" as defined by RFC-952 and RFC-1123. Allowed characters are A to Z, a to z, 0 to 9 and "-". The "-" symbol cannot be the first or last character. The name cannot consist of numbers only. **To save the new name click the "Save" button.**
- b. You can also change the gateway's password on this screen. To do this, check the "I want to change the password" box. New password entry boxes will appear on the screen.

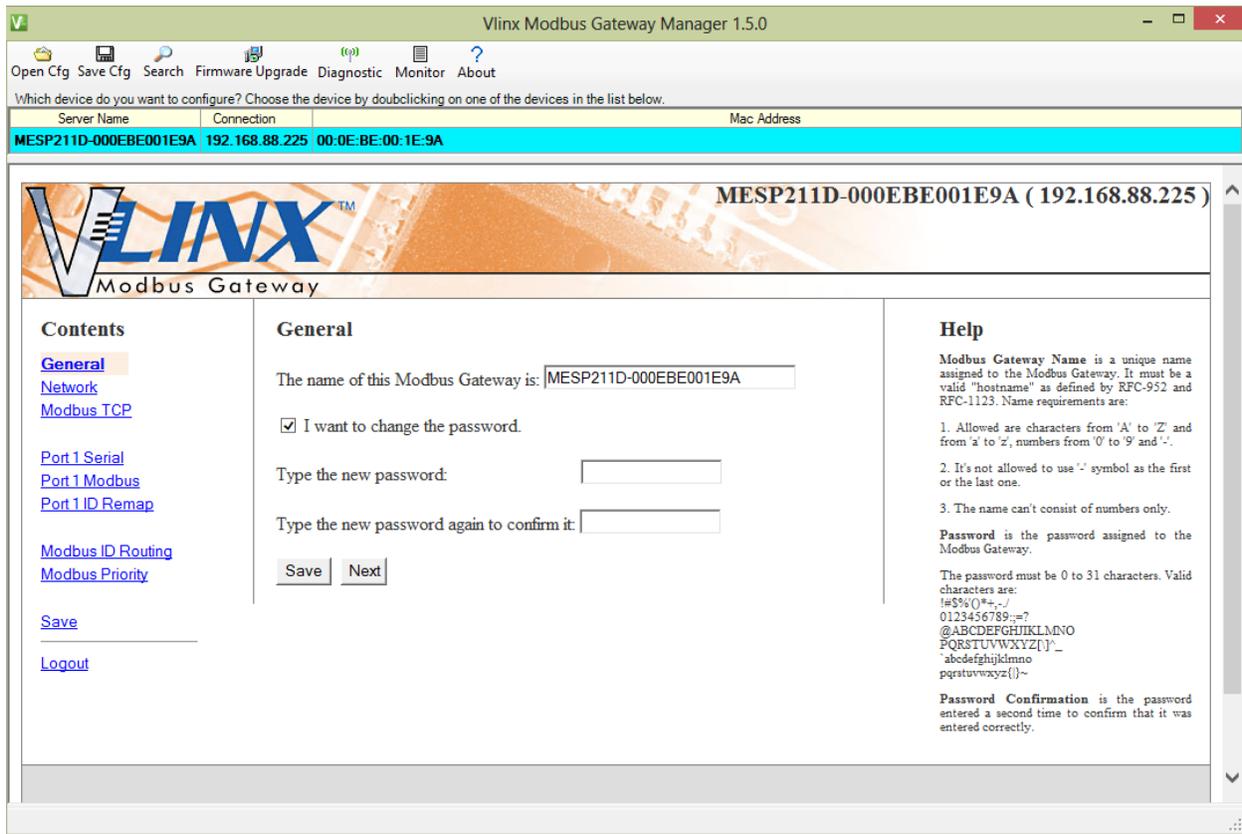


Figure 25. Changing The Password

- c. Type your new password in the "Type the new password box." Verify the password by typing it again in the box provided. **To save the new password click the "Save" button.**
4. Network Settings
 - a. To get to the Network Settings Screen you can either click the "Next Button" or click on the "Network" link on the left side of the screen.

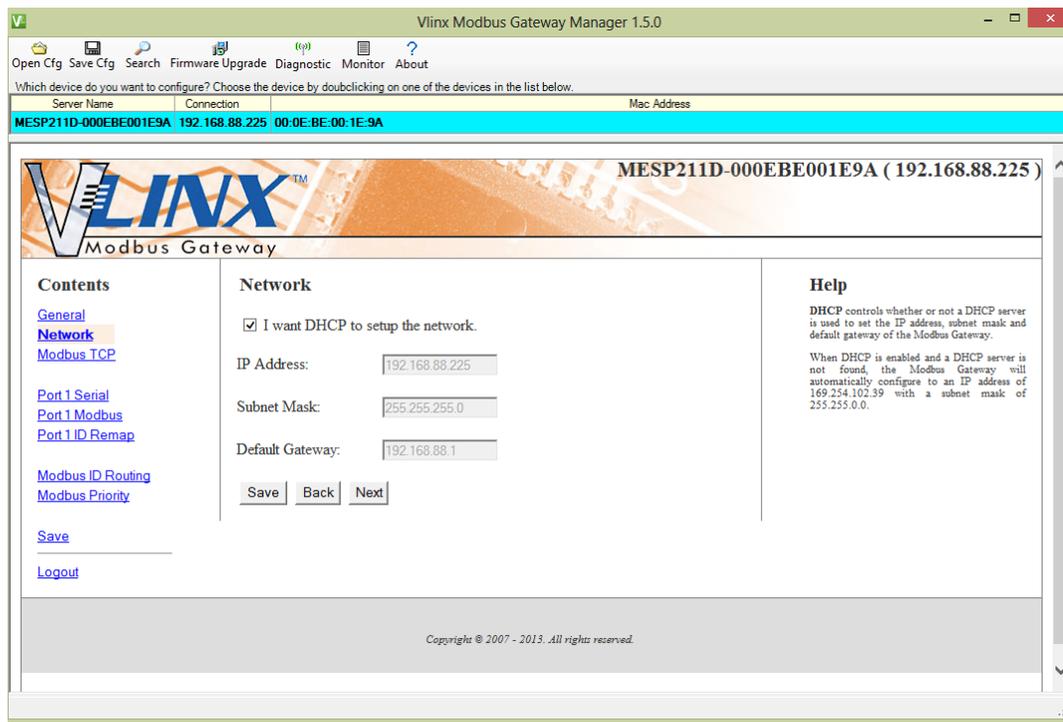


Figure 26. Network Settings Screen (DHCP Selected)

- b. The default network configuration is to receive an IP address assignment from a DHCP server. **DHCP** controls whether or not a DHCP server is used to set the IP address, subnet mask and default gateway of the Modbus Gateway. When DHCP option is enabled but the DHCP server is not found, the Modbus Gateway will automatically configure IP address 169.254.102.39 with a subnet mask 255.255.0.0
- c. To configure your Modbus Gateway without using a DHCP Server, uncheck the "I want DHCP to setup the network" box. You will need to know the IP Address, Subnet Mask, and Default Gateway.

IP Address field contains static internet protocol address of the Modbus Gateway.

Subnet Mask field contains mask that is used to define sub network.

For Class A network (IP addresses 0.0.0.0 through 127.255.255.255), the default subnet mask is 255.0.0.0.

For Class B network (IP addresses 128.0.0.0 through 191.255.255.255), the default subnet mask is 255.255.0.0.

For Class C network (IP addresses 192.0.0.0 through 223.255.255.255), the default subnet mask is 255.255.255.0.

For Class D network (IP addresses 224.0.0.0 through 239.255.255.255) and Class E network (IP addresses 240.0.0.0 through 255.255.255.255), the subnet mask is ignored.

Default Gateway field contains default route to remote networks.

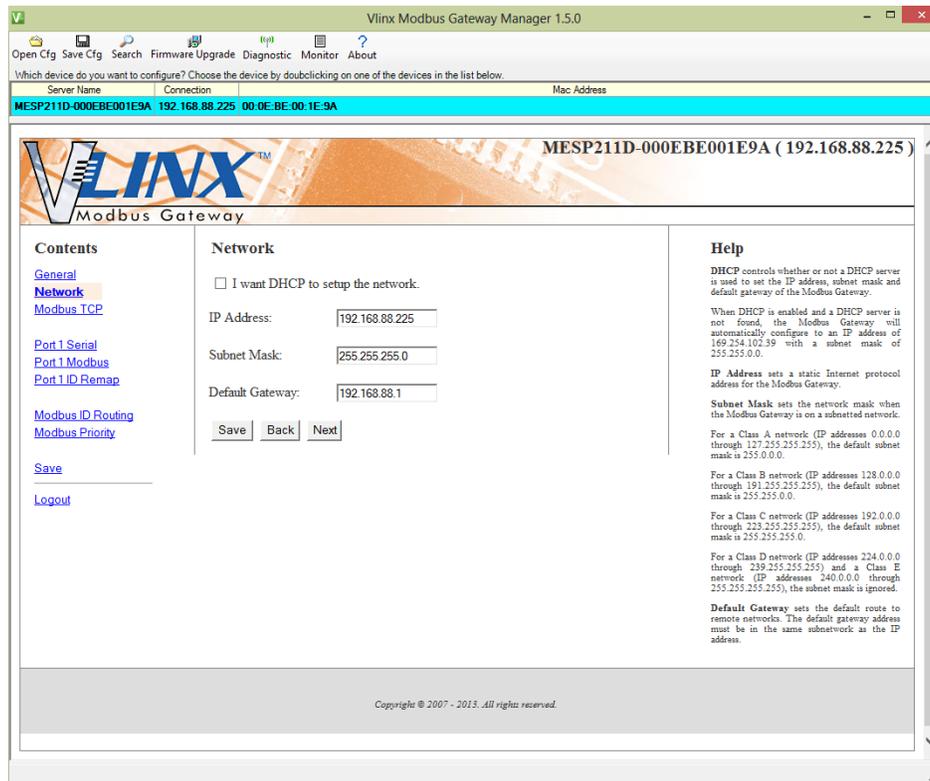


Figure 27. Network Settings Screen (DHCP not Selected)

- d. More information about assigning an IP address without using a DHCP Server is contained in the section Configuring the MESP211 on Networks without a DHCP Server.
 - e. Save changes by Clicking the "Save" button.
5. Modbus TCP Settings
- a. To access this screen, click the "Next Button" or click on the Modbus TCP link on the left side of the screen.
 - b. This screen allows you Modbus TCP client and server settings.

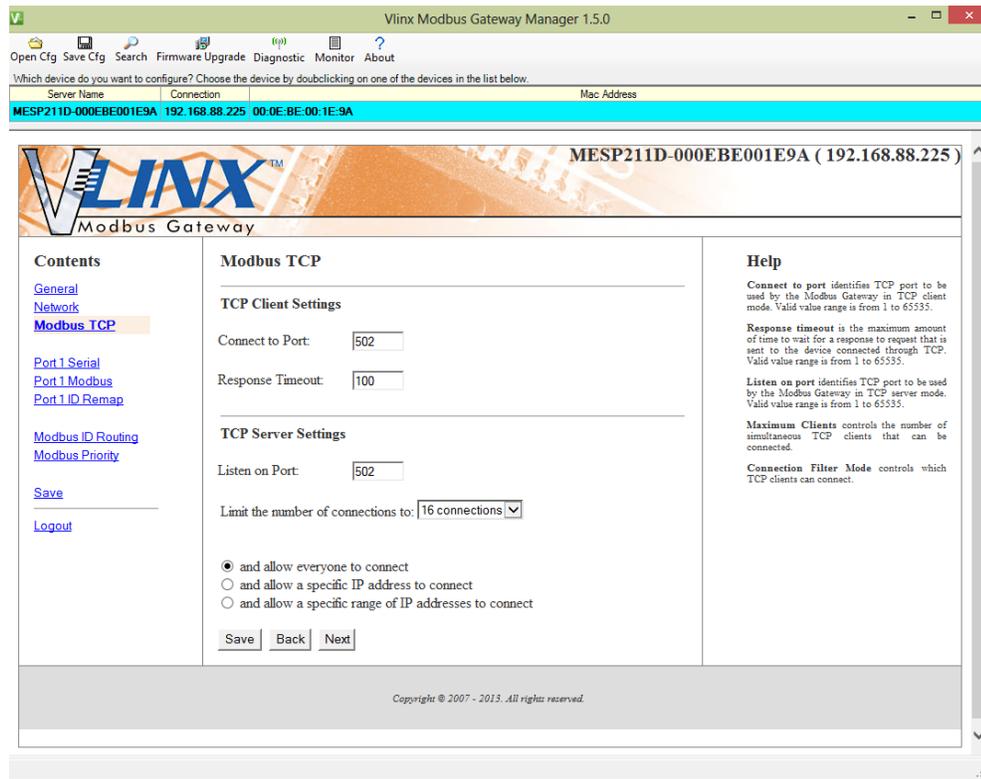


Figure 28. Modbus TCP Settings Screen

c. TCP Client Settings

1. Connect to Port identifies TCP port to be used by the Modbus Gateway in TCP client mode. Valid value range is from 1 to 65535.
2. Response Timeout is the maximum amount of time to wait for a response to a request that is sent to the device connected through TCP. Valid value range is from 1 to 65535.
3. Save settings by clicking the "Save" button.

b. TCP Server Settings

1. Listen on Port identifies TCP port to be used by the Modbus Gateway in TCP server mode. Valid value range is from 1 to 65535.
2. "Limit the number of connections to" pull down box allows you to control the number of simultaneous TCP clients that can be connected. Choices are 1 through 16.

3. Connection Filter Mode controls which TCP clients are able to connect. The default is: "and allow everyone to connect."
 - a. You can select "allow specific IP addresses to connect." This filter is limited to 4 IP addresses.
 - b. You can select "a specific range of IP addresses to connect." This filter is limited to 4 IP address ranges

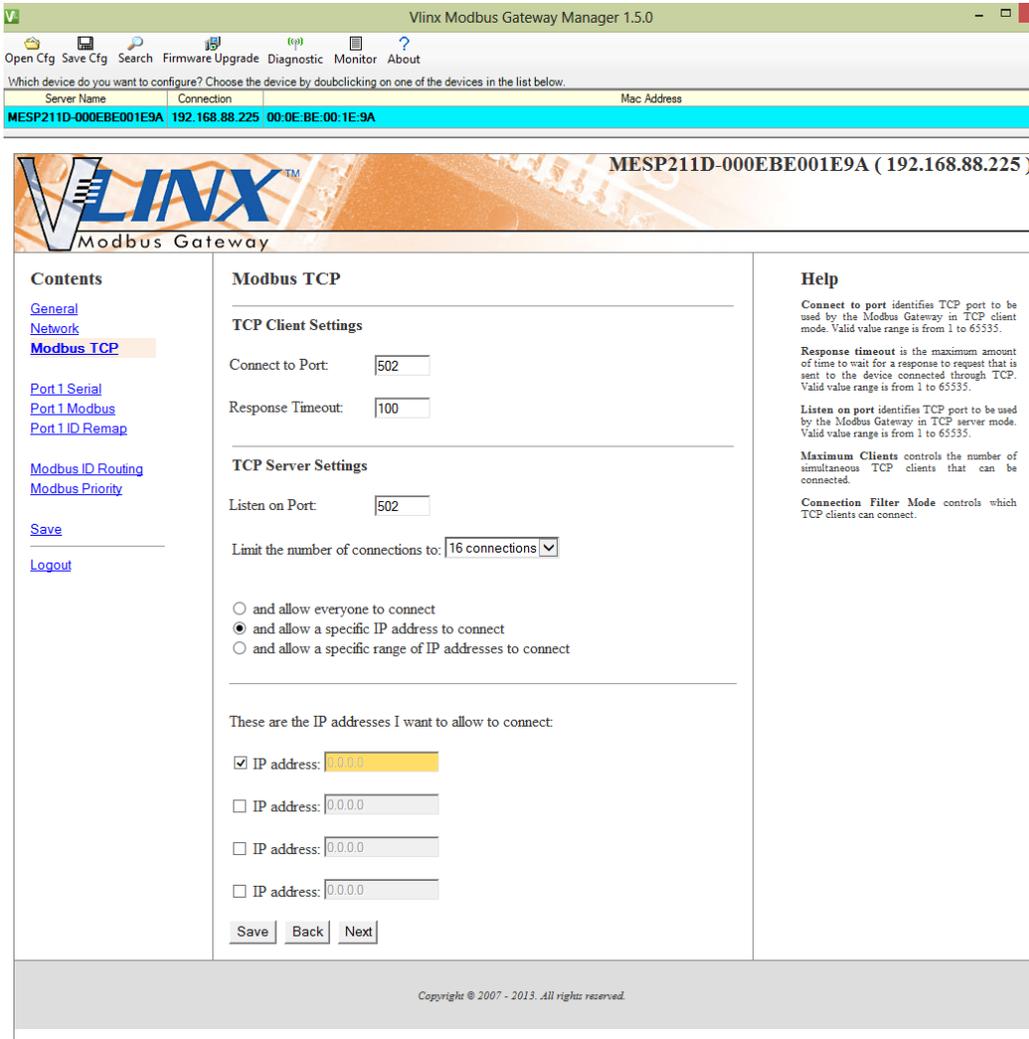


Figure 29. TCP Connection Filter "Allow Specific IP Addresses to Connect"

- c. Save settings by clicking the "Save" button.

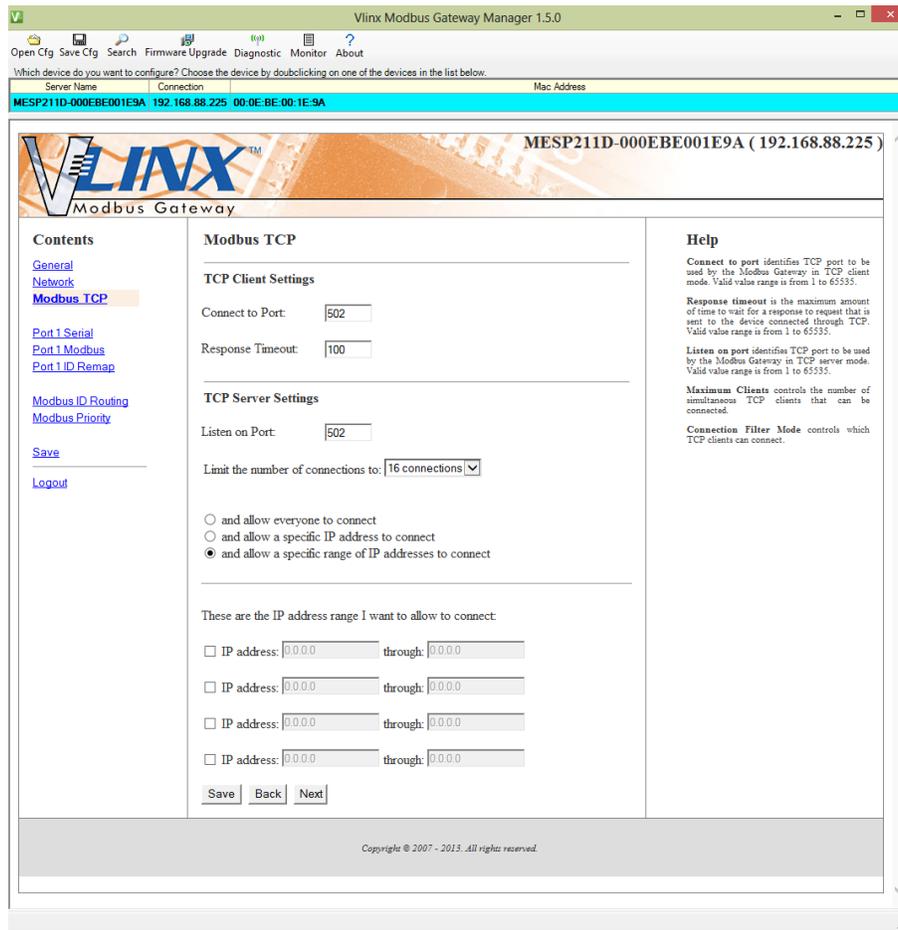


Figure 30. TCP Connection Filter "Allow Specific Range of IP Addresses to Connect"

6. Port 1 Settings

To access this screen, click the "Next" button or click the Port 1 Serial link on the left side of the screen.

- a. This screen allows you to change the serial port settings.

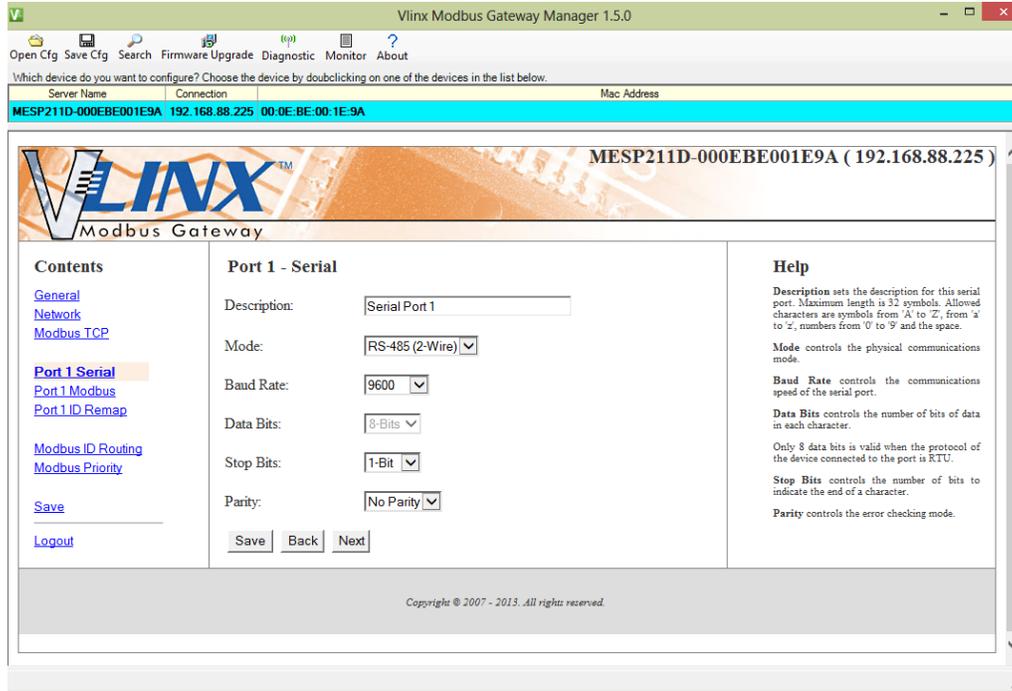


Figure 31. Serial Port Screen

- b. Description - sets the description for this serial port. Maximum length is 32 symbols. Allowed characters are symbols from 'A' to 'Z', from 'a' to 'z', numbers from '0' to '9' and the space.
 - c. Mode - Controls the physical communications mode for the MESP211. The Mode can be RS-232, RS-422 (4-Wire), RS-485 (2-Wire), or RS-485 (4-Wire).
 - d. Stop Bits - Controls the number of bits to end a character. Choices are 1 or 2.
 - e. Parity - Controls the error checking mode. Choices are Odd, Even, Mark, or Space.
 - f. Save settings by clicking the "Save" button.
7. Port 1 Modbus
 - a. To access this screen, click the "Next" button or click the "Port 1 Modbus" Link on the left side of the screen. This screen allows you to change the Modbus settings for the port.



Figure 32. Modbus Port Screen

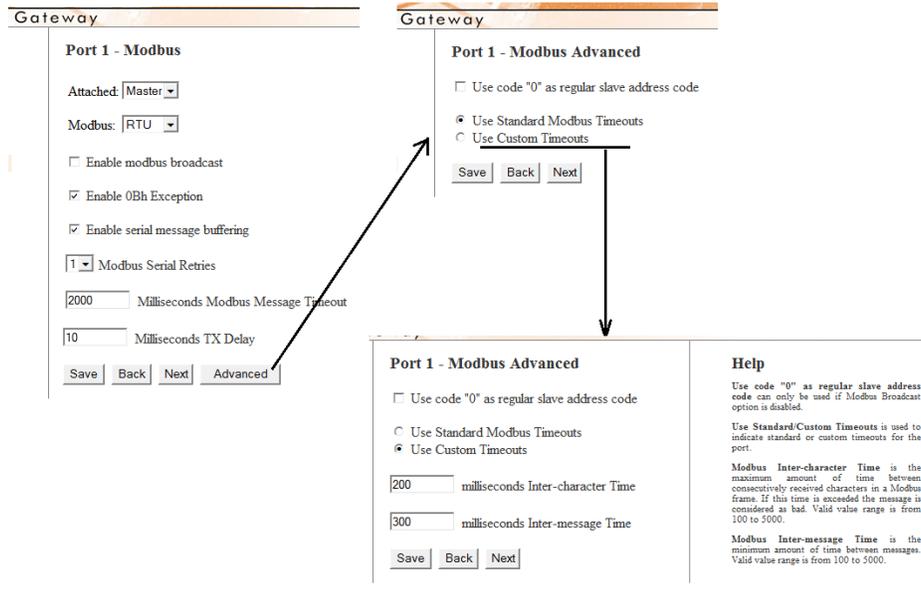


Figure 33. Modbus Port Screen Advanced

- b. Attached – This is selectable between Master and Slaves. If Master is selected, the Modbus Gateway will run in TCP server mode, if Slaves is selected, it will run in TCP client mode.
- c. Modbus – indicates the protocol of the device connected to the port. It can be either RTU or ASCII.
- d. Modbus Broadcast – Check this box to send Modbus broadcasts to a specific serial port. Modbus broadcast is Slave ID 0h. If selected the Gateway will send broadcast messages out the serial port and will not expect a response. If unselected it will use slave ID 0h as a standard address.
- e. Enable 0Bh Exception – Check this box to enable. When the Modbus slave device does not respond before the timeout has been reached or has a bad response (check sum does not match), the 0Bh exception code is transmitted to the Master that initiated the Modbus message.
- f. Enable Serial Message Buffering – If this option is selected, the gateway will buffer up to 32 messages request per port. If this option is unselected, the gateway will respond with a 06h if it has a message out on the port with no response yet.
- g. Modbus Serial Retries – Select 0 through 5. This sets the maximum number of times that the Modbus Gateway will retry to send a Modbus message to a

Modbus client, before reporting a 0Bh exception if it is selected. Number of retries is limited to 5.

- h. Milliseconds Modbus Message Timeout – This is the maximum amount of time to wait for a response to the message. Valid value range is from 1 to 65535.
- i. Milliseconds TX Delay – This is the minimum amount of time after receiving a response before the next message can be sent out. Valid value range is from 1 to 65535.
- j. Save settings by clicking the “Save” button.

8. Port 1 ID Remap

- a. To access this screen, click the “Next” button or click the “Port 1 ID Remap” link on the left side of the screen.
- b. This screen allows you to set Modbus Slave ID Remap settings.

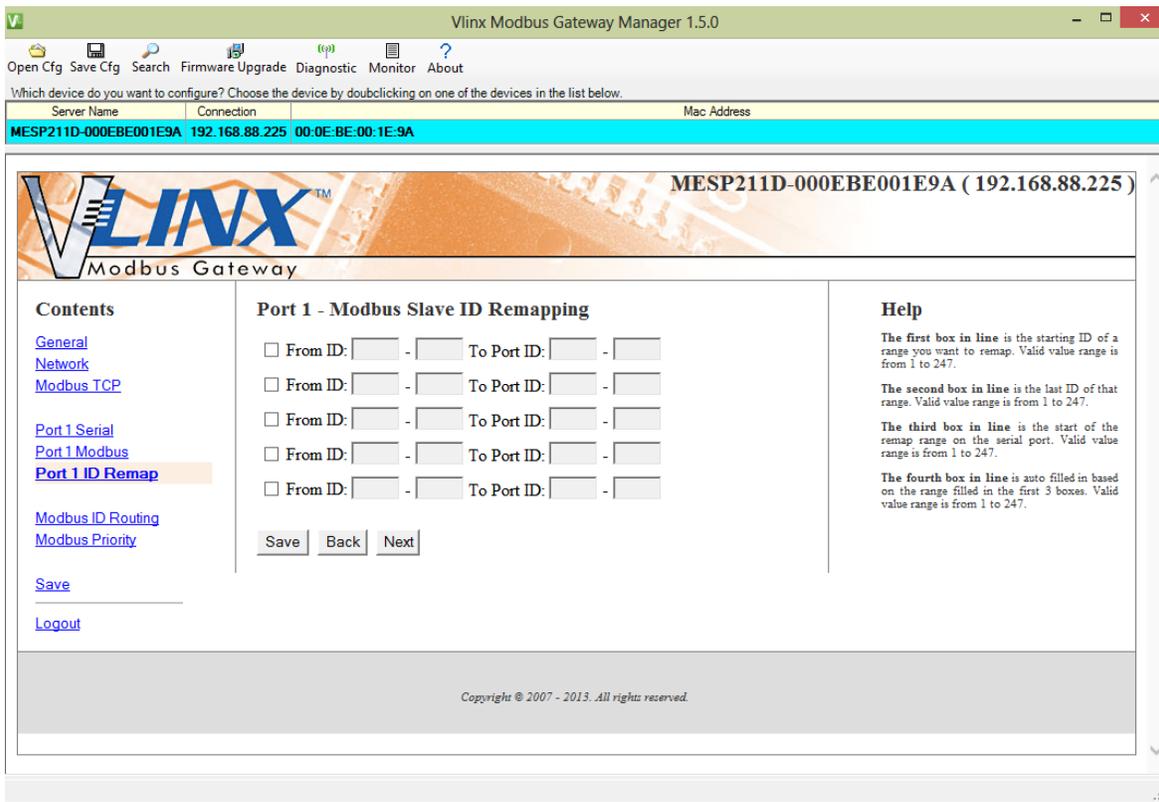


Figure 34. Port ID Remap Screen

- c. The first box in line is the start of the remap range on the serial port you want to remap. Valid value range is from 1 to 247.
- d. The second box in line is the last serial port of that range. Valid value range is from 1 to 247.
- e. The third box in line is the starting ID of a range to remap to. Valid value range is from 1 to 247.
- f. The fourth box in line is auto filled, based on the range filled in the first 3 boxes. Valid value range is from 1 to 247.
- g. Save settings by clicking the "Save" button.

9. Modbus ID Routing

- a. To access this screen click the "Next" button or click the "Modbus ID Routing" Link on the left side of the screen.

This screen allows you to set the Modbus Slave ID routing.

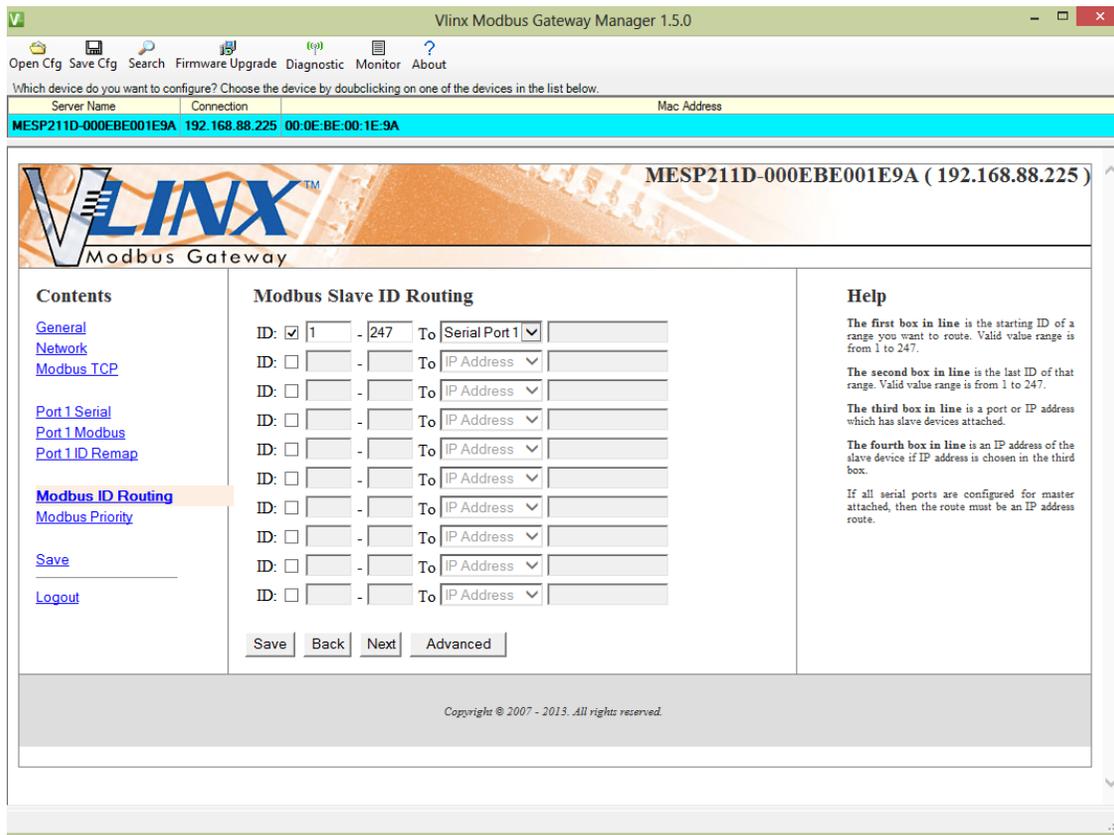


Figure 35. Modbus ID Routing Screen

- b. The first box in line is the starting ID of a range you want to route. Valid value range is from 1 to 247.
- c. The second box in line is the last ID of that range. Valid value range is from 1 to 247.
- d. The third box in line is a port or IP address which has slave devices attached.
- e. The fourth box in line is an IP address of the slave device if IP address is chosen in the third box.
- f. Save settings by clicking the "Save" button.

10. Modbus Priority

- a. To access this screen, click the "Next" button or click the "Modbus Priority" link on the left side of the screen.
- b. This screen allows you to configure the gateway to move high priority messages to the front of the serial message buffer.

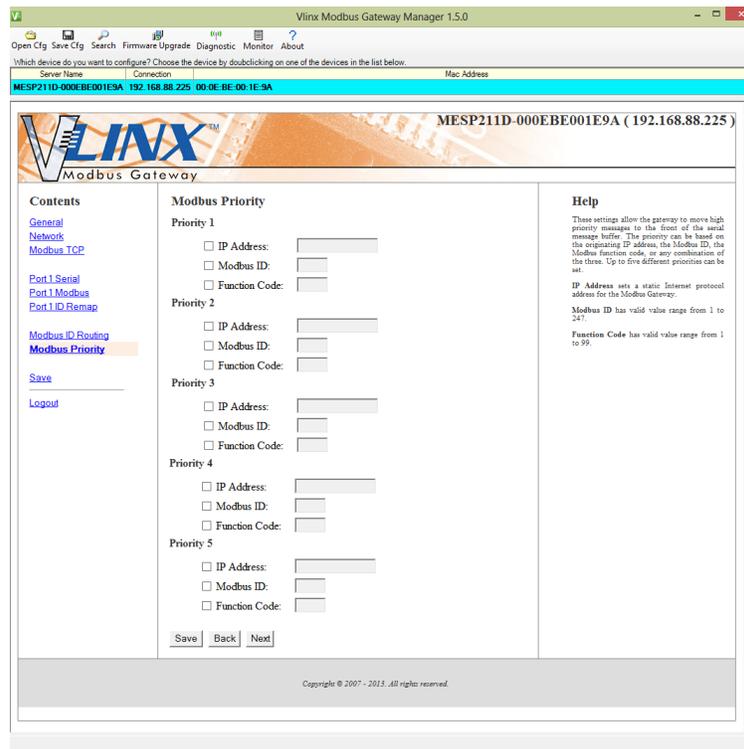


Figure 36. Modbus Priority Screen

- c. These settings allow the gateway to move high priority messages to the front of the serial message buffer. The priority can be based on the originating

IP address, the Modbus ID, the Modbus function code, or any combination of the three. Up to five different priorities can be set.

- d. IP Address – Used to set a static Internet protocol address for the Modbus Gateway.
- e. Modbus ID – Valid range is from 1 to 247.
- f. Function Code – Valid range is from 1 to 99.

Save settings by clicking the “Save” button.

CONFIGURING WITH THE WEB INTERFACE

MESP211 Modbus Gateways can be configured over the network using a standard web browser such as Internet Explorer or Firefox.

To open the web configuration interface:

1. On a PC connected to the network, open a web browser.

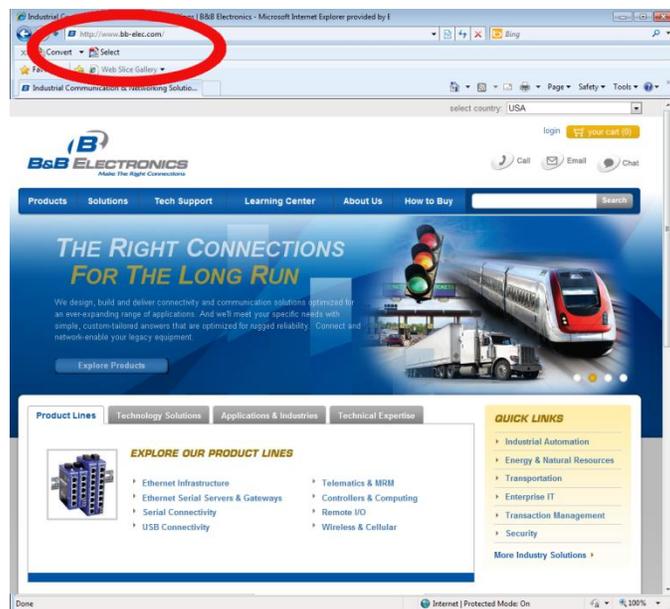


Figure 37. Open Web Browser

2. In the browser's address bar, type the IP address of the Modbus Gateway.

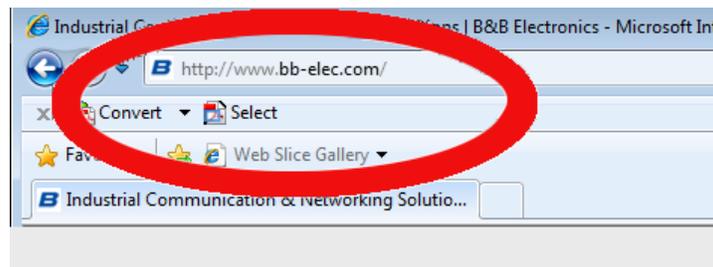


Figure 38. Type IP Address

Note: Your Modbus Gateway comes from the factory pre-configured to receive an IP address assignment from a DHCP server. If a DHCP Server is not available on your network, it will default to 169.254.102.39.

The web interface Login page appears.

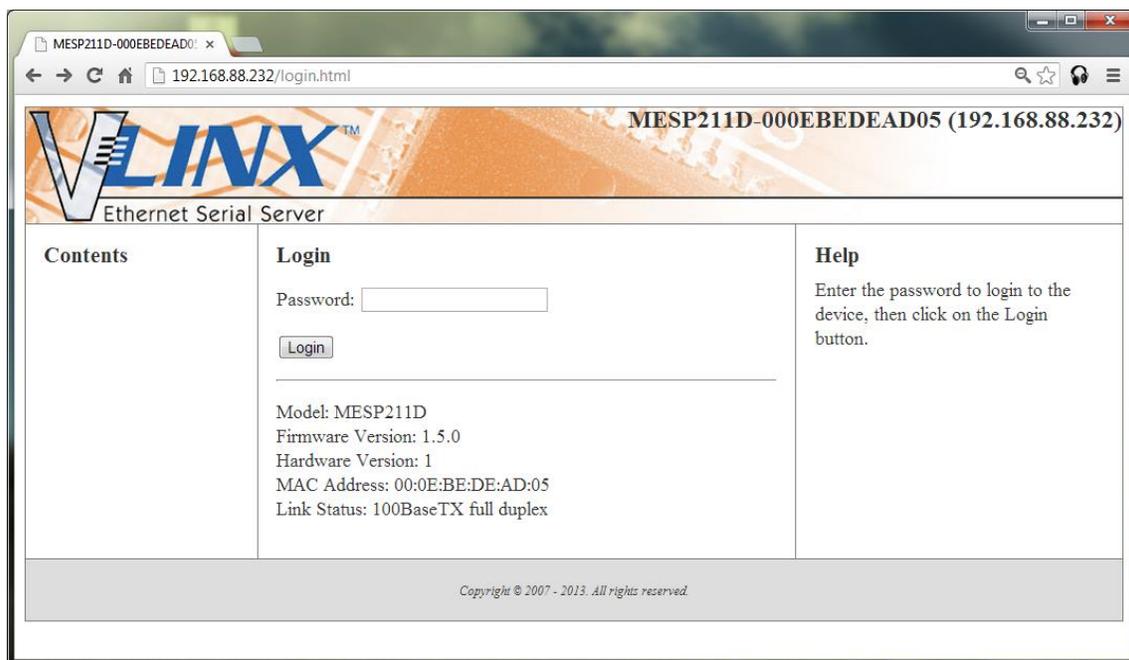



Figure 39. Modbus Gateway Login Screen

3. The screens for configuring your gateway using a web browser are the same as those used to configure using the Vlinx Modbus Manager software.

CONFIGURING THE MESP211 ON NETWORKS WITHOUT A DHCP SERVER


Your Modbus Gateway comes from the factory set up to receive an IP assignment from a DHCP Server. If there is not a DHCP server on your network, the Modbus Gateway will default to IP address **169.254.102.39**. If this address does not work with your PC, there are two methods to manually configure the network information.

1. Method 1: Change your PC Network to Match the Modbus Gateway
 - a. Open your network connection

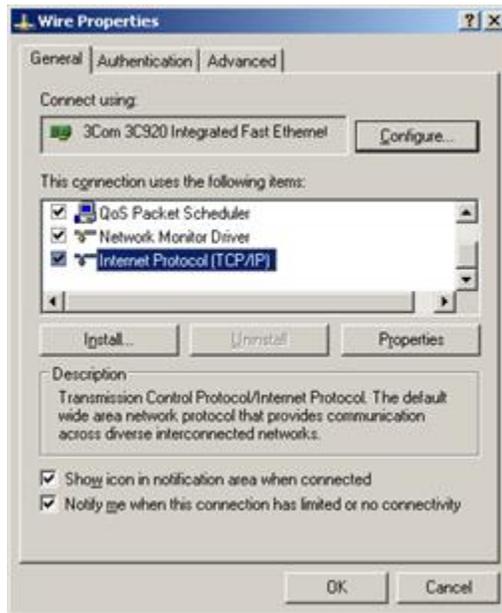

Click on Internet Protocol (TCP/IP) and click <properties>. Change the parameters to the following:

IP Address = 169.254.102.1
Subnet Mask = 255.255.0.0
Default Gateway = 169.254.102.100

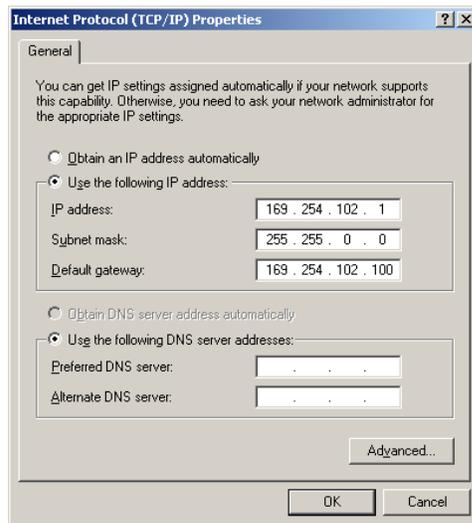

- b. Use the Vlinx Modbus Manager Software to search for, discover, and configure the Modbus Gateway.
2. Method 2: Change the Modbus Gateway's network settings to match your PC using Console Mode. (Console mode works in RS-232 only.)
 - a. Connect a null modem serial cable (crossover cable) from Port 1 on the Modbus Gateway to an available COM port on your PC.
 - b. Enter Console Mode. Press and hold the Modbus Gateway's Mode switch for 2 to 10 seconds. Release the reset button. The READY LED will blink for five seconds. This indicates that the Modbus Gateway is re-booting in Console Mode.
 - c. When the Modbus Gateway has successfully restarted in Console Mode, the READY LED will be OFF and the PORT 1 LED will be ON.
 - d. Open the Vlinx Modbus Manager Software and select "Serial Port" as the method to connect to the Modbus Gateway.
 - e. After logging in, click on <Network>.
 - f. Un-check the box next to "I Want DHCP to setup the Network."
 - g. Re-configure the Modbus Gateway's network settings to something within the range of your PC's network settings. For example:

PC Network Settings

IP Address = 192.168.0.1

Subnet Mask = 255.255.0.0

Default Gateway = 192.168.0.100

Change the Modbus Gateway's network settings to:

IP Address = 192.168.0.50

Subnet Mask = 255.255.0.0

Default Gateway = 192.168.0.100

- h. Save the settings and remove power from the Modbus Gateway.
- i. Re-apply power. Open the Vlinx Modbus Manager Software and select "Network" as the method to connect to the device.

CONFIGURING THE MESP211 VIA THE SERIAL PORT (CONSOLE MODE)

Your Modbus Gateway can be configured via a serial port using the Vlinx Modbus Manager software. To use this feature the Modbus Gateway's serial port must be connected to the serial port of a PC (using a null modem cable, RS-232 only).

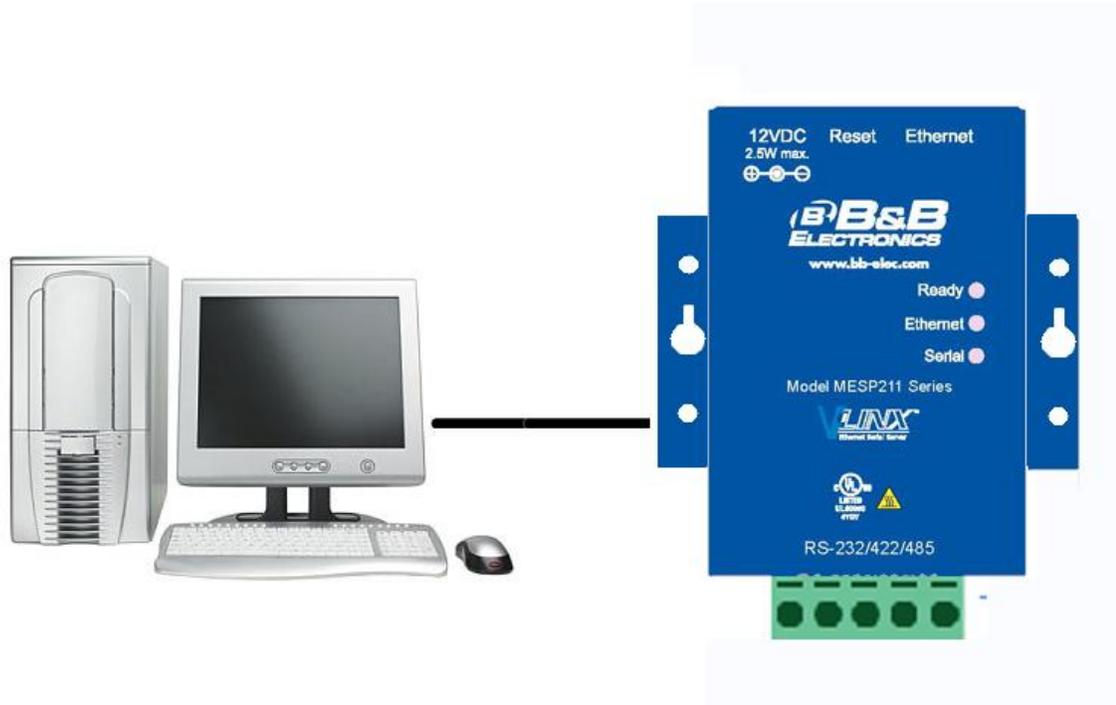


Figure 40. Console Mode Setup

To configure the Modbus Gateway it must be put into Console Mode, using the Mode switch.

To enter Console Mode, press and hold the Mode switch for between two and ten seconds. The LED indicators respond as follows:

1. The Ready LED blinks while the button is being pressed.
2. When the Modbus Gateway has booted into Console Mode the Ready LED will be OFF.

To configure the Modbus Gateway, open the software and set up the Modbus Gateway's parameters as required.

2. Under Connection, select "Serial Port."

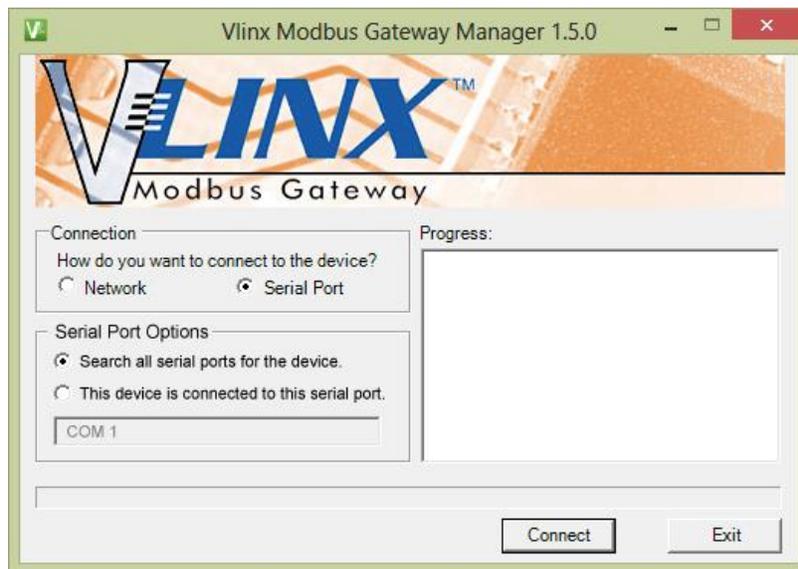


Figure 41. Connection

3. If you do not know which COM port your gateway is connect to, select “Search all serial ports for the device” under Serial Port Options. If you do know, you may specify the COM port by selecting “The device is connected to this serial port” under Serial Port Options and using the pull down menu to choose the COM port.

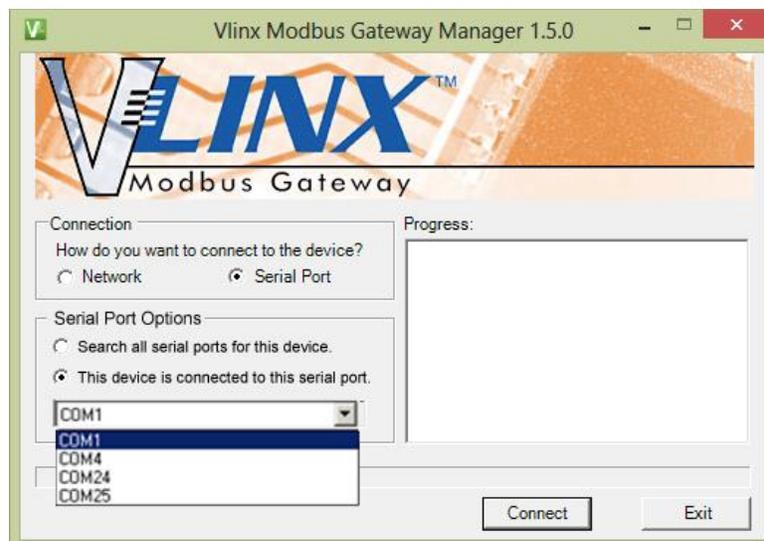


Figure 42. Serial Port Selection

4. The remaining screens are identical to those shown in configuring your gateway using a network connection.

To exit Console Mode, press and hold the Reset switch for two seconds.

Saving your configuration will also take you out of Console Mode.

The LEDs go back to their normal states when the device resumes normal operation.

MESP211 OPERATIONAL CONNECTIONS

USING MESP211 MODBUS GATEWAYS IN DIRECT IP MODE

A Direct IP connection allows applications using TCP/IP socket programs to communicate with the COM ports on the Modbus Gateway. In this type of application the Modbus Gateway is configured as a TCP server. The socket program running on the PC establishes a communication connection with the Modbus Gateway. The data is sent directly to and from the serial port on the server.

To set up a Direct IP Mode connection:

1. Connect the Modbus Gateway to the network and a Modbus network as described in previous sections.
2. Configure the Modbus Gateway with the appropriate network settings (using or the web interface).
3. Configure your software application with the appropriate IP address and port number to communicate with the Modbus network(s).

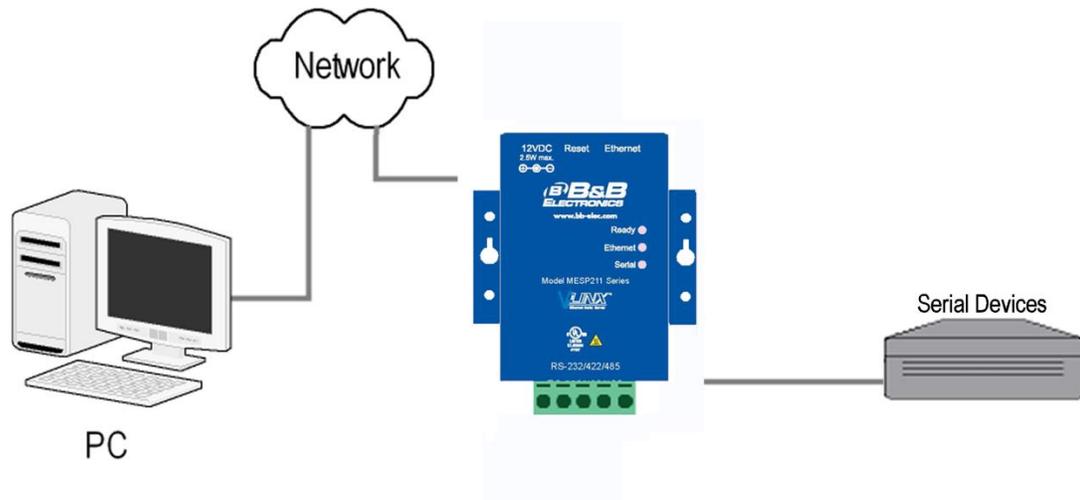


Figure 43. Direct IP Connection

INITIATING A HARDWARE RESET ON THE MODBUS GATEWAY

To initiate a Hardware Reset on the Modbus Gateway, press and hold the Mode switch for 0 to 2 seconds, and then release it. The LED indicators respond as follows:

1. The Ready LED blinks while the button is being pressed.
2. When the Modbus Gateway has reset and rebooted into Normal Mode the Ready LED will be blinking.

RELOADING FACTORY DEFAULTS

To reload Factory Defaults, press and hold the Mode switch for more than 10 seconds. The LED indicators respond as follows:

1. The Ready LED blinks three times per second while the button is being pressed. The Modbus Gateway reloads all factory default configuration parameters. When the device has reset and rebooted the Ready LED will be blinking.
2. The LEDs go back to their normal states when the device resumes normal operation.

Note: Factory default parameters are listed in Appendix A

4. UPGRADING FIRMWARE

Occasionally, updated firmware may become available for your Modbus Gateway. The firmware can be upgraded using the Vlinx Manager software. The following procedure describes the firmware updating process:

1. Click the **Upgrade** button to open the **Firmware Upgrade** dialog box.

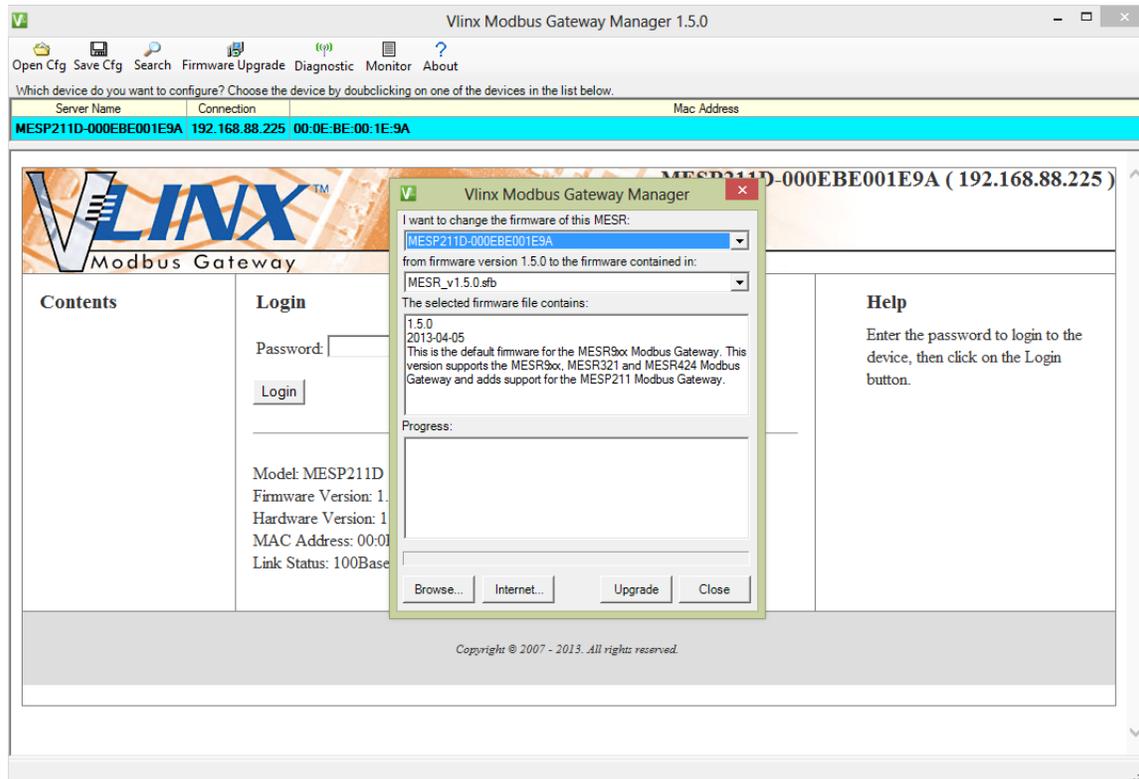


Figure 44. Firmware Upgrade Dialog Box

The name of the currently selected Modbus Gateway appears in the top drop down list. Other Modbus Gateways (that have already been discovered) can be selected from the drop down list, if desired.

The current firmware version of the selected Modbus Gateway is shown in the text below the Modbus Gateway name.

Information about the selected firmware file is shown in the third text box.

DOWNLOADING FIRMWARE FILES

The **Firmware File** list (second box) displays all firmware files in the firmware installation folder. Only firmware that is compatible with the selected Modbus Gateway is available in this list.

To download the latest firmware files from an FTP site on the Internet:

1. Click the **Internet** button at the bottom of the window.
The Vlinx Modbus Manager software connects to an FTP server on the Internet.
2. Click the **Check for Updates** button.
Progress Bar and **Progress Box** display information about and progress of the download.

To download the latest firmware files from a file:

1. Click the **Browse** button to open an **Open File** dialog box.
2. Browse to the drive and folder containing the firmware file.
3. Select and download the file to the local firmware folder.

UPLOADING THE FIRMWARE TO THE MODBUS GATEWAY

To upgrade the firmware:

1. In the **Modbus Gateway Selection** drop down list, select the Modbus Gateway to be upgraded.
2. In the **Firmware Description** drop down list, select the firmware to upload to the Modbus Gateway.
3. Click the **Upgrade** button.
Progress Bar and **Progress Box** provides information on the progress of the transfer.
4. In the **Firmware File** drop down list, select the firmware file to upload to the Modbus Gateway.
5. Click **Upgrade**.
The Progress box and Progress bar display information on the upgrading process.
6. When the upgrade process is complete, click **Close**.

5. DIAGNOSTICS

Clicking the **Diagnostics** icon opens the **Diagnostics** dialog box and enables you to check the operation of connected Modbus Gateways on the local computer.

The **Computer Information** box displays information about the type of network connections, the IP addresses, Subnet Masks and Default Gateways in use.

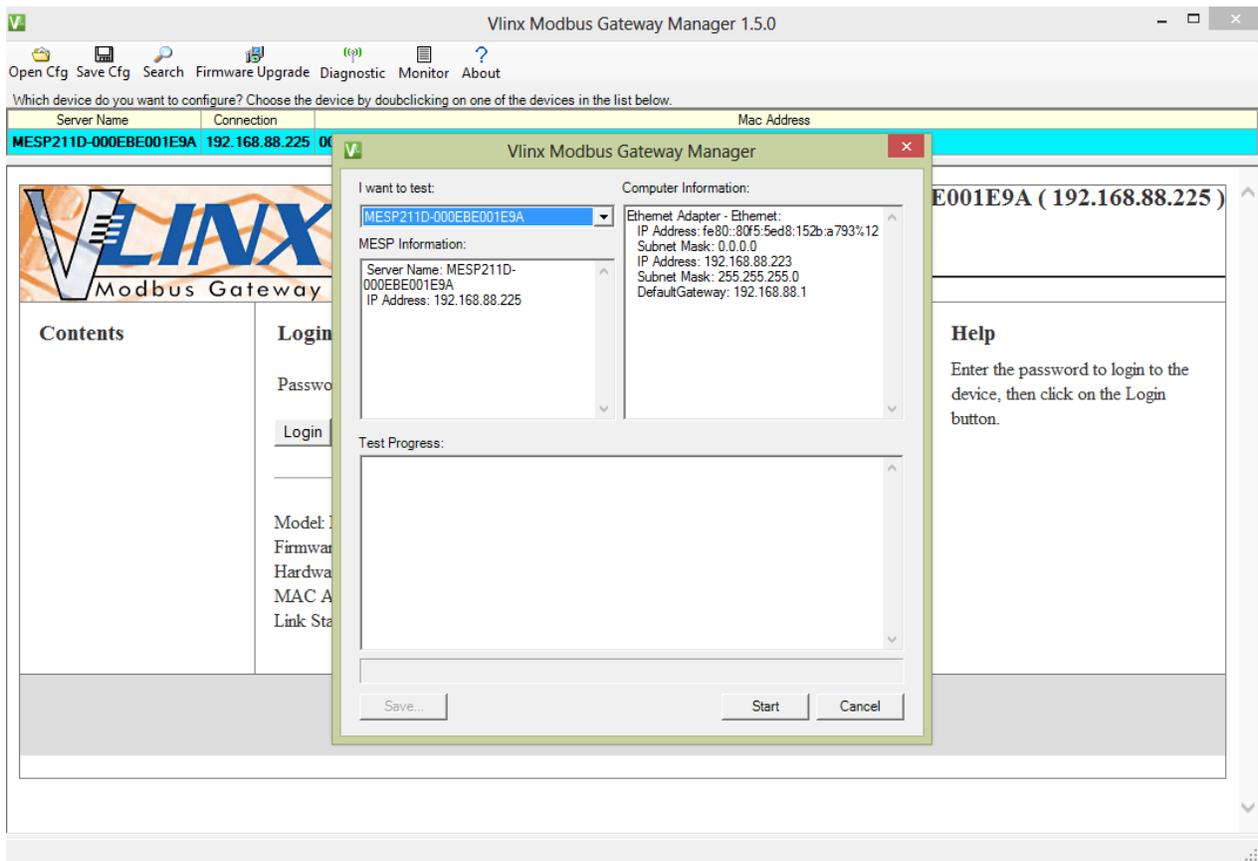


Figure 45. Diagnostics Dialog Box

TESTING A MODBUS GATEWAY CONNECTION

To run diagnostics on a Modbus Gateway:

1. Click the **Diagnostics** icon.

The **Diagnostics** dialog box appears.

2. In the drop down box select the specific Modbus Gateway you want to check.

3. Click the **Start** button

Information about the progress of the pinging process is displayed in the **Test Progress** box.

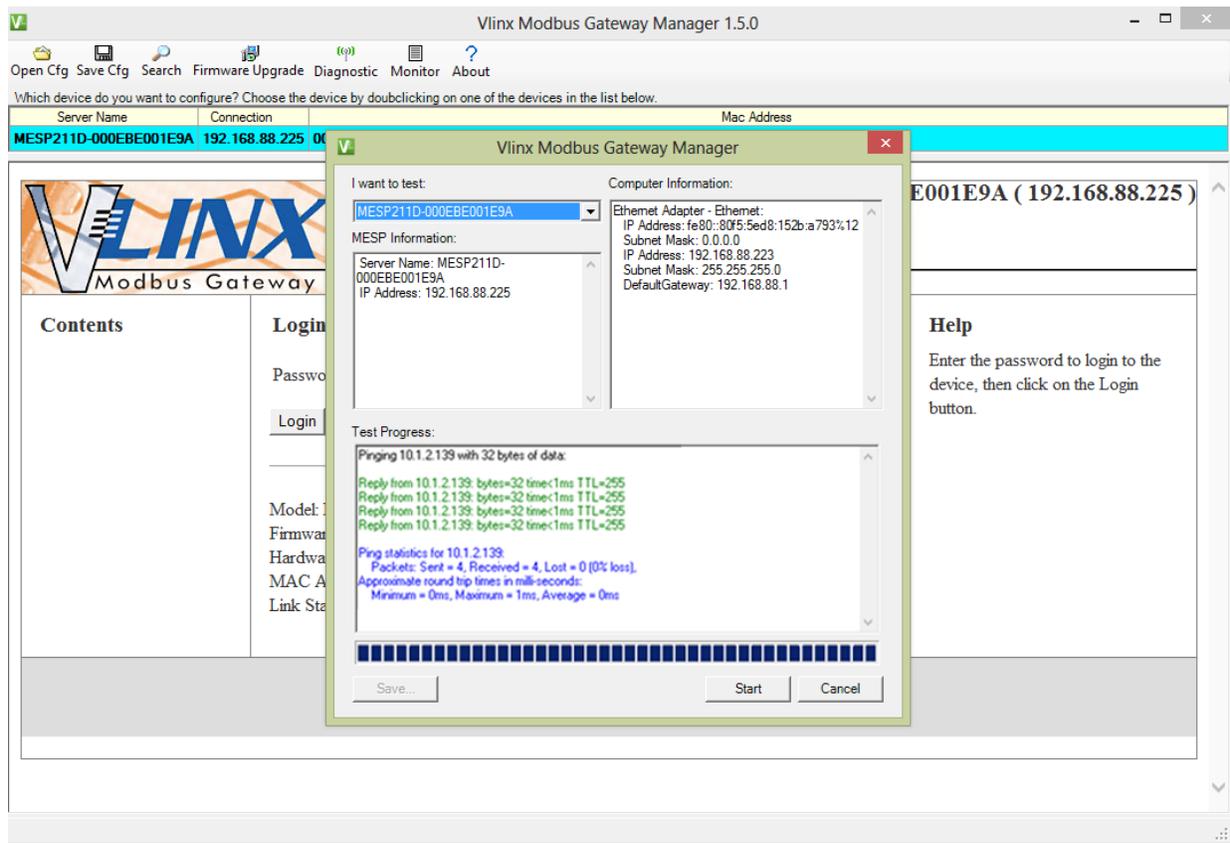


Figure 46. Testing a Modbus Gateway Connection

MONITOR FUNCTION

The Monitor button is used to display a screen that shows information about events and data transfer through the Modbus Gateway.

To start monitoring, select a Modbus Gateway and press the "Start" button.

The "Auto Scroll" check box enables and disables automatic scrolling of the displayed text.

The "Clear" button clears the displayed text.

Press the "Stop" button to stop monitoring.

Press the "Save" button to save the information to a file.

6. SETUP EXAMPLES

Modbus Gateways can be used to integrate Modbus networks in a wide variety of settings. But as each setting has its own requirements, users may not understand how a gateway helps, or if it's appropriate for their specific needs.

The following scenarios are examples only, and many others are possible. Refer to the Modbus Serial Server page on the B&B Electronics web site for detailed information regarding other applications.

Log into your gateway.

1. Access the serial port one setup screen by clicking the link on the left side of the screen.



Figure 47. Serial Port 1 Setup

2. Configure Serial Port 1. In this case it is RS-232, 19.2 kbps, 8 data bits, 1 stop bit, and no parity. Save the settings
3. Access Port 1 Modbus by clicking the link on the left side of the screen.

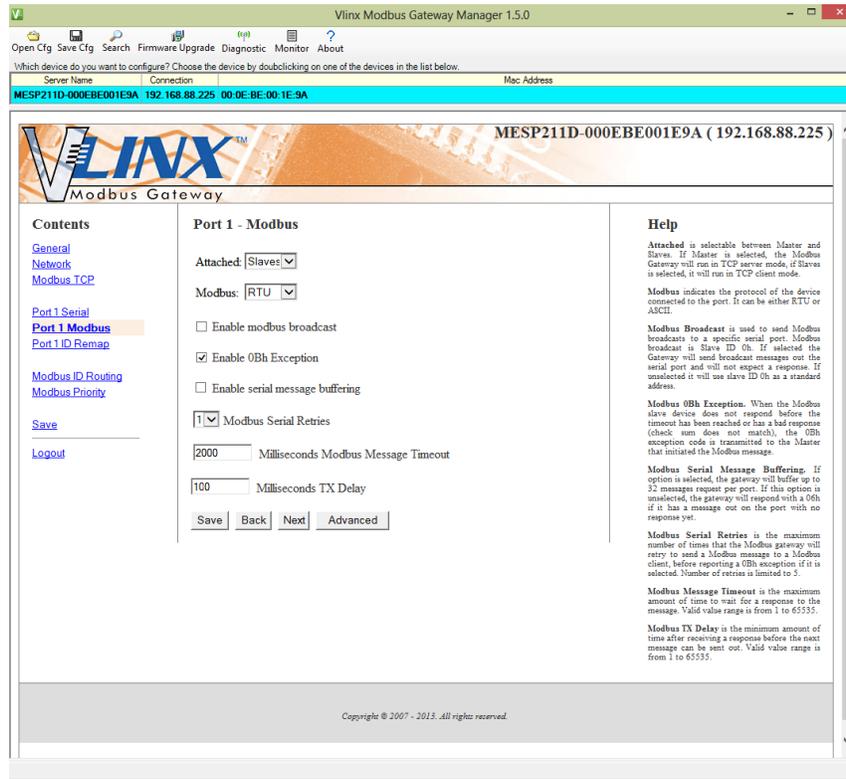


Figure 48. Port 1 Modbus

4. Configure the Port 1 Modbus Settings. In this case Attached should be slaves, Modbus should be RTU. The other settings depend on your application.
5. Configure Port 2 Serial and Modbus in the same fashion.
6. Access Modbus ID Remapping for each port and configure as necessary.

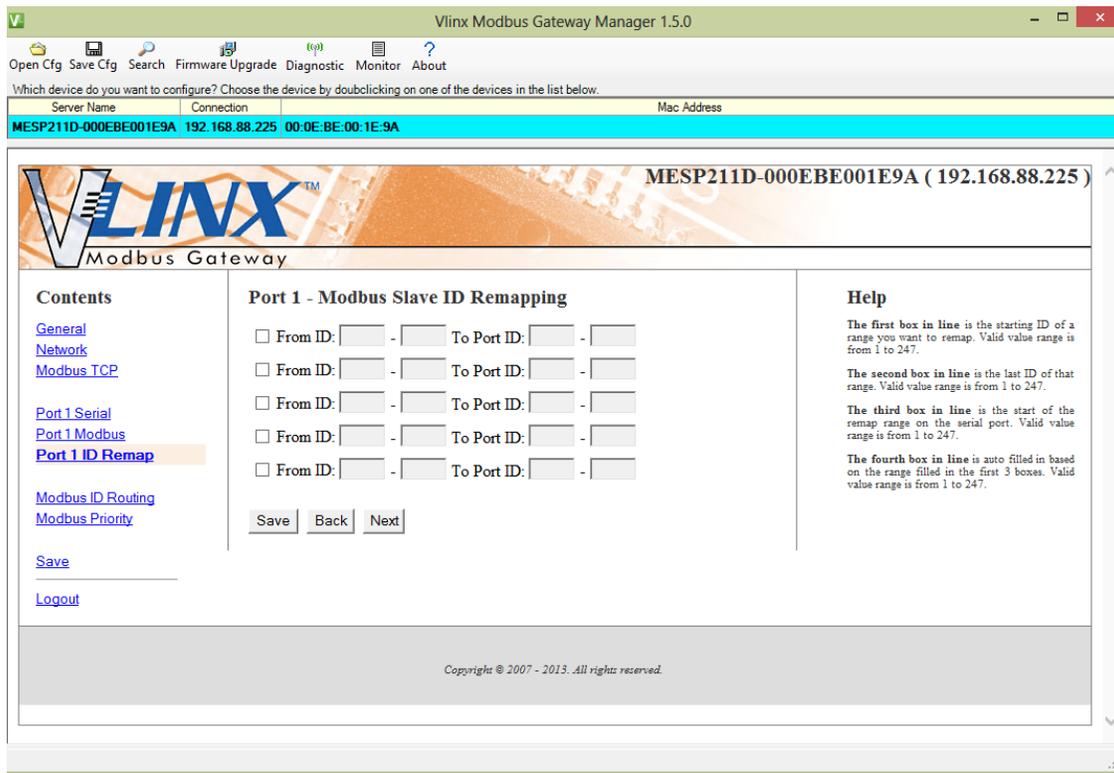


Figure 49. Port 1 Modbus Slave ID Remapping

7. Access Modbus ID Routing. Configure as necessary. In this example, Slave ID 200 is mapped to serial Port 1, Slave ID 1 through 5 and 205 are mapped to serial port 2.

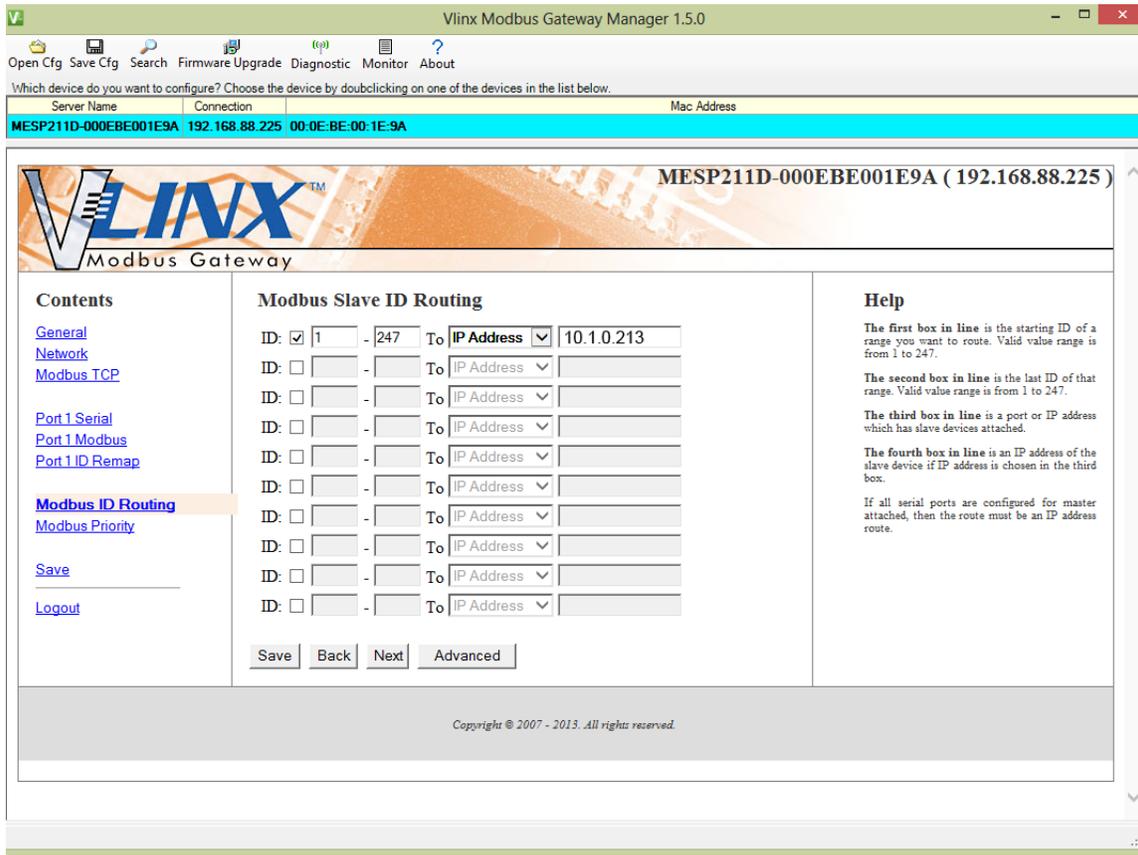


Figure 50. Modbus ID Routing

8. Access Modbus Priority and configure as necessary.

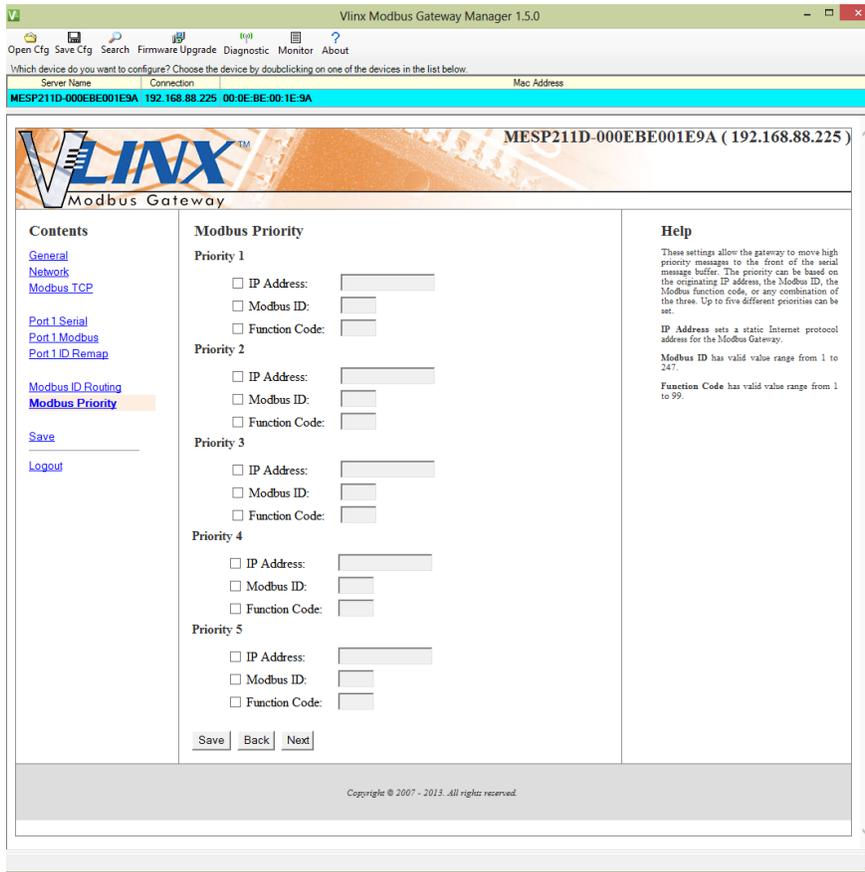


Figure 51. Modbus Priority

7. MODBUS HELP

MODBUS ASCII/RTU BASICS

The Modbus protocol emerged in the mid-1970s as an early protocol for linking terminals with Modicon PLCs using a master/slave (sometimes called a master/client) relationship. A simple, open, message-based protocol, it caught on quickly and became a de facto standard in the industry. It supports asynchronous point-to-point and multidrop communications and can be used with a variety of serial interfaces (RS-232, RS-422, RS-485, modems, etc.).

The original Modbus specification included two possible transmission modes: ASCII and RTU. Modbus RTU mode is the most common implementation, using binary coding and CRC error-checking. Modbus ASCII messages, though somewhat more readable because they use ASCII characters, is less efficient and uses less effective LRC error checking. ASCII mode uses ASCII characters to begin and end messages whereas RTU uses time gaps (3.5 character times) of silence for framing. The two modes are incompatible so a device configured for ASCII mode cannot communicate with one using RTU.

All Modbus communications are initiated by Modbus masters using a polling query/response format. The master can send broadcast messages (using a slave address of 0), which all slaves accept, but do not reply to. More commonly the master polls individual slaves sequentially. In each poll it sends a message containing a **device address**, followed by a **function code**, any **data** that maybe required, and an **error check** field. The addressed slave responds with a similar message structure. Typically it repeats back its address and the function code, and then sends a field indicating the number of bytes of data it is sending, followed by the data and the error check field.

Slave addresses can range from 1 to 247. Function codes include several common ones typically used in all applications, and additional ones that may be implemented in specific cases. Common function codes include: Read Coil Status (01), Read Input Status (02), Read Holding Registers (03) and Read Input Registers (04).

When a master sends a message to a slave it expects to receive a valid response within certain length of time. If the slave does not receive the message, or if the slave receives the message but an error is detected, it does not respond. If the slave cannot respond appropriately for some other reason (e.g. it does not recognize the function code), it will return a message containing an exception response.

HINTS AND TIPS

A few simple suggestions that may assist you if your system is experiencing problems include:

- Slowing down the polling rate may be helpful if power cycling doesn't cure the problem.
- A common misperception is that every serial network must terminate with a resistor. While this was true of early serial network configurations, it's typically the wrong answer.

8. APPENDICES

This section includes the following Appendices:

- Appendix A: Default Gateway Settings
- Appendix B: Product Specifications
- Appendix C: Dimensional Diagrams
- Appendix D: Connector Pinouts

APPENDIX A: DEFAULT GATEWAY SETTINGS

Setting	Default Value
Gateway Name	User assigned
Password	password field is blank from factory
DHCP	Enabled from factory
IP Address	DHCP will configure. If a DHCP Server is not available, the unit will default to 169.254.102.39
Net Mask	255.255.0.0
Default Gateway	169.254.1.1
MAC Address	Fixed - see bottom label
Port	1
Serial port mode	RS-485
Baud Rate	9600
Data bits	8
Parity	None
Stop bits	1
Protocol	TCP
Serial timeout	0 seconds
Inter-character timer	0 ms
TCP port	502
Max connection	1

APPENDIX B: PRODUCT SPECIFICATIONS

This section includes the following specifications:

- General Specifications
- Controls, Indicators and Connector Specifications
- Serial Interface Specifications
- Network Specifications

GENERAL SPECIFICATIONS

Hardware and included accessories	Device	Modbus Gateway module
	CD	CD with software for Win XP (32/64 bit), 2003 Server (32/64 bit), Vista (32/64 bit), Windows 7 (32/64 bit), Windows 2008 Server (32/64 bit), Windows Server 2012
Configuration Options	Via serial port	Using via a serial connection, (press Reset button to enter Console Mode)
	Via network	Using Vlinx Gateway Manager via an Ethernet connection Using a standard web browser such as Internet Explorer, Firefox or Chrome
Software	For Modbus Gateway configuration	Win XP (32/64 bit), 2003 Server (32/64 bit), Vista (32/64 bit), Windows 7 (32/64 bit), Windows 2008 Server (32/64 bit), Windows 8 (32/64 bit), Windows Server 2012
Environment	Operating Temperature	-40 to 80 °C (-40 to 176 °F)
	Storage Temperature	-40 to 85 °C (-40 to 185 °F)
	Operating Humidity	10 to 95% non-condensing
Enclosure	Rating	IP30
	Mounting	Panel mountable case with DIN rail mount option
	Dimensions	3.1 x 0.9 x 2.0 (with ears 2.89) inches
Power Supply (External Supply Required)	Voltage Requirements	10 to 30 VDC
	Power Consumption	2.5 W
Terminal Blocks (Note: One conductor Per terminal)	Wire Size	28 to 16 AWG
	Wire Type	Copper Wire Only
	Tightening Torque	5 KG-cm
	Wire Temp Rating	105°C Minimum, Sized for 60°C Ampacity

CONTROLS, INDICATORS AND CONNECTOR SPECIFICATIONS

Switches	Reset button	Hold in for 0 to 2 seconds for hardware reset Hold in for 2 to 10 seconds for Console Mode (Do a hardware reset or recycle power to exit Console Mode) Hold in for more than 10 seconds to reset to factory defaults
Indicators	Serial LED	Color = Green On = Port open Blink = Data traffic
	RJ45 Ethernet Link LED	Color = Green On = 100BaseTX Off = 10BaseT Blink = Data traffic
	Ready LED	Color = Green Blink (once per second) = System in Normal Mode Off = System in Console Mode
Connectors	10BaseT/100 BaseTX Ethernet	RJ-45 (8 pin)
	Serial	DB9M connector or terminal block
DC Power		External

APPROVALS AND CERTIFICATIONS

FCC	Part 15 Class A
CE	


SERIAL INTERFACE SPECIFICATIONS

Mode Selection	RS-232/422/485 software selectable
RS-232 lines	TXD, RXD, RTS, CTS, DTR, DSR, DCD, GND
RS-422 lines (4 wire)	TXDA(-), TXDB(+), RXDA(-), RXDB(+), GND
RS-485 lines (2 wire)	Data(-), Data(+), GND
RS-485 lines (4 wire)	TXDA(-), TXDB(+), RXDA(-), RXDB(+), GND
Baud Rates	75, 150, 300, 600, 1200, 2400, 4800, 7200, 9600, 14.4k, 19.2k, 28.8k, 38.4k, 57.6k, 115.2k, 230.4k
Data Bits	7, 8
Parity	None, even, odd, mark, space
Stop bits	1, 2
RS-422/485 biasing	Auto 1 K ohm pullups and pulldowns
RS-485 data control	Auto control via MCU

NETWORK SPECIFICATIONS


Memory	Serial Memory	8 kB per port
	Network Memory	4 kB
TCP Ports	80	Web Server
	502	Modbus client/server port – user configurable
	7000	TCP Configuration
	10000	Monitor Port
UDP Ports	7000	UDP Configuration
	8899	Device Discovery
Network Communications	LAN	10/100 Mbps Auto-detecting 10BaseT or 100BaseTX
Network Physical Layer Standards	Ethernet	IEEE 802.3 auto-detecting & auto MDI/MDX 10BaseT, 100BaseTX and 100BaseFX
Protocols Supported		TCP, IPv4, ARP, HTTP 1.0, ICMP/PING, DHCP/BOOTP
	IP Mode	Static, DHCP or Auto IP
	TCP	User definable
Connection Modes		Server, Client
Search		Serial direct COM and Ethernet auto search or specific IP
Firmware Upgrade		Via serial or Ethernet
Timeouts	Modbus Message	1 to 65535 ms, default set at 2,000 ms
	TX Delay	1 to 65535 ms, default set at 10 ms
	Custom Timeouts	
	Inter-character	100 to 5000 ms, default set at 0 – user to set if enabled
	Inter-message	100 to 5000 ms, default set at 0 – user to set if enabled

APPENDIX C: DIMENSIONAL DIAGRAM

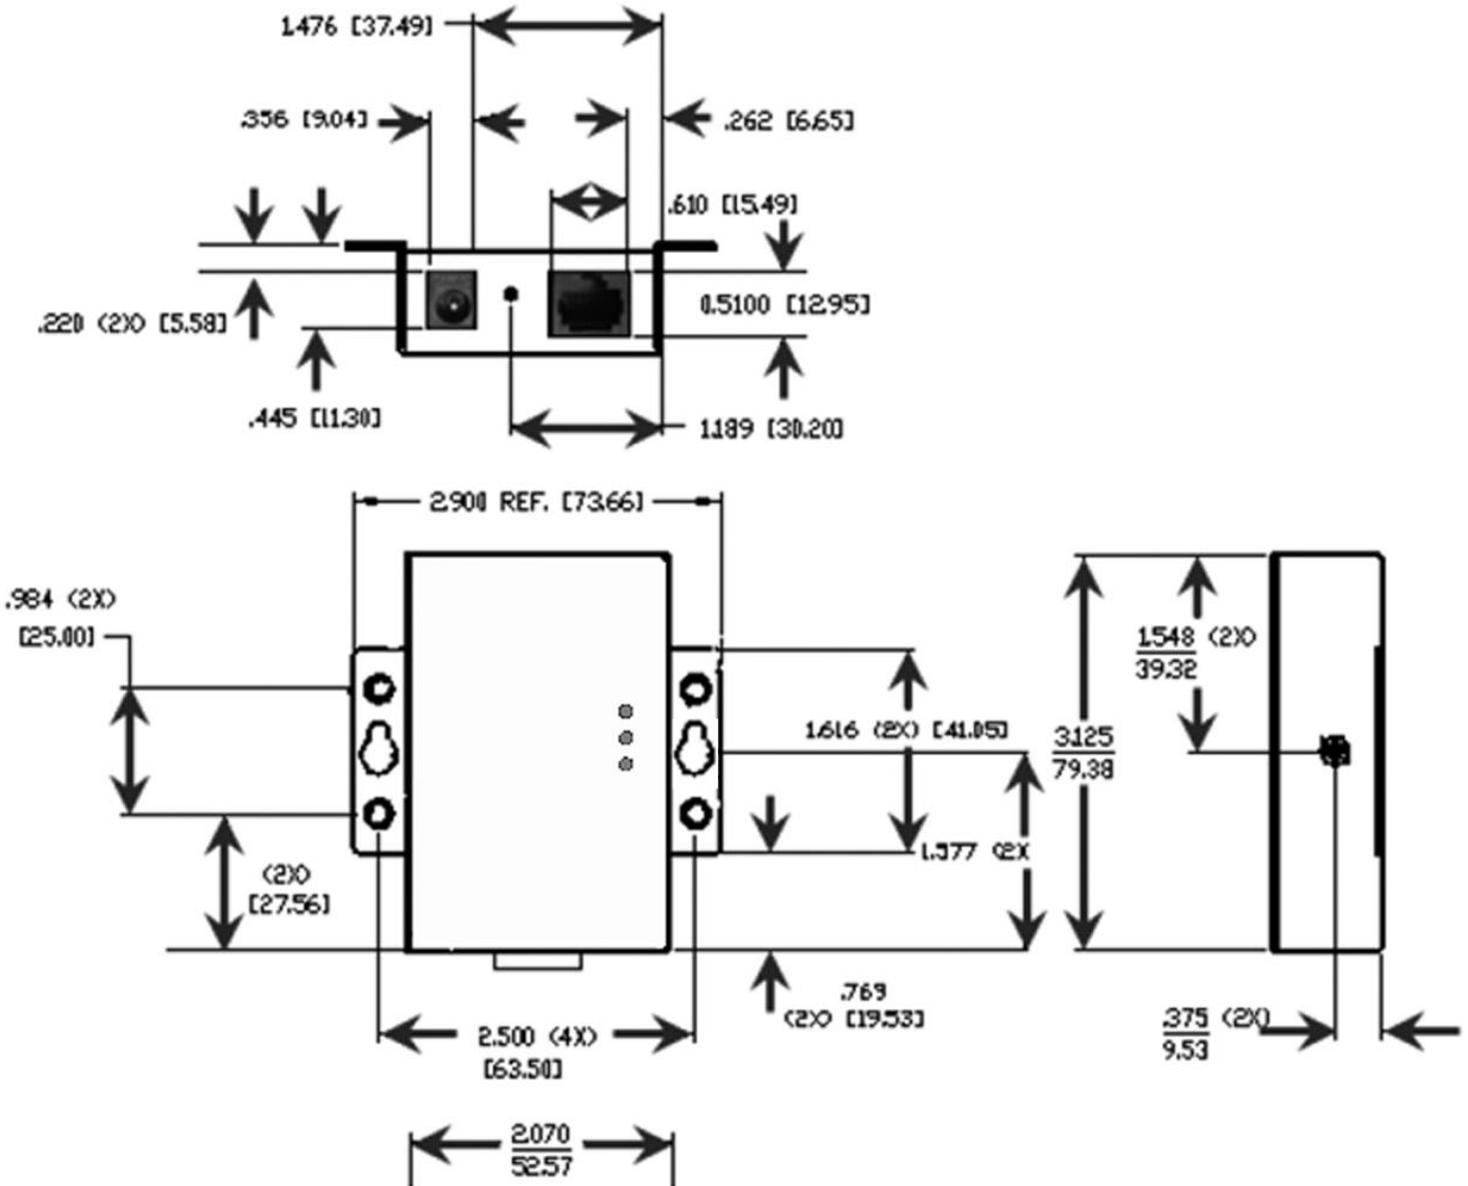


APPENDIX D: CONNECTOR PINOUTS

MESP211 SERIAL PORT PINOUTS

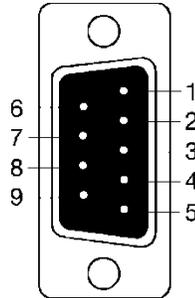

DB9 Male Pin	Direction (RS-232)	RS-232	RS-422 RS-485 4-Wire	RS-485 2-Wire
1	Input	DCD	RDA (-)	****
2	Input	RXD	RDB (+)	****
3	Output	TXD	TDB (+)	Data B (+)
4	Output	DTR	TDA (-)	Data A (-)
5	****	GND	GND	GND
6	Input	DSR	****	****
7	Output	RTS	****	****
8	Input	CTS	****	****
9	****	****	****	****

MESP211 TERMINAL BLOCK PINOUTS

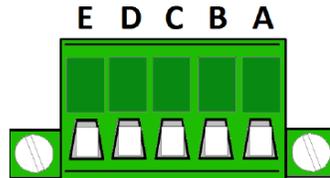

Terminal	RS-232	Direction (RS-232)	RS-422	RS-485
A	RTS	Output	TDA (-)	Data A (-)
B	TD	Output	TDB (+)	Data B (+)
C	CTS	Input	RDA (-)	---
D	RD	Input	RDB (+)	---
E	GND	****	GND	GND

In the RS-422 mode, TX lines are outputs and RX lines are inputs. Connect the Modbus Gateway TXB(+) line to the RXB(+) line of the Modbus network, and the Modbus Gateway TXA(-) to the RXA(-) of the Modbus network.

Ground is signal ground and provides a common mode reference for the RS-422 Receiver and Transmitters.