

# ZL8801-4PH-DEMO1Z Demonstration Board User Guide

## Description

The ZL8801 is a dual-phase digital DC to DC controller optimized for current sharing. As many as 4 ZL8801's can be operated in parallel to provide even phase counts between 2 and 8 phases. The ZL8801 incorporates compensation-free ChargeMode control to achieve single-cycle transient response.

The ZL8801 supports a wide range of output voltages (0.54V to 5.5V) operating from input voltages between 4.5V and 14V.

The ZL8801-4PH-DEMO1Z evaluation board is a 6-layer board configured as a 4-phase 160A synchronous buck converter. Sequencing, margining, fault spreading and other features can be evaluated using this board.

A USB to PMBus™ adapter module is used to connect the evaluation board to a host PC running Microsoft Windows.

## Specifications

TABLE 1. EVALUATION BOARD SPECIFICATIONS

SPEC	DESCRIPTION	MIN	TYP	MAX	UNIT
VIN	Input Voltage Range	6.5		14	V
VOUT	Output Voltage Range, Default $V_{OUT} = 1V$	0.6		3.6	V
IOUT	Rated Output Current	0		160	A
fsw	Switching Frequency	400		1000	kHz
V <sub>RIPPLE</sub>	Output Ripple Voltage		±1		%

## Key Features

- 160A 4-phase synchronous buck converter with ChargeMode™ control
- On-the-fly  $V_{OUT}$  control
- Configurable with PMBus
- $V_{IN}$  range 4.5V to 14V
- $V_{OUT}$  range 0.54V to 3.6V
- I<sup>2</sup>C/SMBus interface, PMBus compatible
- Output voltage and current protection

## References

- [ZL8801](#) datasheet

## Ordering Information

PART NUMBER	DESCRIPTION
ZL8801-4PH-DEMO1Z	ZL8801 Demonstration Kit (Demonstration Board, USB Adapter, Cable)

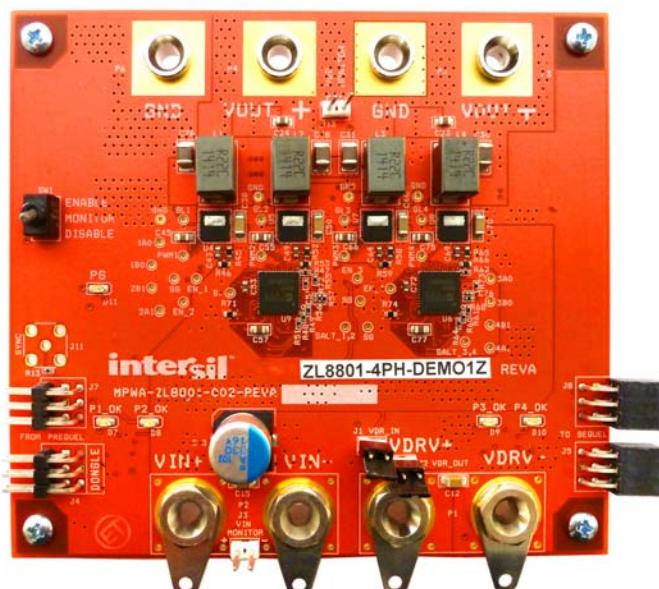


FIGURE 1. ZL8801-4PH-DEMO1Z BOARD

## Application Note 1948

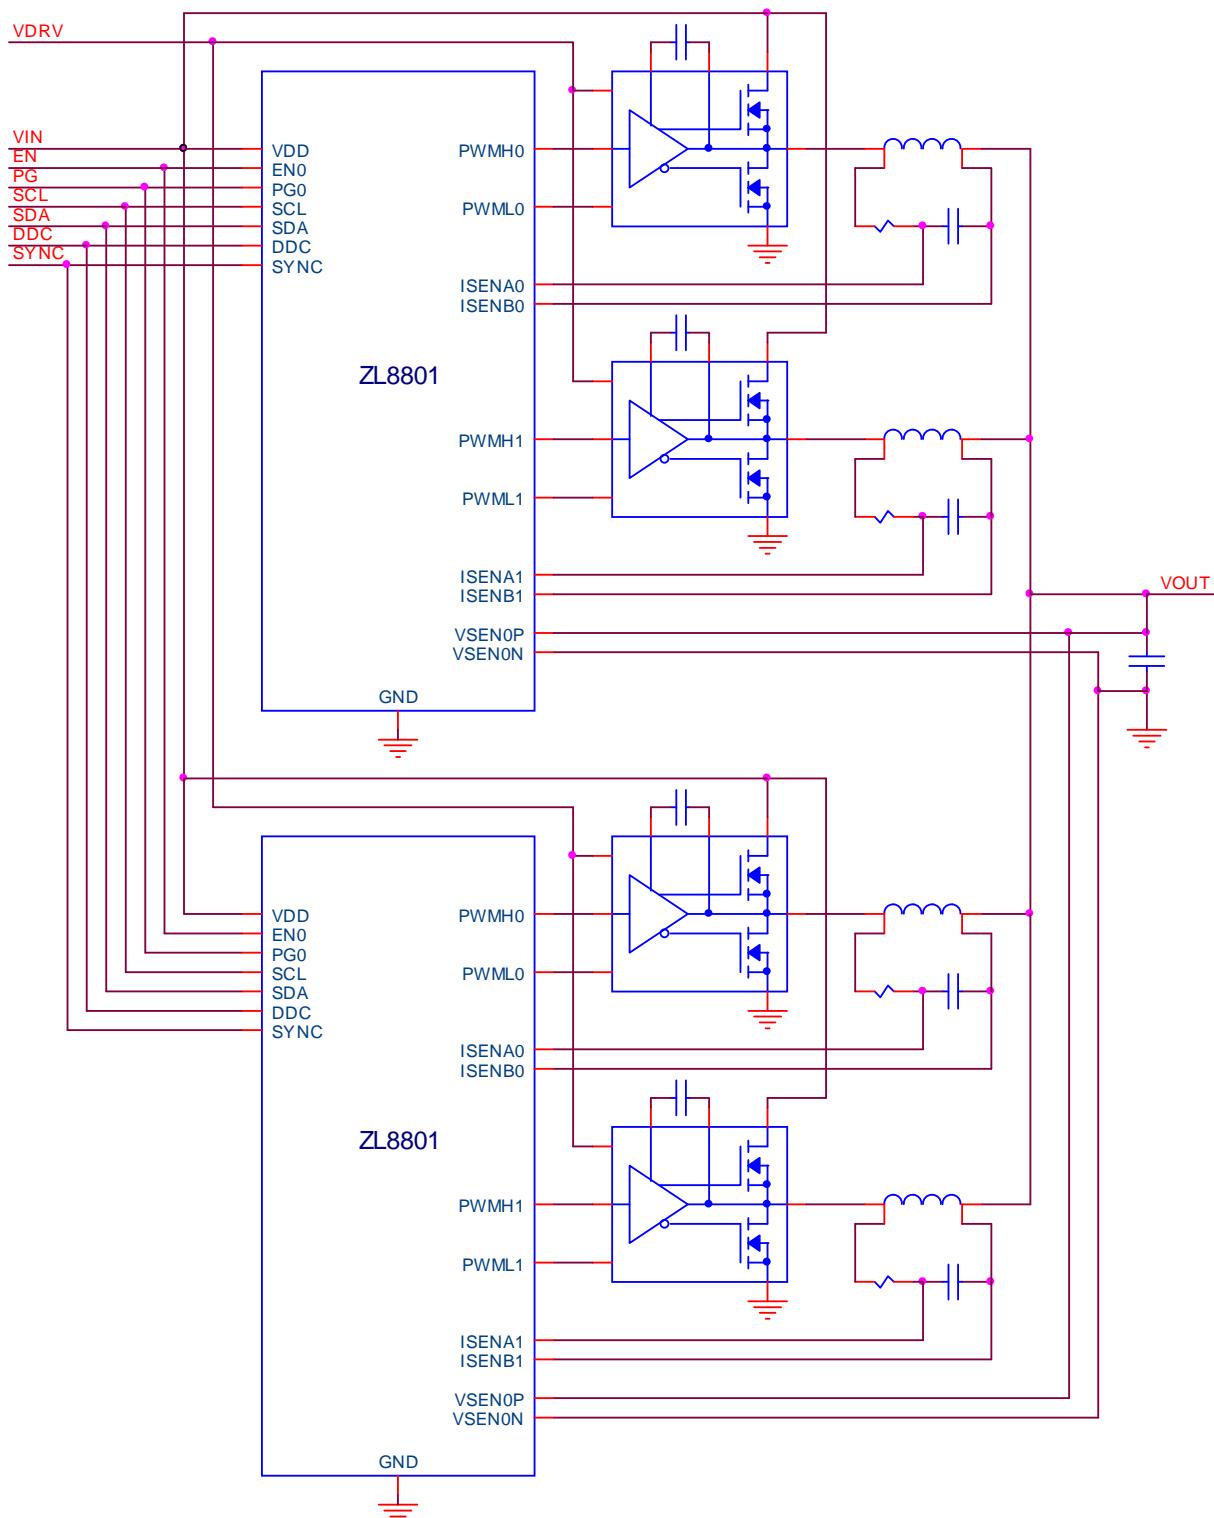


FIGURE 2. ZL8801-4PH-DEMO1Z BLOCK DIAGRAM

## Functional Description

The ZL8801-4PH-DEMO1Z provides all circuitry required to demonstrate most of the features of the ZL8801 in a multidevice current sharing application. The ZL8801-4PH-DEMO1Z has a functionally-optimized ZL8801 circuit layout that allows efficient operation up to the maximum output current (with airflow). Power and load connections are provided by Banana jacks.

When the ZL8801-4PH-DEMO1Z board is removed from the shipping box it is ready to be powered on by using the Enable Switch. PMBus operation can be configured by using the PowerNavigator™ GUI. Headers are provided at opposite ends of the board for connecting a USB to SMBus Dongle and for daisy chaining other Intersil Digital Power Evaluation and Demo Boards.

A majority of the features of the ZL8801, such as compensation free ChargeMode control, soft-start delay, ramp times, supply sequencing, and voltage margining are available on this evaluation board. For sequencing and Fault Spreading demonstration, the board can be connected to any other demonstration board that supports the Digital-DC™ (DDC) bus. Voltage Tracking is not supported on the ZL8801-4PH-DEMO1Z. [Figure 1](#) shows the top view of the PWB.

## Operating Range

The ZL8801-4PH-DEMO1Z is preconfigured to the following specifications:

TABLE 2.

V <sub>IN</sub>	V <sub>OUT</sub>	I <sub>OUT</sub>	f <sub>SW</sub>	FAULT RESPONSE
6.5V to 14V	1.0V	40A/Ph, 160A	515kHz	Shutdown

The ZL8801-4PH-DEMO1Z's dual ZL8801 controllers reside at address 0x20 and 0x21. The preconfigured operation parameters can be changed by using the PowerNavigator GUI.

The ZL8801-4PH-DEMO1Z has been optimized for a nominal switching frequency of 515kHz, this frequency provides a good compromise between packaging density and efficiency relative to the selected power train. The switching frequency can be changed to operate anywhere between 300kHz and 1000kHz.

## PCB Layout Guidelines

The ZL8801-4PH-DEMO1Z Board layout has been optimized for power density, electrical and thermal performance. The following key features are:

- Thermal vias connected to a large common SGND plane is used for each ZL8801 on Inner 1.
- I<sub>SENSE</sub> nets are Kelvin connected to each output inductor.
- V<sub>SENSE</sub> nets are Kelvin connected to the point of regulation.
- One SGND plane established for both ZL8801 controllers.
- SGND plane for each controller duplicated on bottom layer with thermal vias to aid in heat removal.

## Quick Start Guide

### Stand Alone Operation

1. Set Enable switch to "Disable".
2. Apply Load to V<sub>OUT+</sub>/V<sub>OUT-</sub>.
3. Connect the USB to SMBus adapter to J4 of the ZL8801-4PH-DEMO1Z.
4. Connect the USB adapter cable to the host computer.
5. Connect V<sub>IN+</sub>/V<sub>IN-</sub> to a suitable input power source (supply turned off).
6. Install jumpers J1 and J2 to use onboard VRDRV linear regulator.
7. Turn input power supply on.
8. Set Enable switch to "Enable".
9. Monitor ZL8801-4PH-DEMO1Z board with an oscilloscope.
10. To demonstrate advanced features like Sequencing, and Fault Spreading connect other compatible Intersil Digital Power boards to J5 and J8.


## USB (PMBus) Operation

1. Set the Enable switch to "Disable".
2. Apply load to V<sub>OUT+</sub>/V<sub>OUT-</sub>.
3. Connect the USB to SMBus adapter to J4 of the ZL8801-4PH-DEMO1Z.
4. Connect the USB adapter cable to the host computer.
5. Connect V<sub>IN+</sub>/V<sub>IN-</sub> to a suitable input power source (supply turned off).
6. Install jumpers J1 and J2 to use onboard VRDRV linear regulator.
7. Install the PowerNavigator software on the host computer.
8. Turn the input power source on, the demo board comes configured to produce an output voltage of 1.0V. Use the GUI or modify the configuration file to operate at Vout up to 3.6V.
9. Run the PowerNavigator program and select the "Monitor Hardware" option and then click the Start button.
10. Using the Monitor View change the enable mode to "PMBus Enable".
11. Click on the Enable button to turn on the ZL8801-4PH-DEMO1Z and use the GUI to monitor.

## Default Configuration File

The ZL8801-4PH-DEMO1Z comes preconfigured with the following configuration files ZL8801\_0x20.txt and ZL8801\_0x21.txt the files are printed below for convenience.

```
# ZL8801-1 0x21
RESTORE_FACTORY
STORE_DEFAULT_ALL
STORE_USER_ALL
RESTORE_DEFAULT_ALL
STORE_DEFAULT_ALL
RESTORE_USER_ALL
FREQUENCY_SWITCH      515
INTERLEAVE           0x0000
SEQUENCE             0x0000
TON_DELAY             5
TON_RISE              5
TOFF_DELAY            5
TOFF_FALL             5
TRACK_CONFIG          0x00
ON_OFF_CONFIG         0x17
VOUT_COMMAND          1.0
VOUT_MAX              3.5
VOUT_MARGIN_HIGH      1.05
VOUT_MARGIN_LOW       0.95
VOUT_MARGIN_RATIO     0xCA80
VOUT_DROOP            0.20
VOUT_OV_FAULT_LIMIT   1.20
VOUT_OV_FAULT_RESPONSE 0x80
VOUT_UV_FAULT_LIMIT   0.80
VOUT_UV_FAULT_RESPONSE 0X80
VOUT_CAL_OFFSET        0.0
VOUT_TRANSITION_RATE   1.0
MIN_VOUT_REG          150
VIN_OV_WARN_LIMIT     13.0
VIN_OV_FAULT_LIMIT    14.4
VIN_OV_FAULT_RESPONSE 0x80
VIN_UV_WARN_LIMIT     6.50
VIN_UV_FAULT_LIMIT    6.00
VIN_UV_FAULT_RESPONSE 0x80
POWER_GOOD_ON          0.90
POWER_GOOD_DELAY       5.00
IOUT_OC_FAULT_LIMIT   62
IOUT_UC_FAULT_LIMIT    -50.0
IOUT0_CAL_GAIN         0.25
IOUT0_CAL_OFFSET       -1.60
IOUT1_CAL_GAIN         0.25
IOUT1_CAL_OFFSET       -1.60
IOUT_AVG_OC_FAULT_LIMIT 62.0
IOUT_AVG_UC_FAULT_LIMIT -62.0
IIN_CAL_GAIN           0.0
OT_WARN_LIMIT          110.0
OT_FAULT_LIMIT         125.0
OT_FAULT_RESPONSE      0x80
UT_WARN_LIMIT          -30.0
UT_FAULT_LIMIT         -45.0
UT_FAULT_RESPONSE      0x80
DEADTIME               0x0C0C
DEADTIME_CONFIG         0x8686
DEADTIME_MAX            0x0C0C
ISENSE_CONFIG           0x5A04
USER_CONFIG              0x0603
MFR_USER_CONFIG          0x0002
DDC_CONFIG                0x103
OVUV_CONFIG              0x00
DEADTIME                 0x2020
DEADTIME_CONFIG          0x8686
ASCR_CONFIG                0x15A00C8
TRACK_CONFIG              0x00
DDC_GROUP                  0x202000
USER_GLOBAL_CONFIG        0x0002
STORE_USER_ALL
```

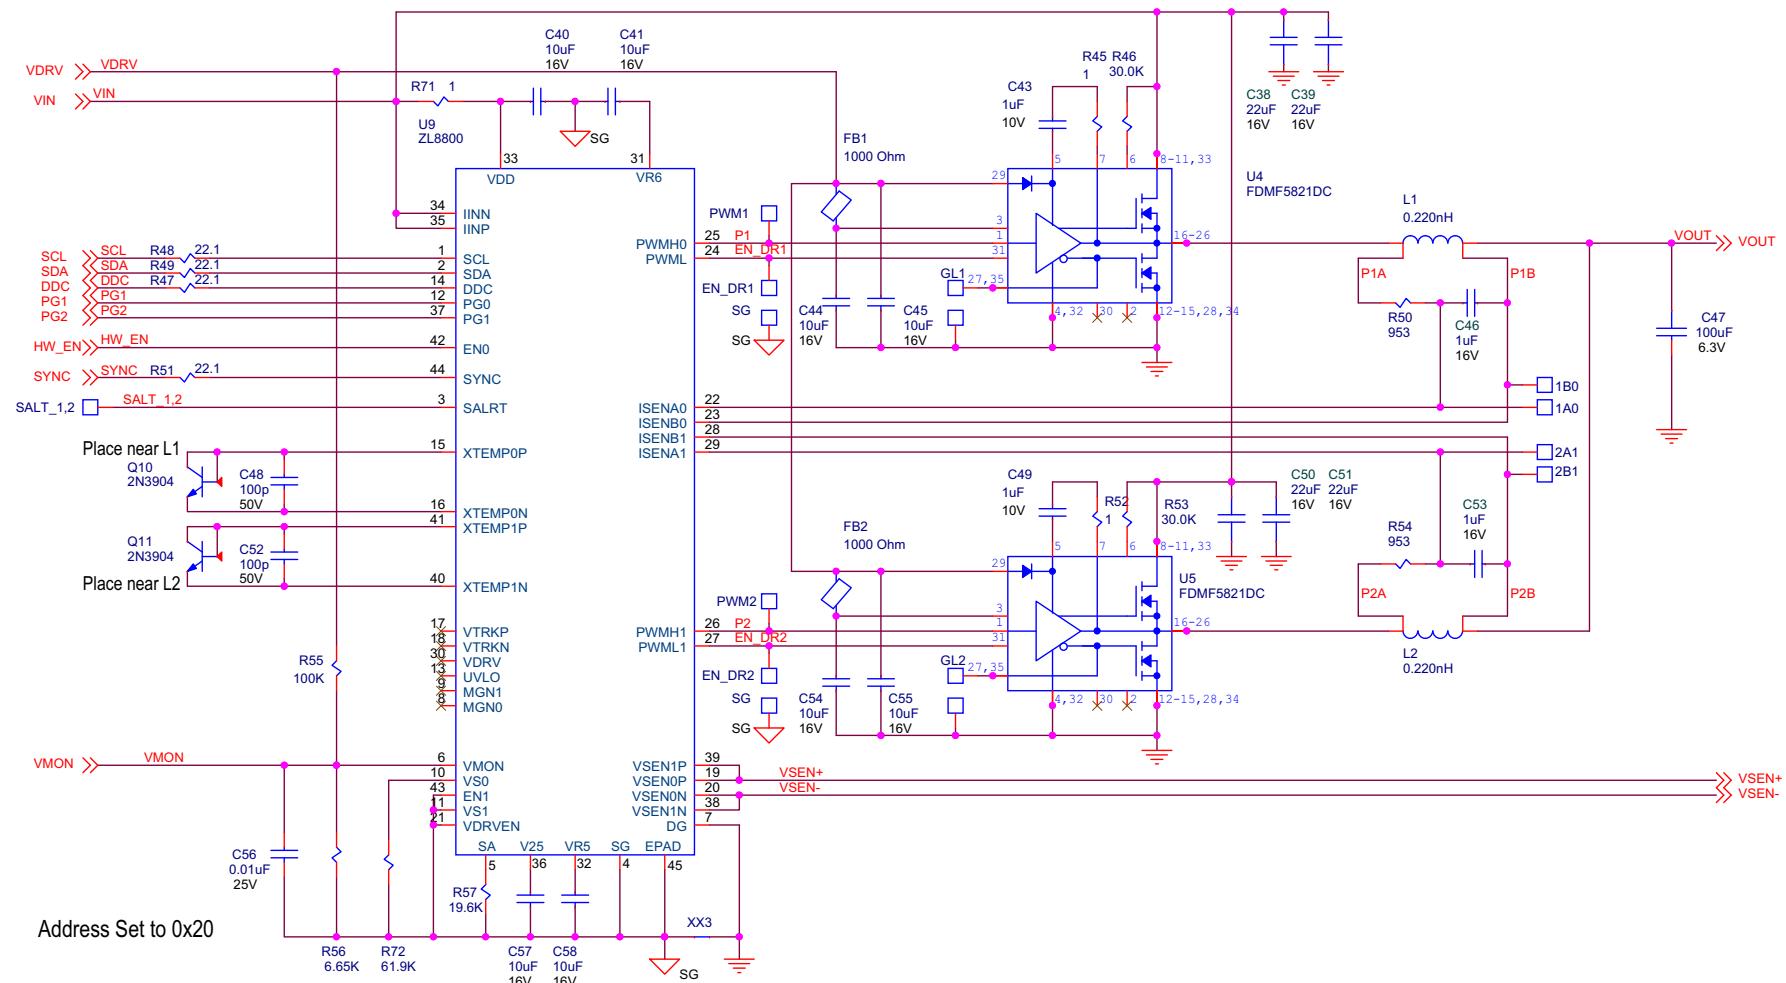
**ZL8801-4PH-DEMO1Z Schematic (Phase 1,2)**

# ZL8801-4PH-DEMO1Z Schematic (Interface)

Submit Document Feedback

6

intersil®

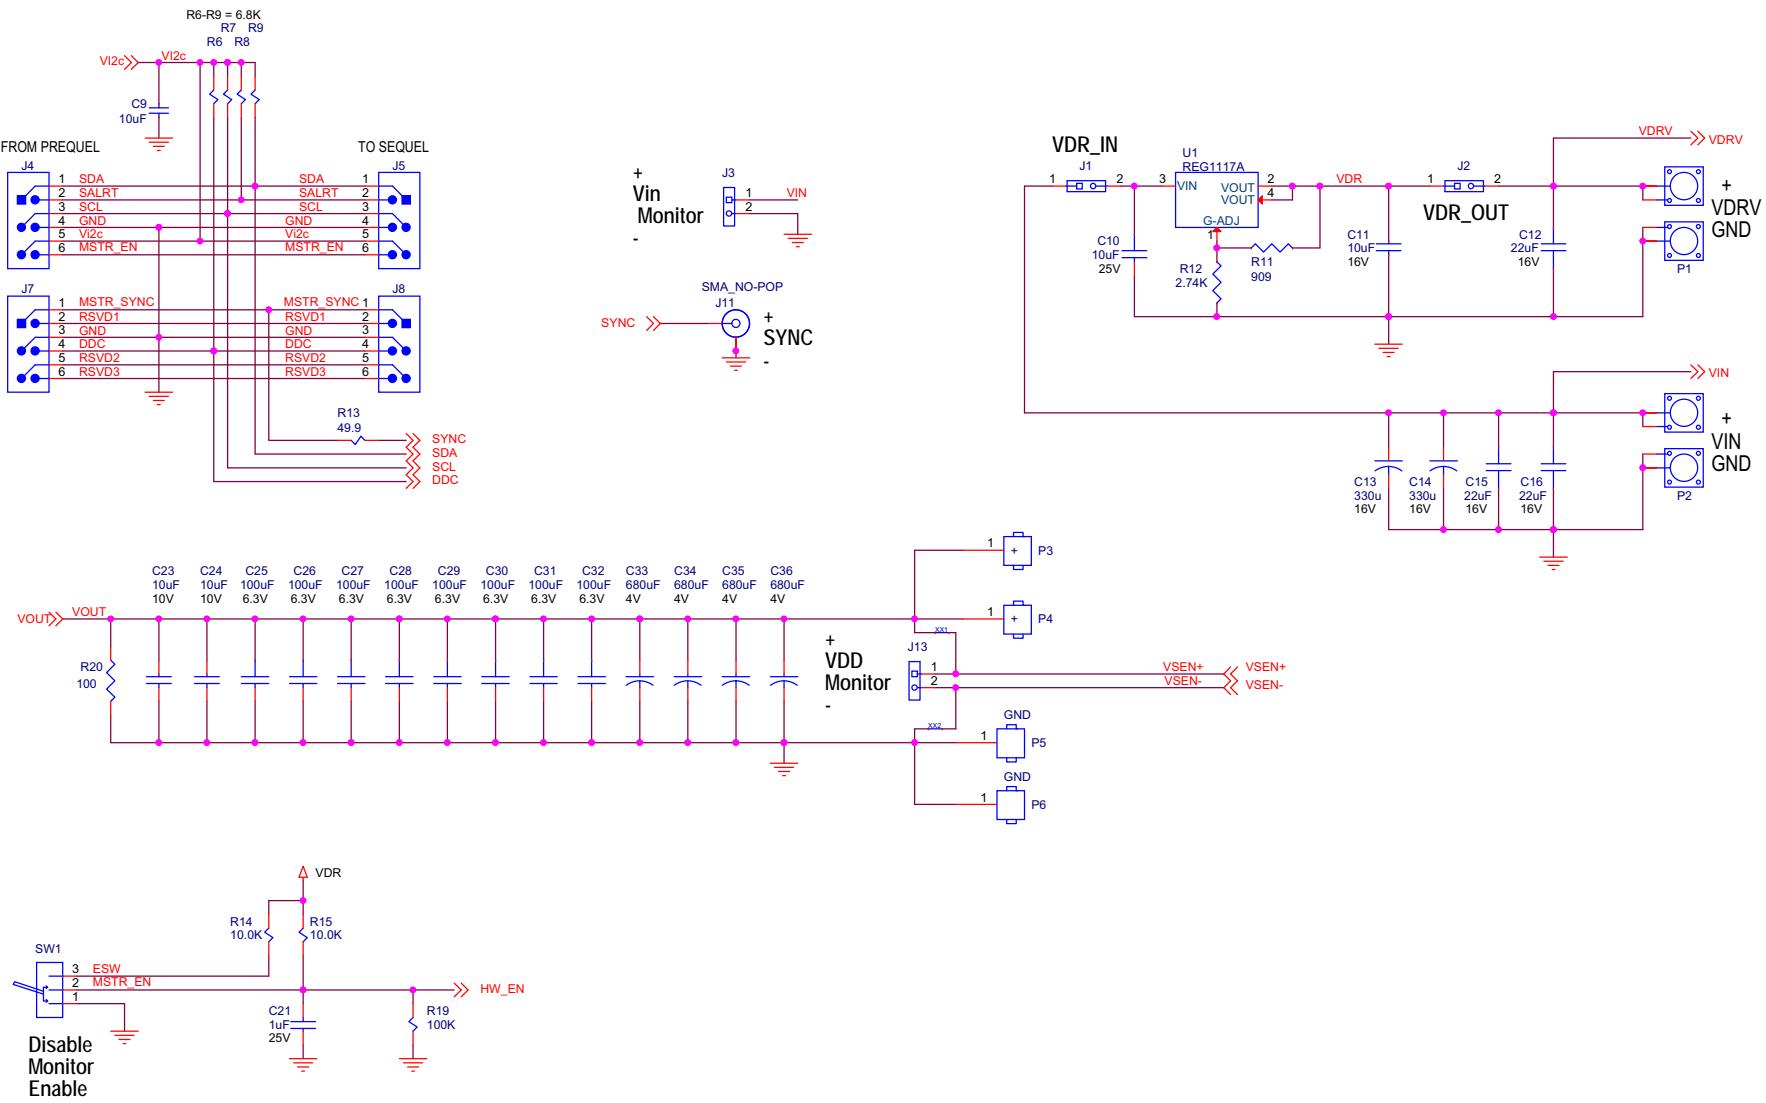


# ZL8801-4PH-DEMO1Z Schematic (Phase 3,4)

Submit Document Feedback


7

**intersil**

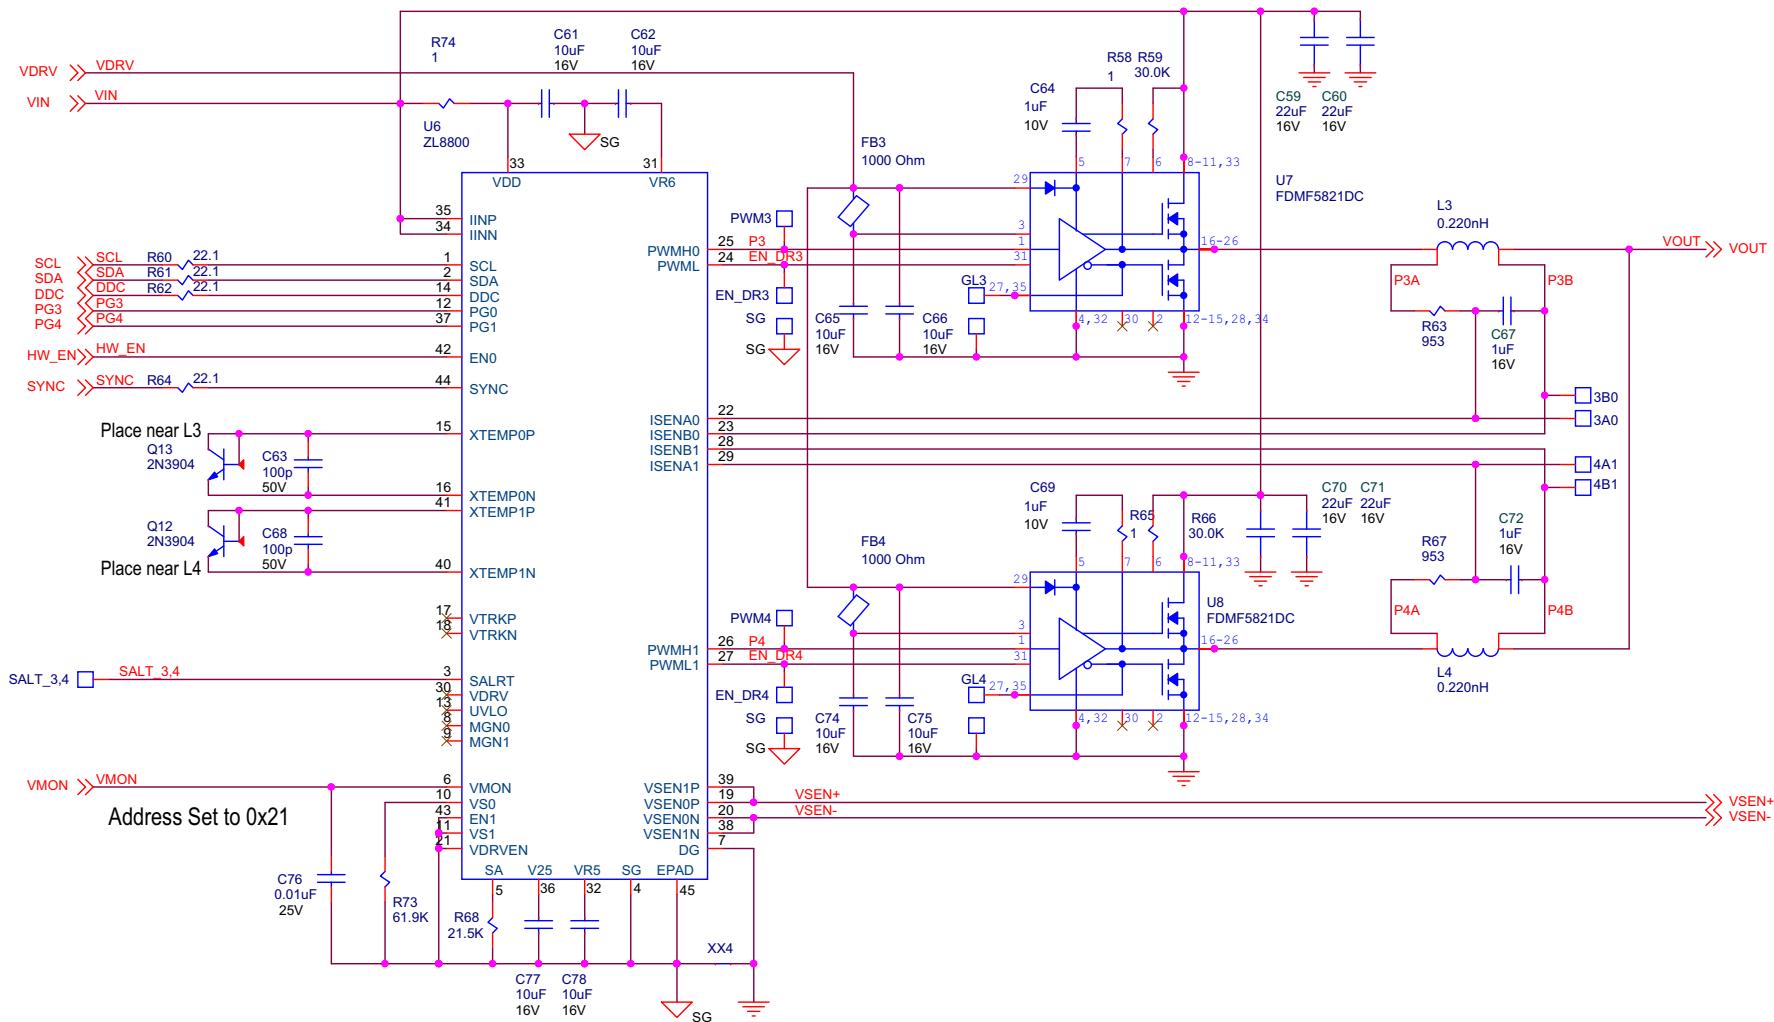

**Application Note 1948**

## ZL8801 Schematic (Power-Good Logic)

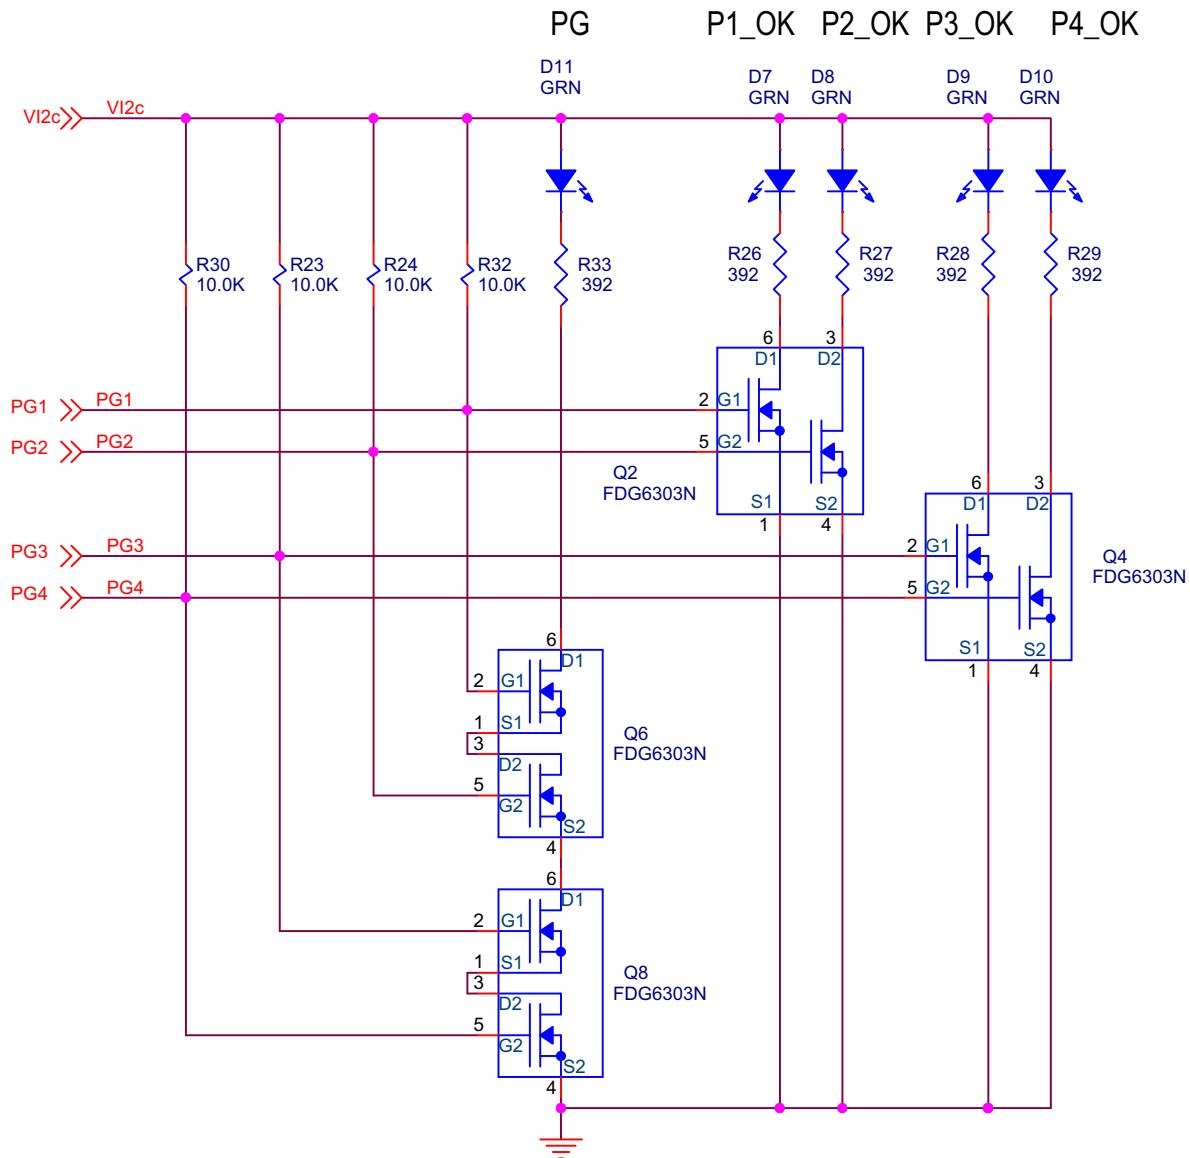

# Application Note 1948

## Bill of Materials

ITEM	QTY	REFERENCE	VALUE	TOL	RATING	TYPE	PCB FOOTPRINT	MANUFACTURER	PART NUMBER
1	1	C9	10µF	10%	10V	X7R	SM0805	Taiyo Yuden	LMK212B7106KG-TD
2	1	C10	10µF	10%	25V	X5R	SM1206	Panasonic - ECG	ECJ-3YB1E106K
3	17	C11, C40, C41, C44, C45, C54, C55, C57, C58, C61, C62, C65, C66, C74, C75, C77, C78	10µF	10%	16V	X5R	SM0805	TDK	C2012X5R1C106K/0.85
4	11	C12, C15, C16, C38, C39, C50, C51, C59, C60, C70, C71	22µF	20%	16V	X5R	SM1206	Murata	GRM31CR61C226ME15L
5	2	C13, C14	330µF	20%	16V	AL POLY	SM_CAP_10.5X10.5_PXA_FLD	United Chemi-Con	APXA160ARA331MJC0G
6	1	C21	1µF	10%	25V	X5R	SM0603	Taiyo Yuden	TMK107BJ105KA-T
7	2	C23, C24	10µF	10%	10V	X7R	SM0805	Murata	GRM21BR71A106KE51L
8	9	C25, C26, C27, C28, C29, C30, C31, C32, C47	100µF		6.3V	X5R	SM1210	Taiyo Yuden	JMK325BJ107MY-T
9	4	C33, C34, C35, C36	680µF	20%	4V	AL POLY	SM7343_KEMET_T530_BC	Kemet	T530Y687M004ATE005
10	4	C43, C49, C64, C69	1µF	10%	10V	X7R	SM0603	Taiyo Yuden	LMK107B7105KA-T
11	4	C46, C53, C67, C72	1µF	10%	16V	X7R	SM0603	TDK Corporation	C1608X7R1C105K
12	4	C48, C52, C63, C68	100pF	5%	50V	COG	SM0402_WSS	MURATA	GRM1555C1H101JZ01D
13	2	C56, C76	0.01µF	10%	25V	X7R	SM0402	Kemet	C0402C103K3RACTU
14	5	D7, D8, D9, D10, D11	GRN		2V		SM0805	Chicago Miniature	CMD17-21VGC
15	4	FB1, FB2, FB3, FB4	1000Ω		150mA	Ferrite	SM0402	Taiyo Yuden	BK1005HM102-T
16	4	J1, J2, J3, J13	2 POS			VERT	SIP2/100	Samtec	TSW-102-07-L-S
17	2	J4, J7	HDR_3X2_RA			RA	HDRM3DUALRA100X100	SAMTEC	TSW-103-08-T-D-RA
18	2	J5, J8	SKT_3X2_RA			RA	HDRF3DUALRA100X100	SAMTEC	SSQ-103-02-T-D-RA
19	1	J11	SMA_NO-POP				SMA_PCB_VJACK	Emerson	142-9701-211
20	4	L1, L2, L3, L4	0.220nH		70	Inductor	IND_SL3732_RXXXXX	ITG	SL3732_R22KHF
21	2	P1, P2	JACK		15A		JACK	Emerson	108-0740-001
22	2	P3, P4					CON_LUG		
23	2	P5, P6	GND				CON_LUG		
24	4	Q2, Q4, Q6, Q8	FDG6303N		25V	Dual N-Chan	SC70_6	Fairchild	FDG6303N
25	4	Q10, Q11, Q12, Q13	2N3904		40V	NPN	SOT-23	ON SEMI	MMBT3904LT1G
26	4	R6, R7, R8, R9	6.8k	1%		1/16W	SM0402	Panasonic - ECG	ERJ-2RKF6801X
27	1	R11	909	1%	100mW	THK FILM	SM0603	Panasonic - ECG	ERJ-3EKF9090V
28	1	R12	2.74k	1%	100mW	THK FILM	SM0603	Panasonic - ECG	ERJ-3EKF2741V
29	1	R13	49.9	1%	100mW	THK FILM	SM0402	Panasonic - ECG	ERJ-2RKF49R9X
30	2	R14, R15	10.0k	1%	63mW	THK FILM	SM0402	Panasonic - ECG	ERJ-2RKF1002X
31	1	R19	100k	1%	63mW	THK FILM	SM0402	Panasonic - ECG	ERJ-2RKF1003X
32	1	R20	100	1%	100mW	THK FILM	SM0805	Panasonic - ECG	ERJ-6ENF1000V
33	4	R23, R24, R30, R32	10.0k	1%		1/16W	SM0402	Yageo	RC0402FR-0710KL
34	5	R26, R27, R28, R29, R33	392	1%		THK FILM	SM0603	Panasonic - ECG	ERJ-3EKF3920V

# Application Note 1948

## Bill of Materials (Continued)

ITEM	QTY	REFERENCE	VALUE	TOL	RATING	TYPE	PCB FOOTPRINT	MANUFACTURER	PART NUMBER
35	6	R45, R52, R58, R65, R71, R74	1	1%		1/16W	SM0603	Panasonic - ECG	ERJ-3RQF1R0V
36	4	R46, R53, R59, R66	30.0k	1%		1/16W	SM0603	Panasonic - ECG	ERJ-2GEJ303X
37	8	R47, R48, R49, R51, R60, R61, R62, R64	22.1	1%			SM0402	Panasonic	ERJ-2RKF22R1X
38	4	R50, R54, R63, R67	953	1%		Resistor	SM0603	Panasonic	ERJ-3EKF9530V
39	1	R55	100k	1%		1/16W	SM0402	Vishay/Dale	CRCW0402100KFKED
40	1	R56	6.65k	1%		1/16W	SM0402	Panasonic - ECG	ERJ-2RKF6651X
41	1	R57	19.6k	1%		1/16W	SM0402	Panasonic - ECG	ERJ-2RKF1962X
42	1	R68	21.5k	1%		1/16W	SM0402	Panasonic - ECG	ERJ-2RKF2152X
43	2	R72, R73	61.9k	1%		1/16W	SM0402	Panasonic - ECG	ERJ-2RKF6192X
44	1	SW1	SW_SPDT			PCB VERT	SW_TOG_ULTRAMIN_SPDT	NKK	G13AP-RO
45	1	U1	REG1117A				SOT_223_1234	Texas Instruments	REG1117A
46	4	U4, U5, U7, U8	FDMF5821DC		30V		PQFN31_SPS_5X5_P5S	Fairchild	FDMF5821DC
47	2	U6, U9	ZL8800				MLF44_7X7_DP	Intersil	ZL8801

## Typical Performance Curves

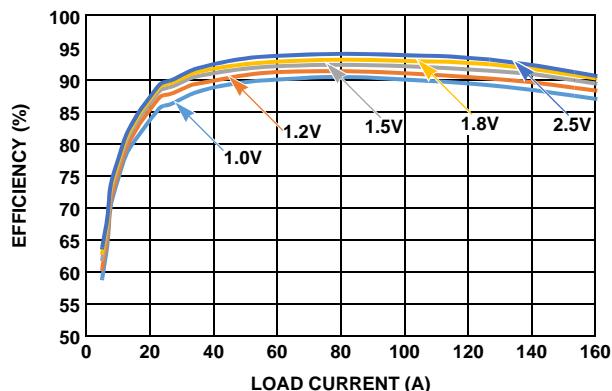


FIGURE 3. EFFICIENCY  $V_{IN} = 12V$ ,  $f_{SW} = 300\text{kHz}$

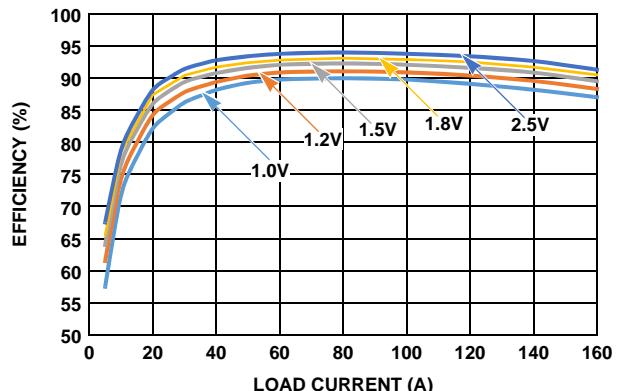


FIGURE 4. EFFICIENCY  $V_{IN} = 12V$ ,  $f_{SW} = 400\text{kHz}$

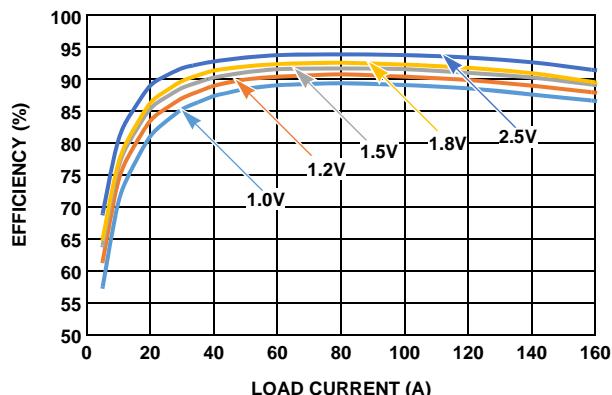


FIGURE 5. EFFICIENCY  $V_{IN} = 12V$ ,  $f_{SW} = 515\text{kHz}$

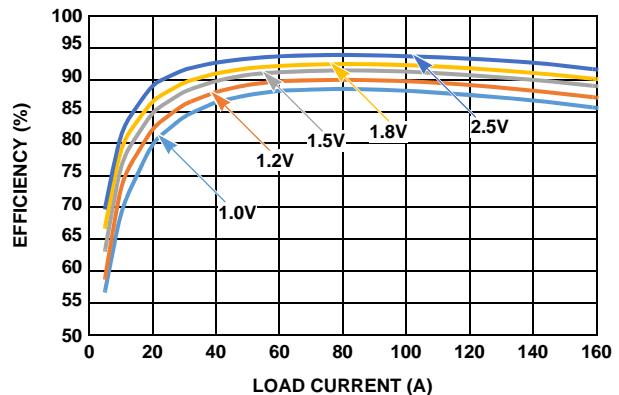


FIGURE 6. EFFICIENCY  $V_{IN} = 12V$ ,  $f_{SW} = 615\text{kHz}$

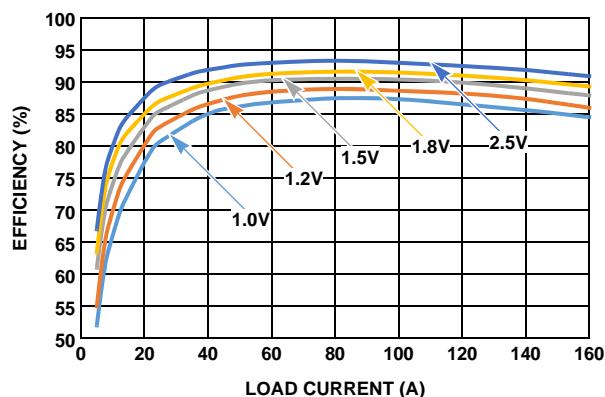


FIGURE 7. EFFICIENCY  $V_{IN} = 12V$ ,  $f_{SW} = 800\text{kHz}$

## Measured Data

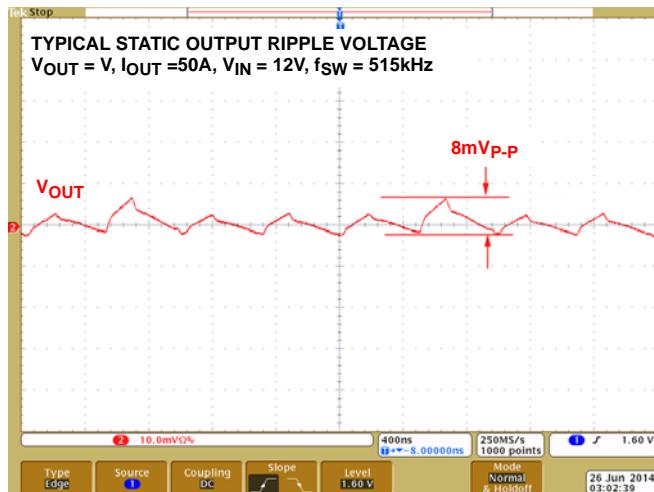


FIGURE 8. STATIC RIPPLE

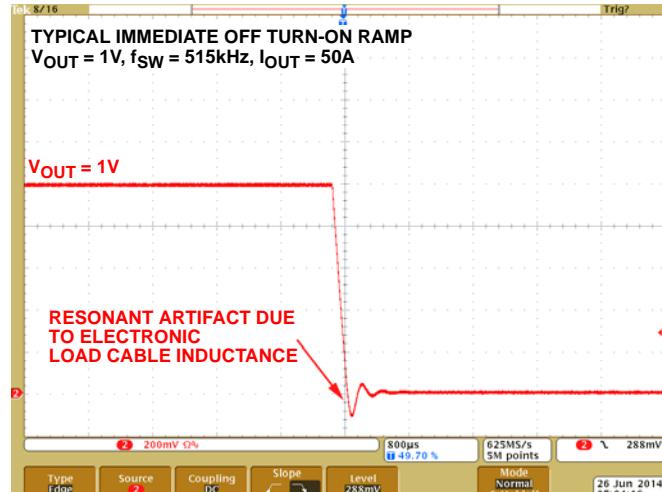


FIGURE 9. TURN-OFF RAMP

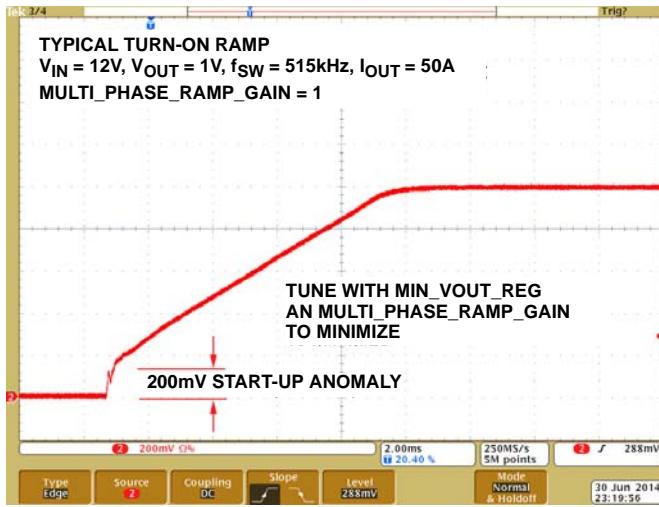


FIGURE 10. TURN-ON RAMP

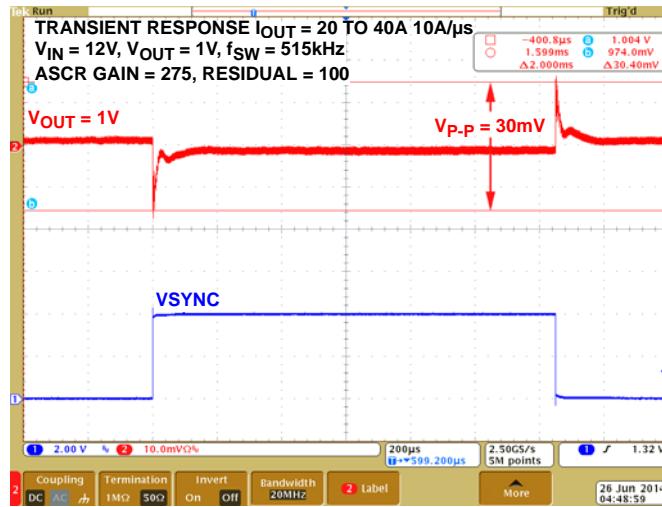


FIGURE 11. TRANSIENT RESPONSE

## ZL8801-4PH-DEMO1Z Evaluation Board and Dongle


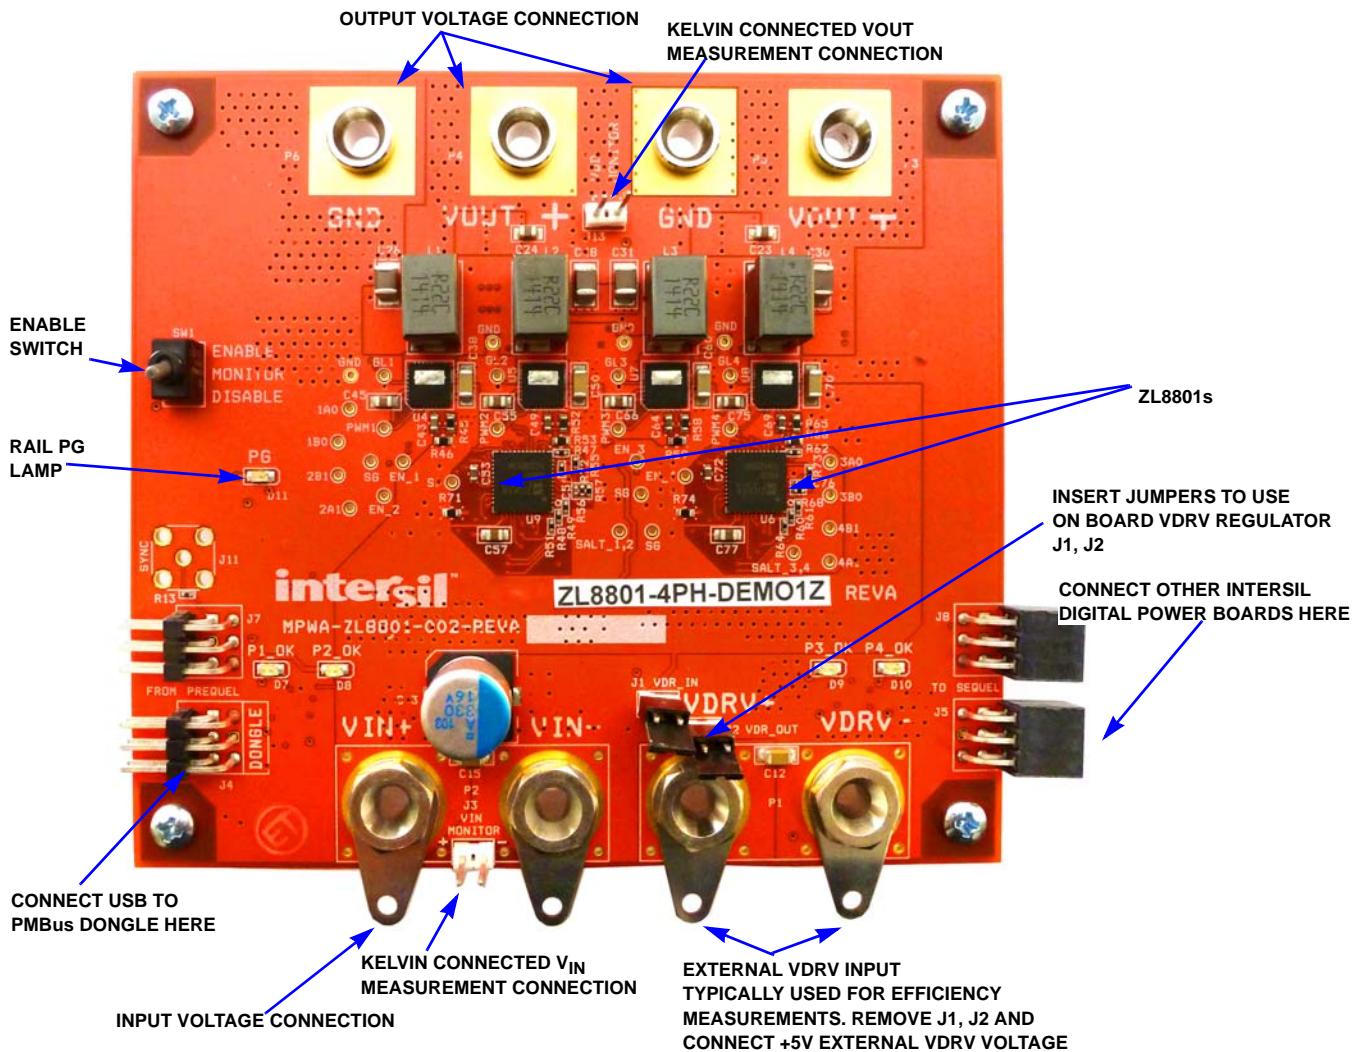


FIGURE 12. ZL8801-4PH-DEMO1Z CRITICAL COMPONENT LOCATION




FIGURE 13. USB TO PMBus DONGLE

## ZL8801-4PH-DEMO1Z Layout

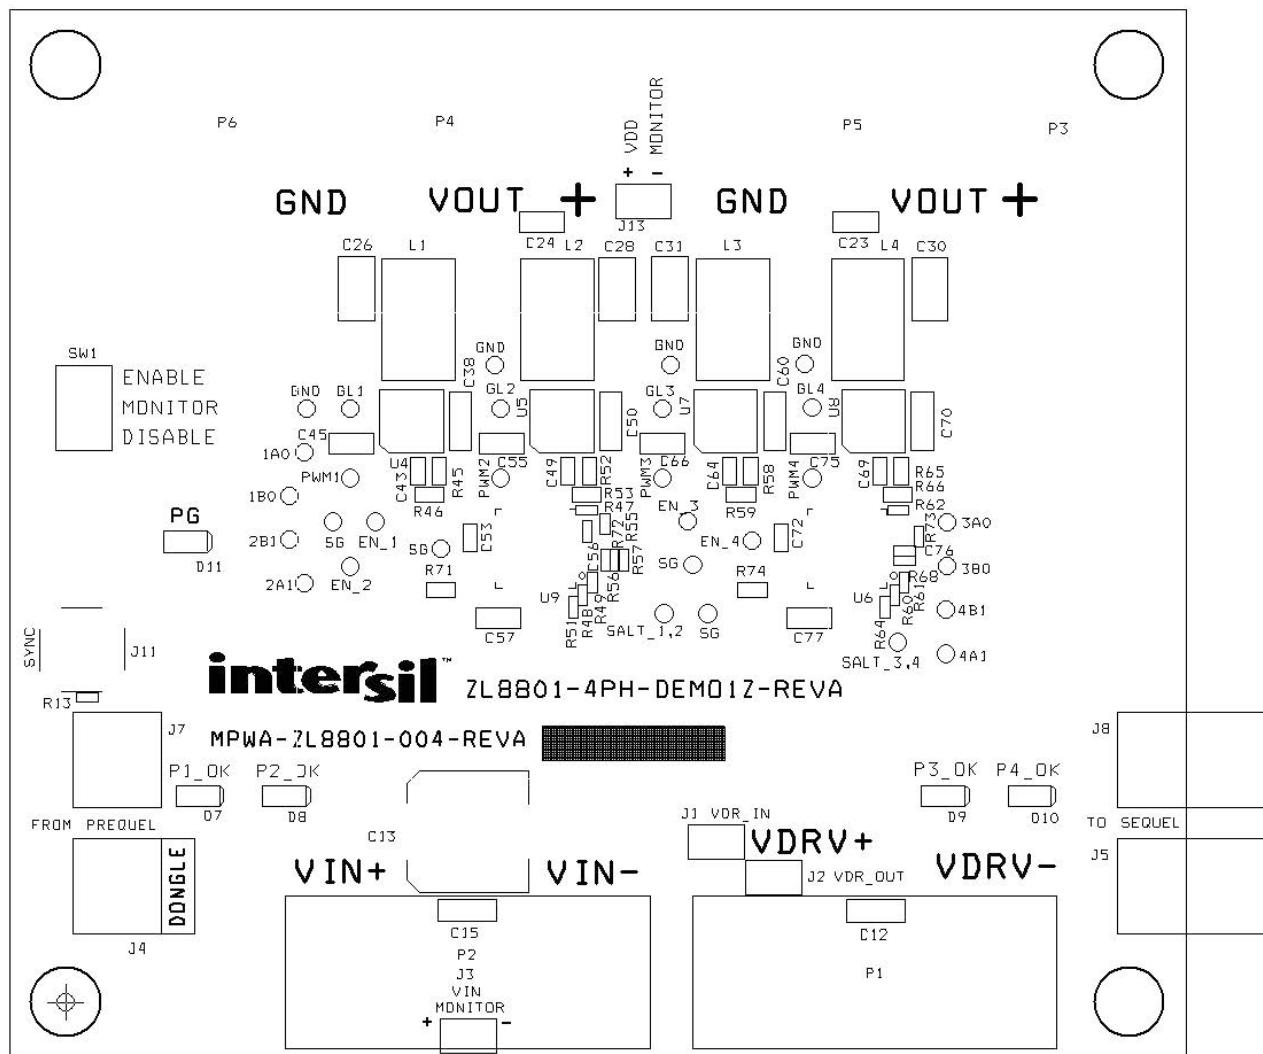


**FIGURE 14. TOP SILKSCREEN**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

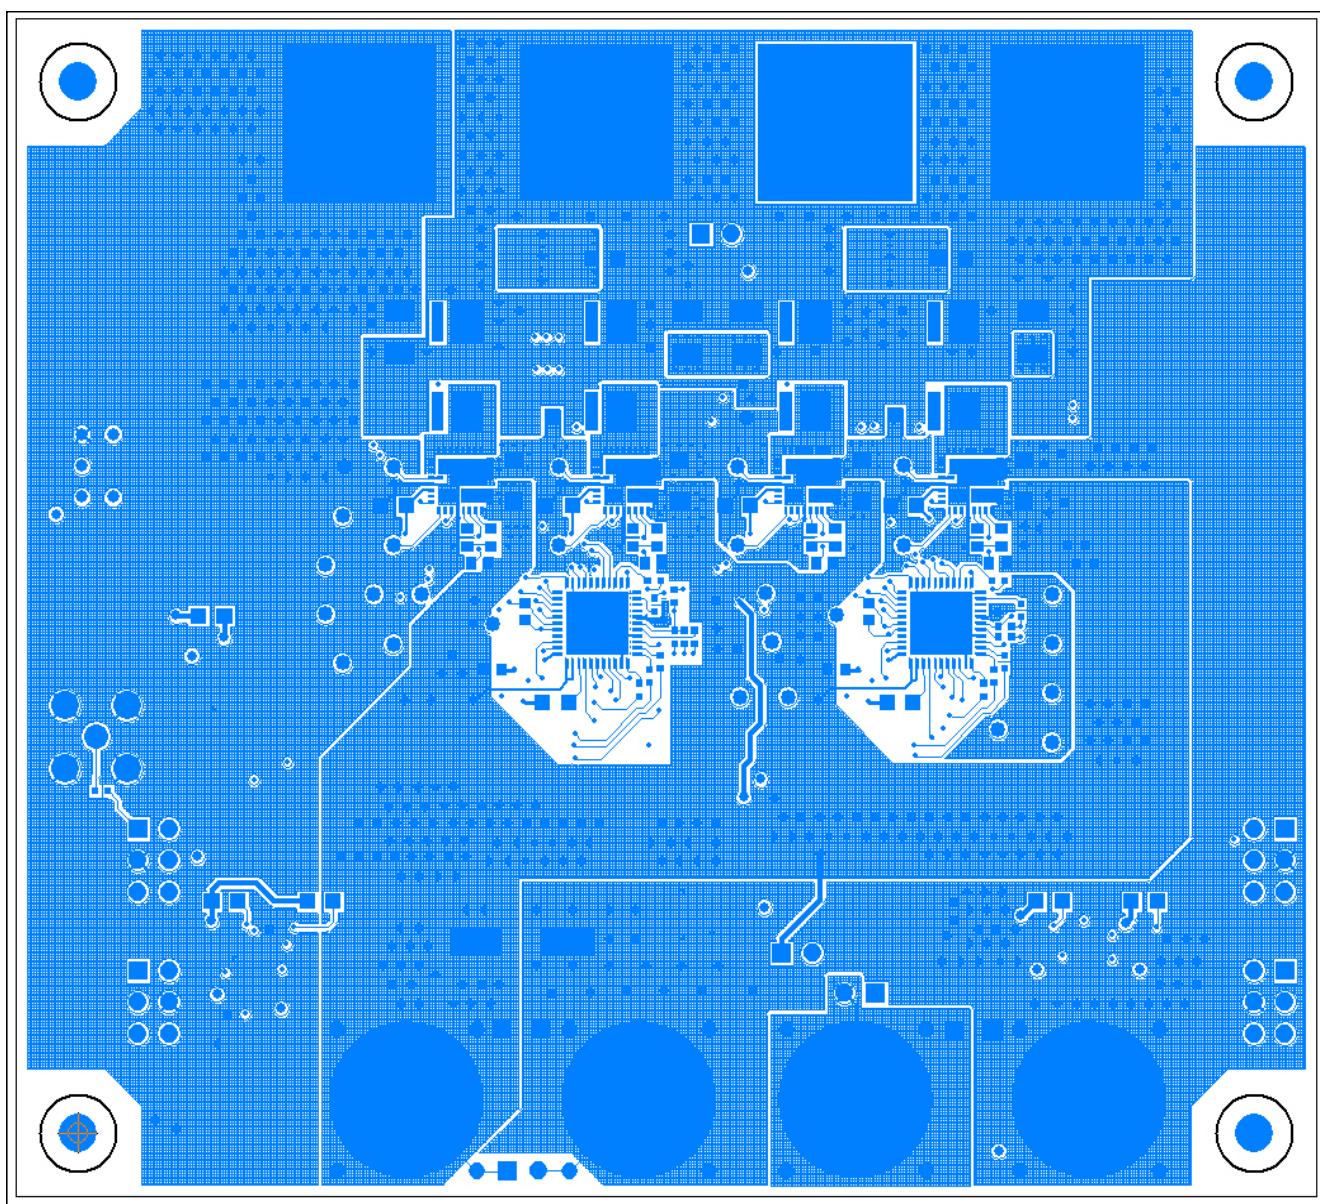


**FIGURE 15. TOP ETCH**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

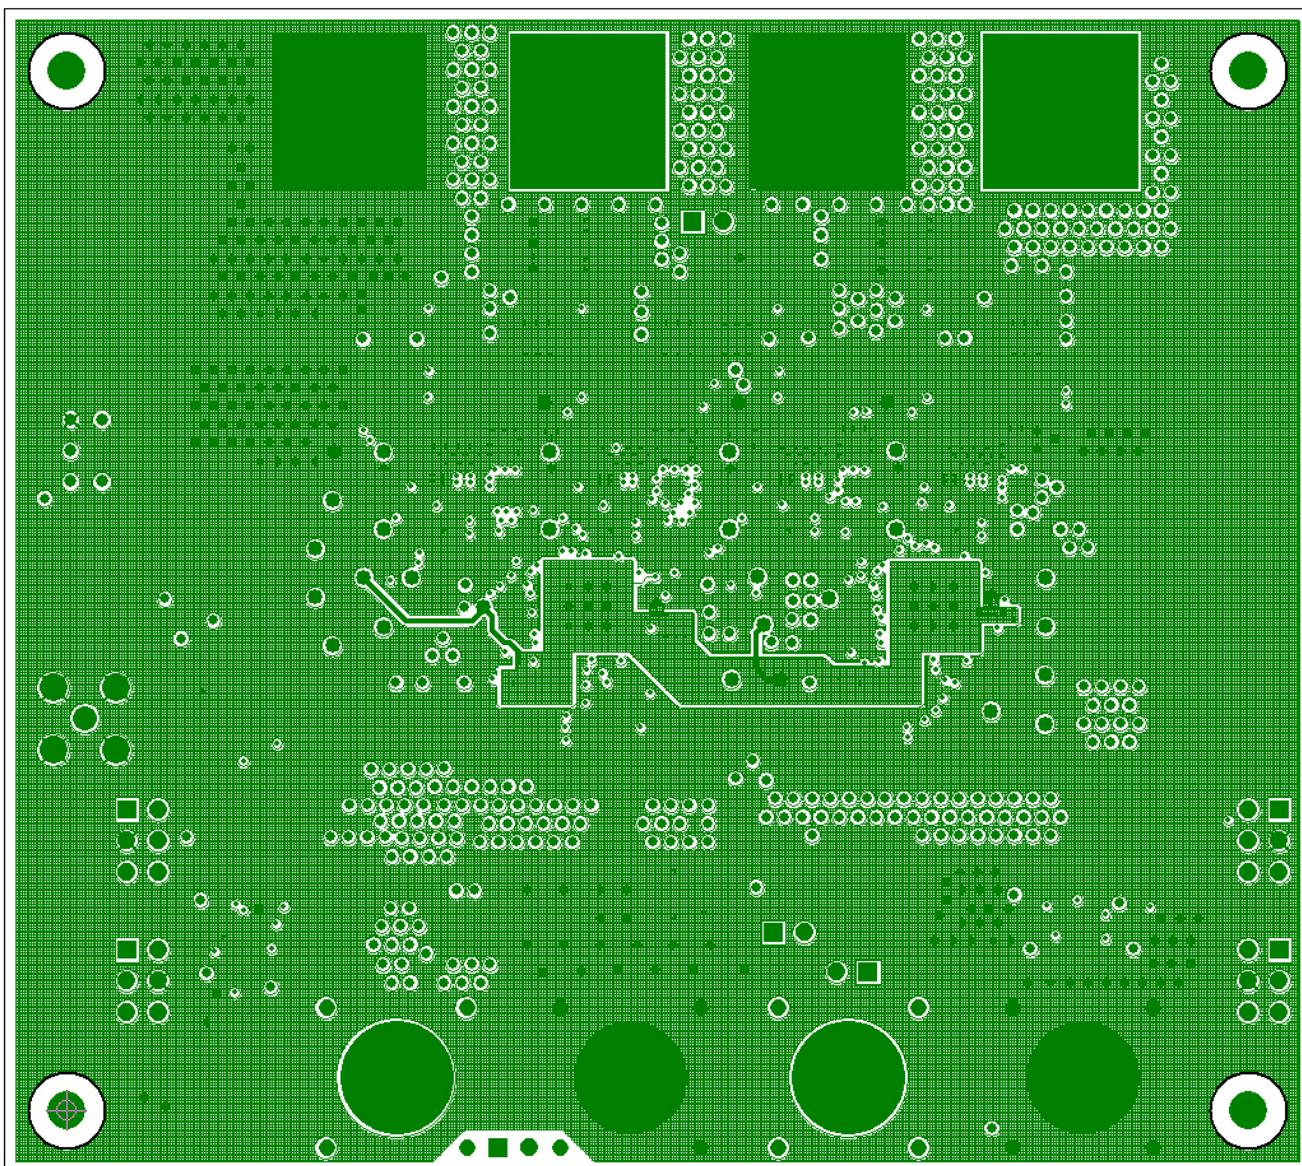


**FIGURE 16. INNER 1**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

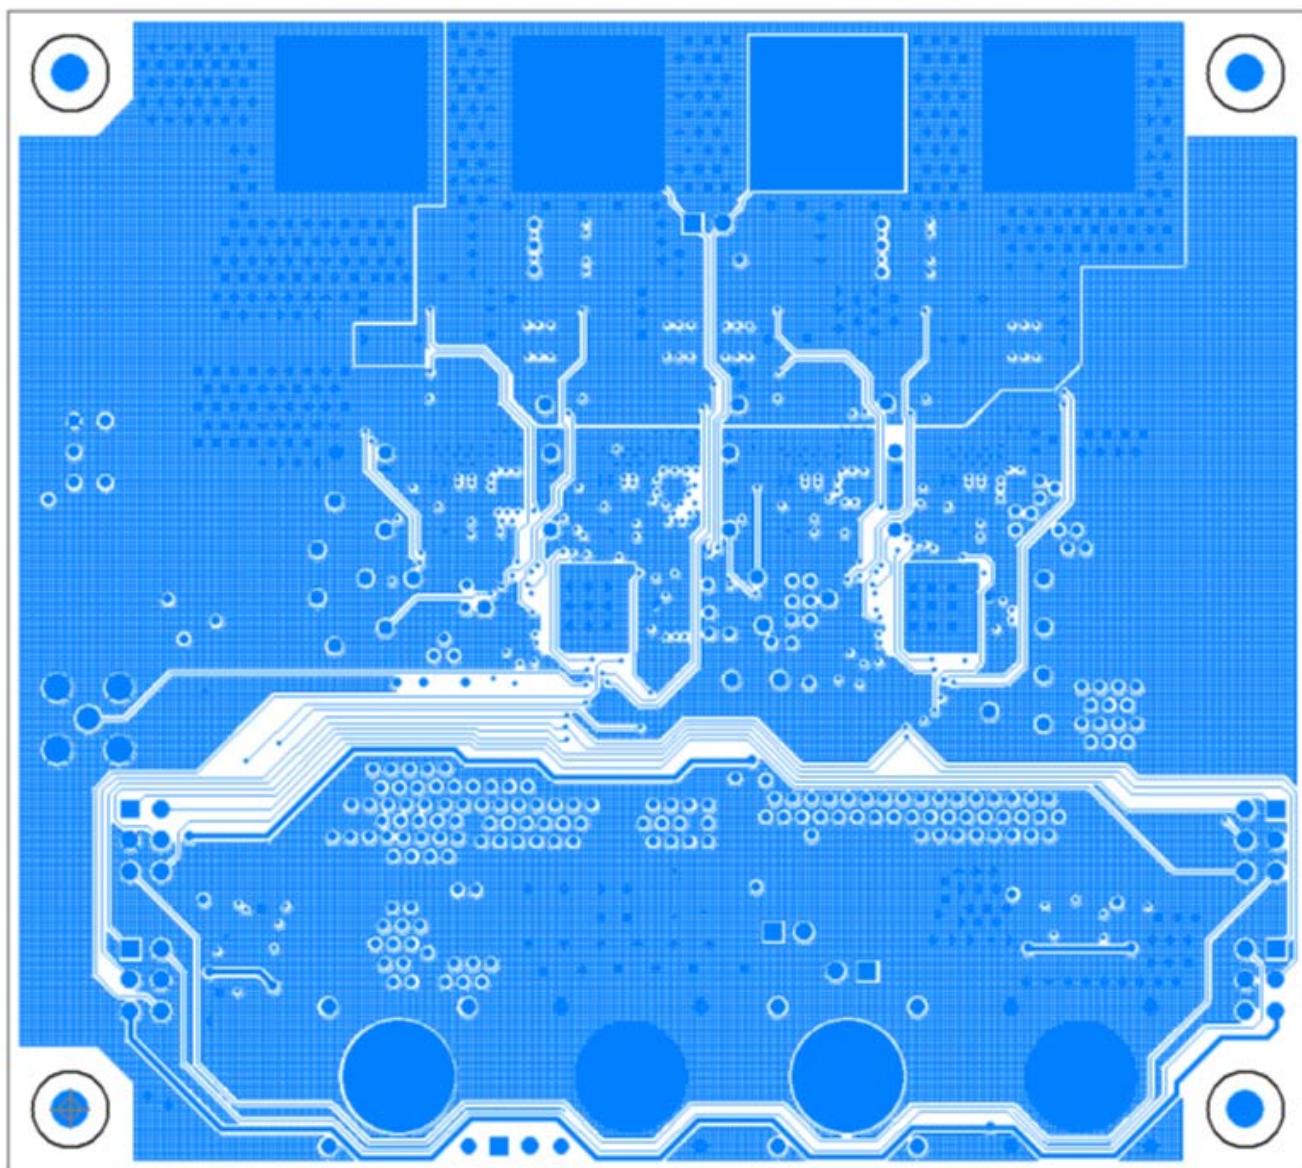


**FIGURE 17. INNER 2**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

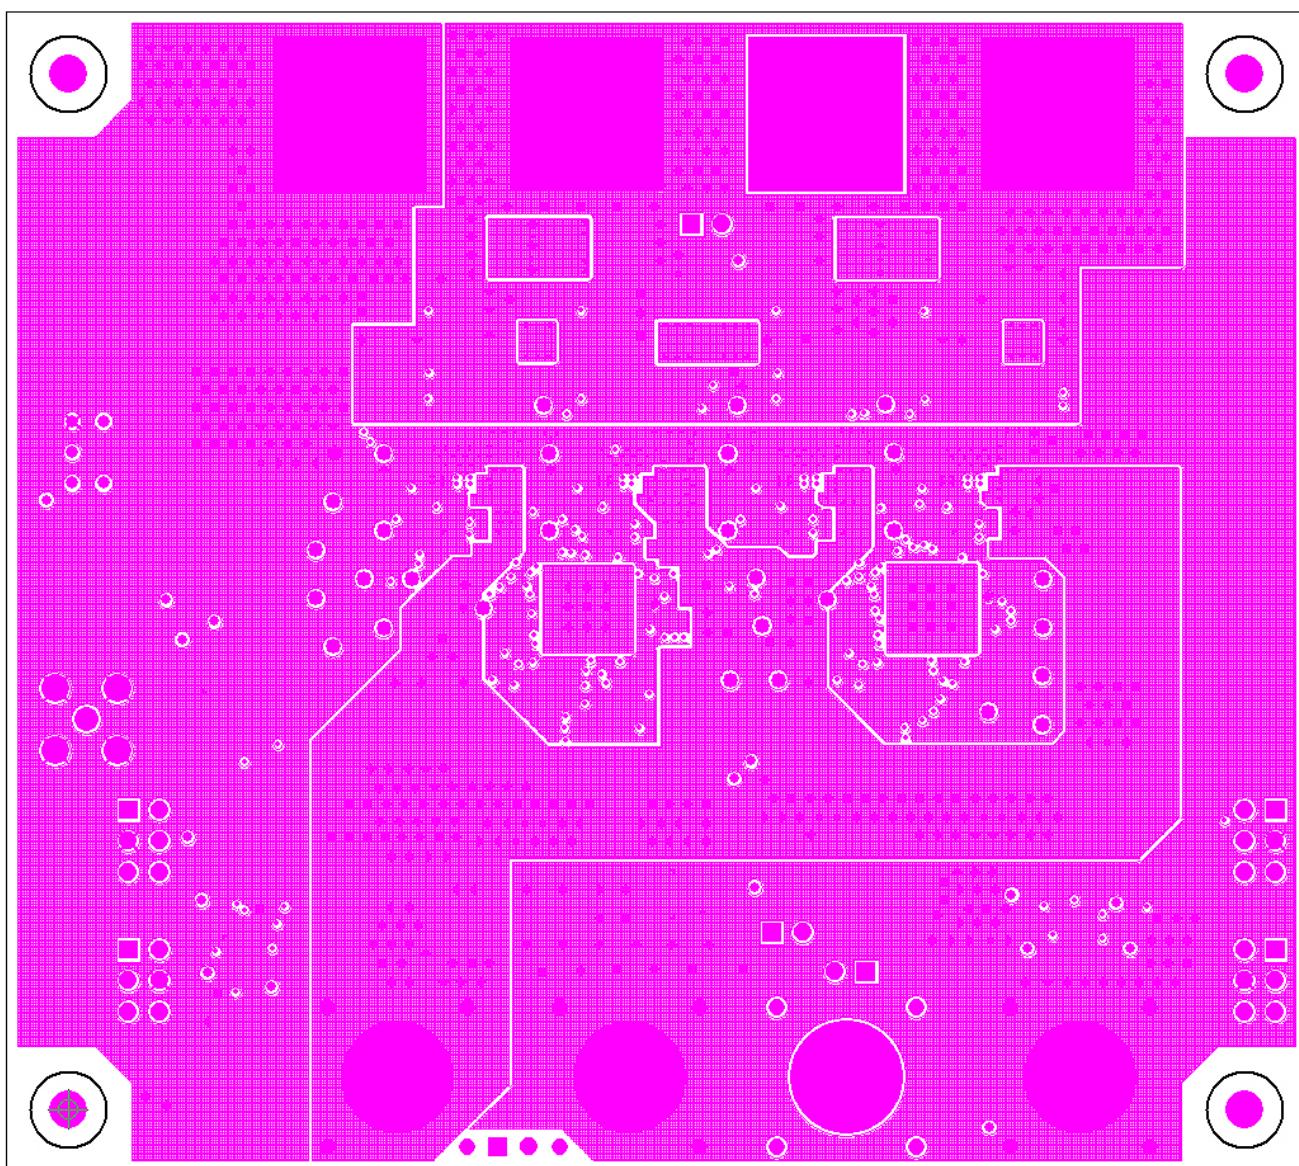


**FIGURE 18. INNER 3**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

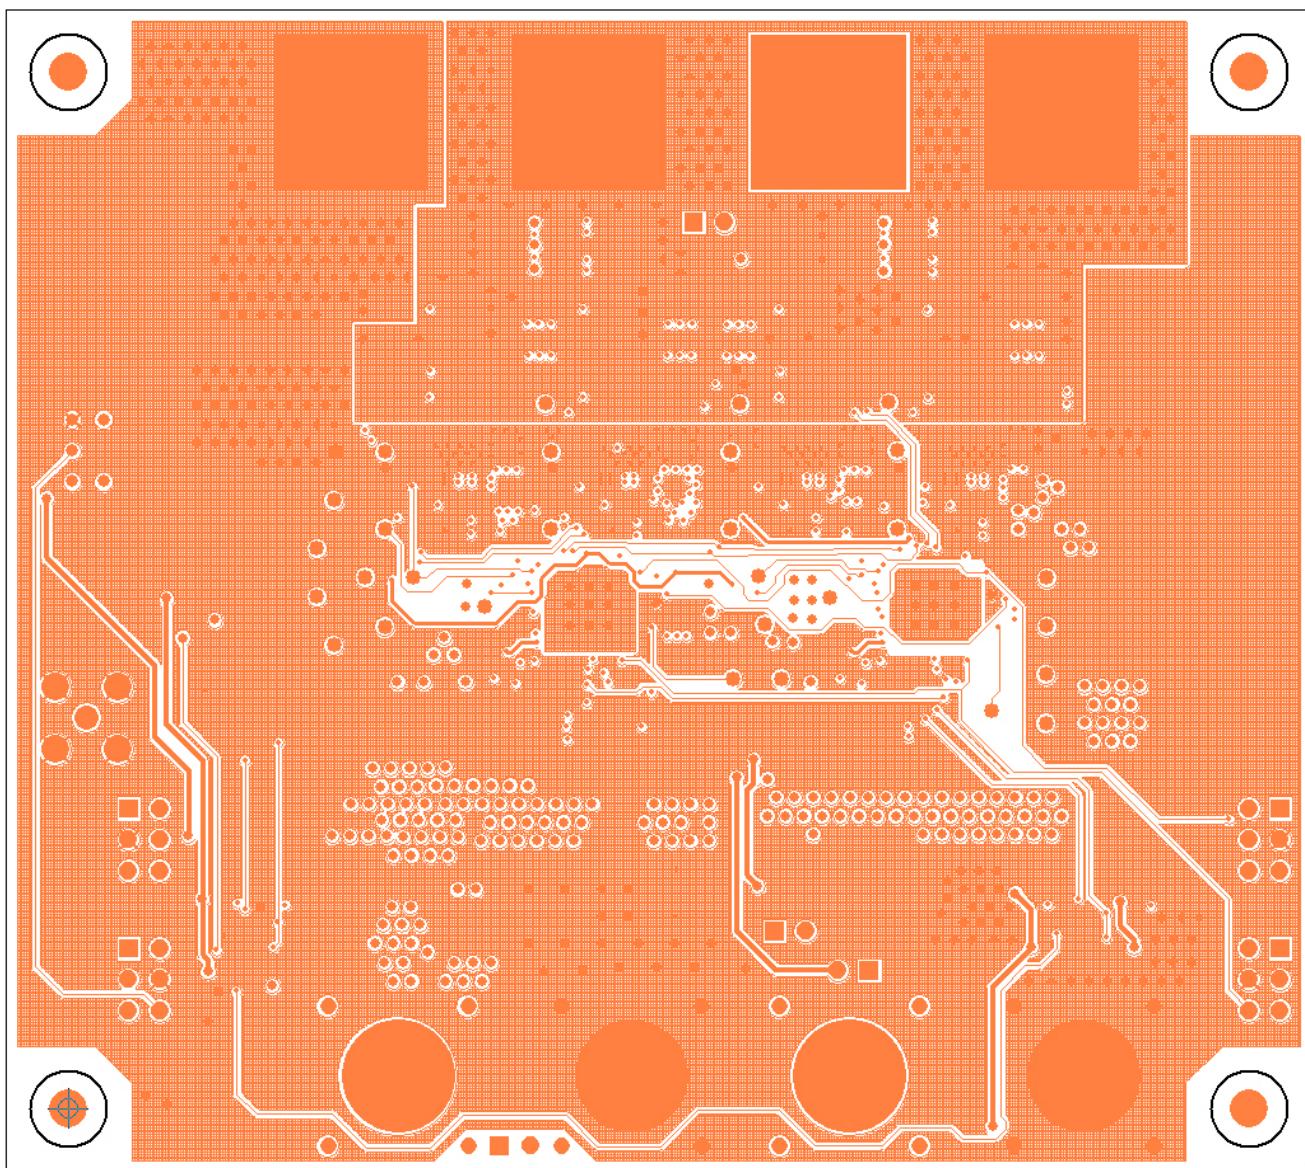


**FIGURE 19. INNER 4**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

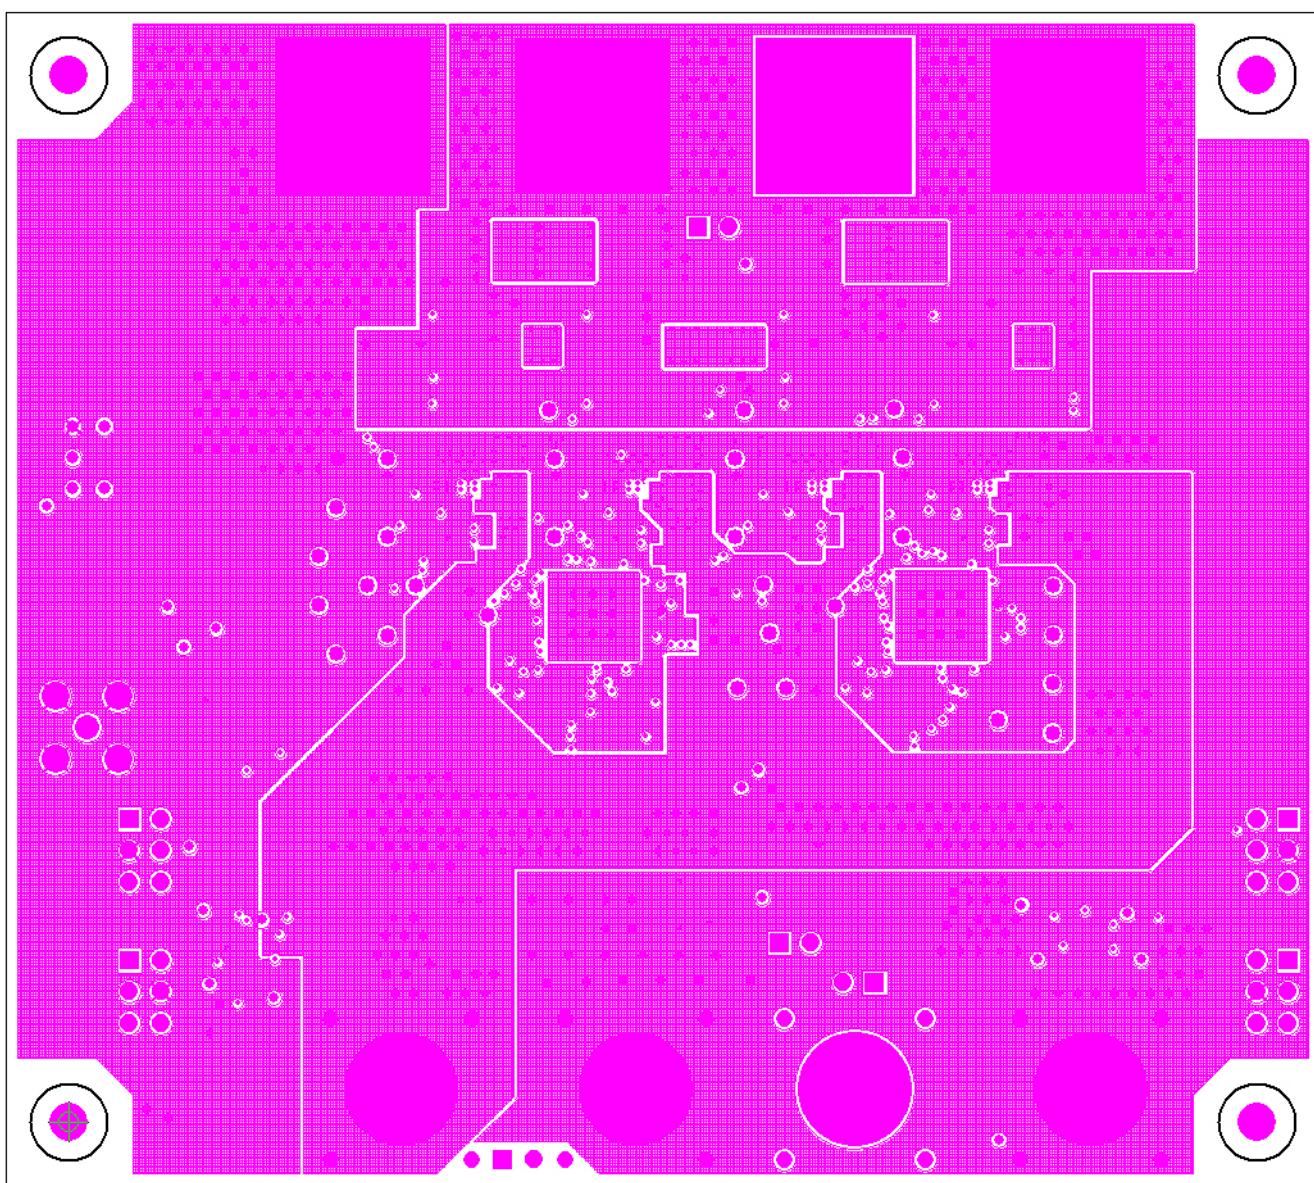


**FIGURE 20. INNER 5**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

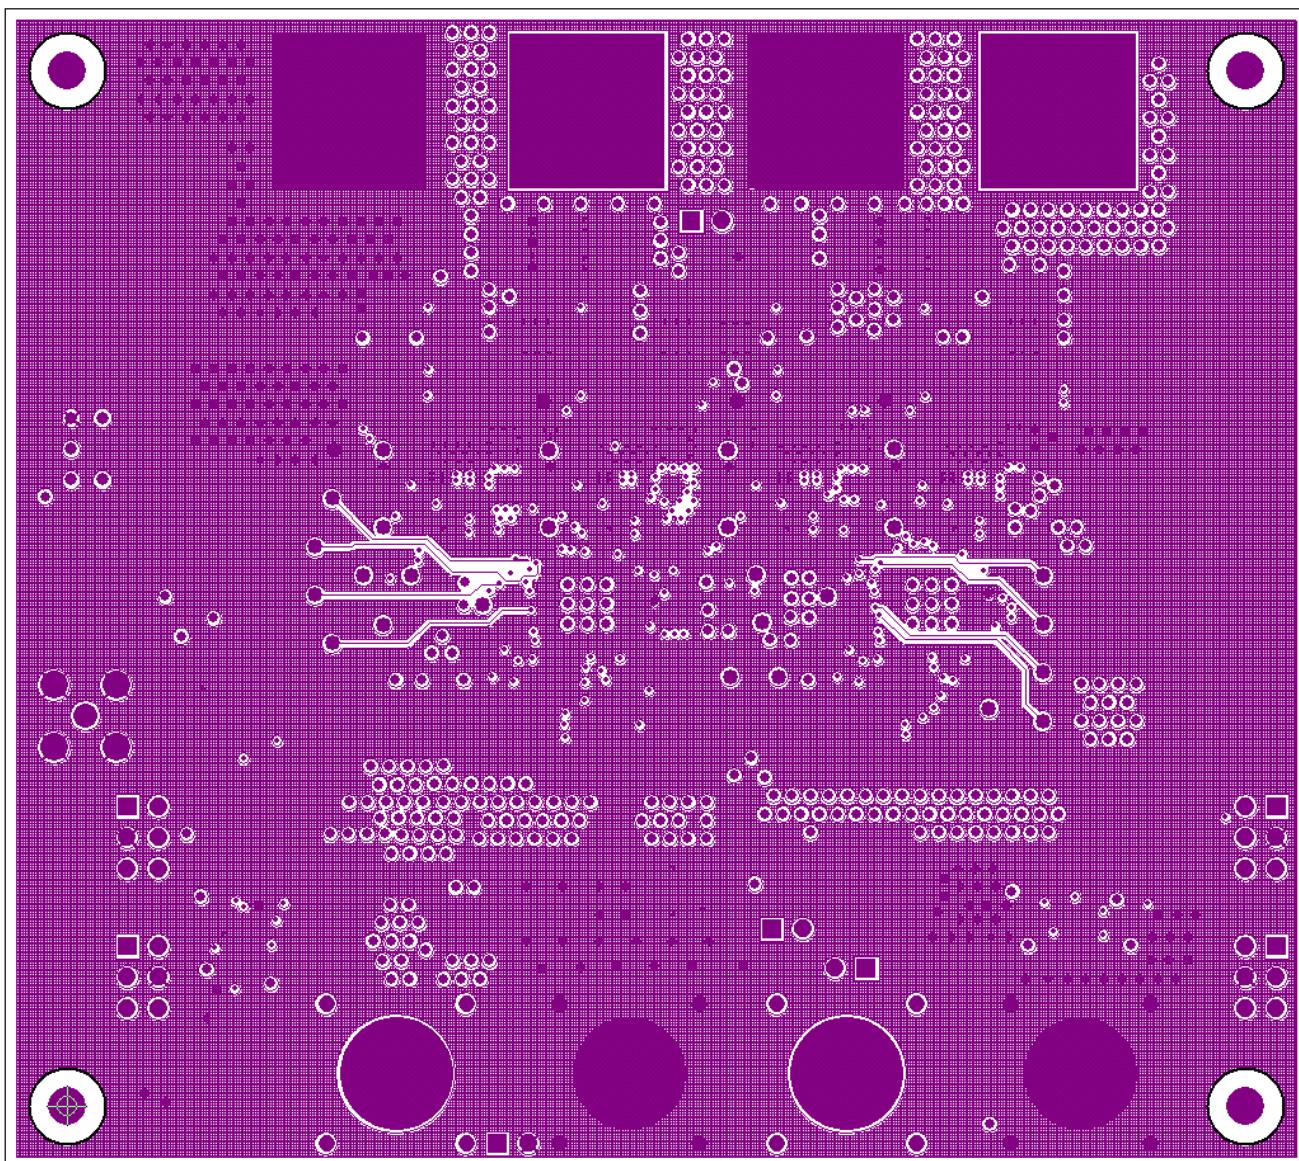

**FIGURE 21. INNER 6**

**ZL8801-4PH-DEMO1Z Layout (Continued)**

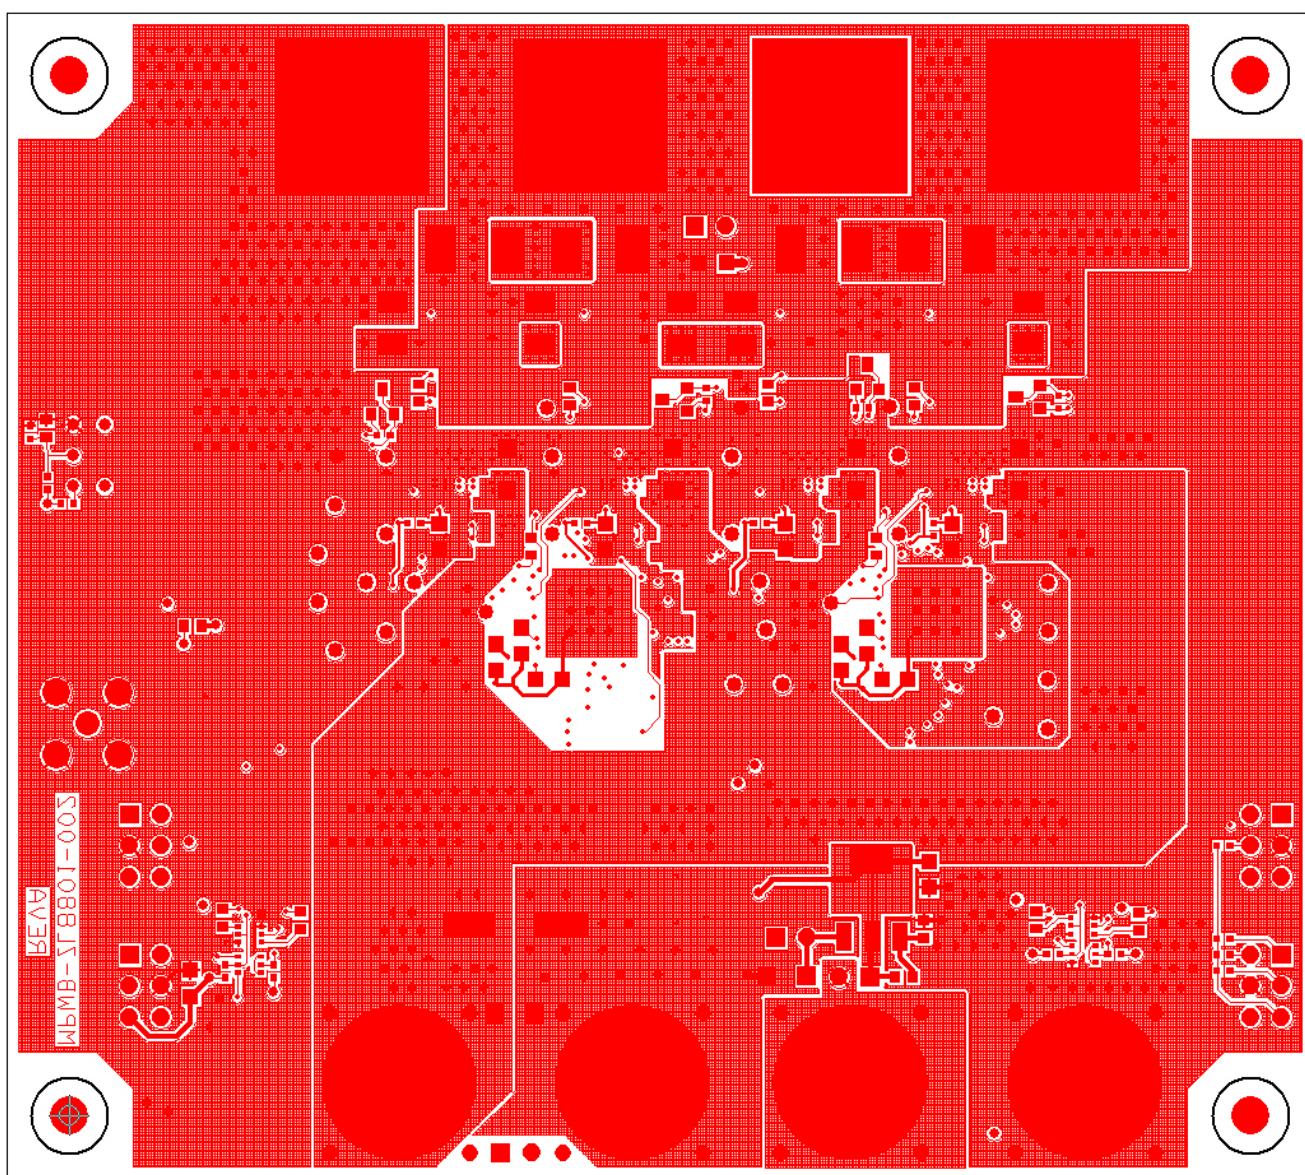

**FIGURE 22. BOTTOM ETCH**

## ZL8801-4PH-DEMO1Z Layout (Continued)

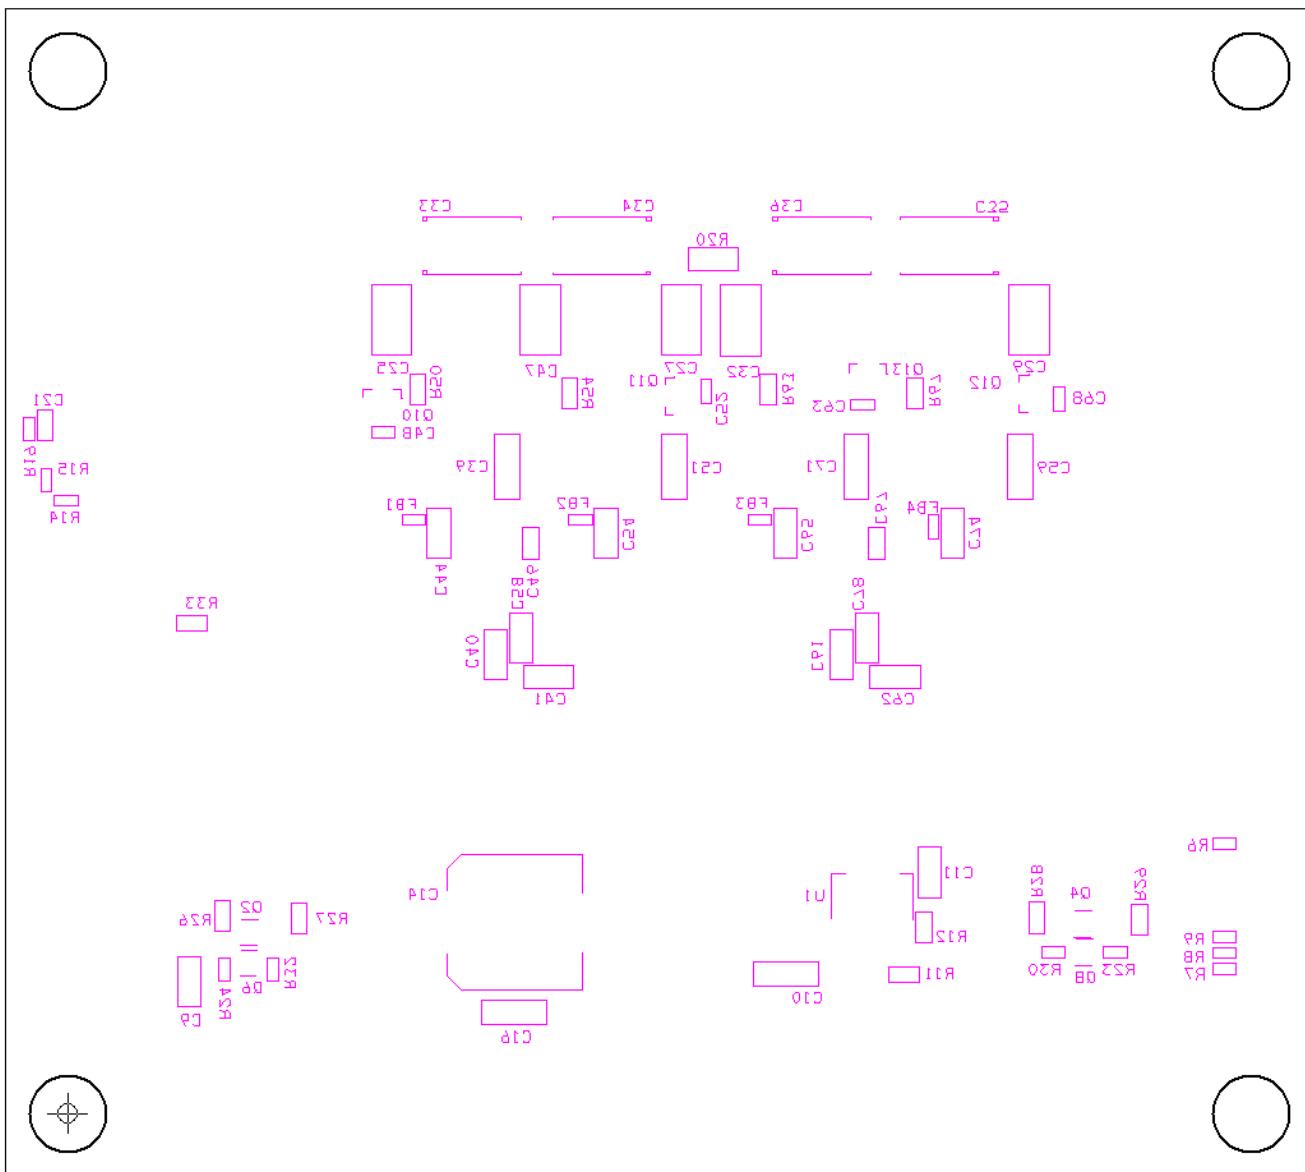


FIGURE 23. BOTTOM SILKSCREEN

Intersil Corporation reserves the right to make changes in circuit design, software and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that the Application Note or Technical Brief is current before proceeding.

For information regarding Intersil Corporation and its products, see [www.intersil.com](http://www.intersil.com)